


Installation Guide Book-Double sided player


①

Fix three screws with a diameter of 10mm on the roof.
Fix the host box to the screw and adjust the screws so that the host box is level.

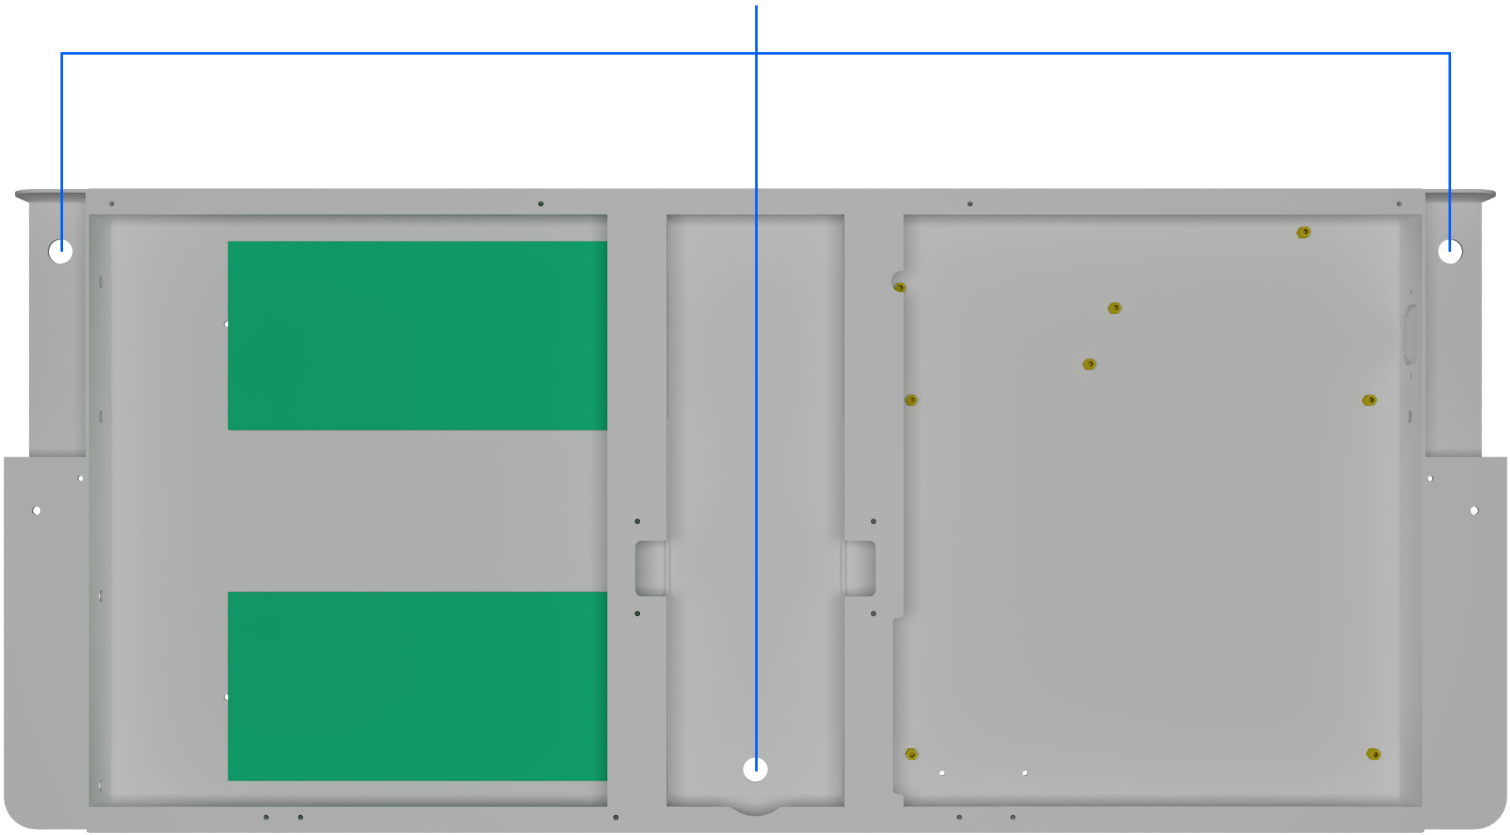


②


Take the main display screen out of the packing box carefully and install the hanging flat tube.Pass the wire through the flat tube.
The flat tube is inserted into the fuselage and fixed with 8 screws.

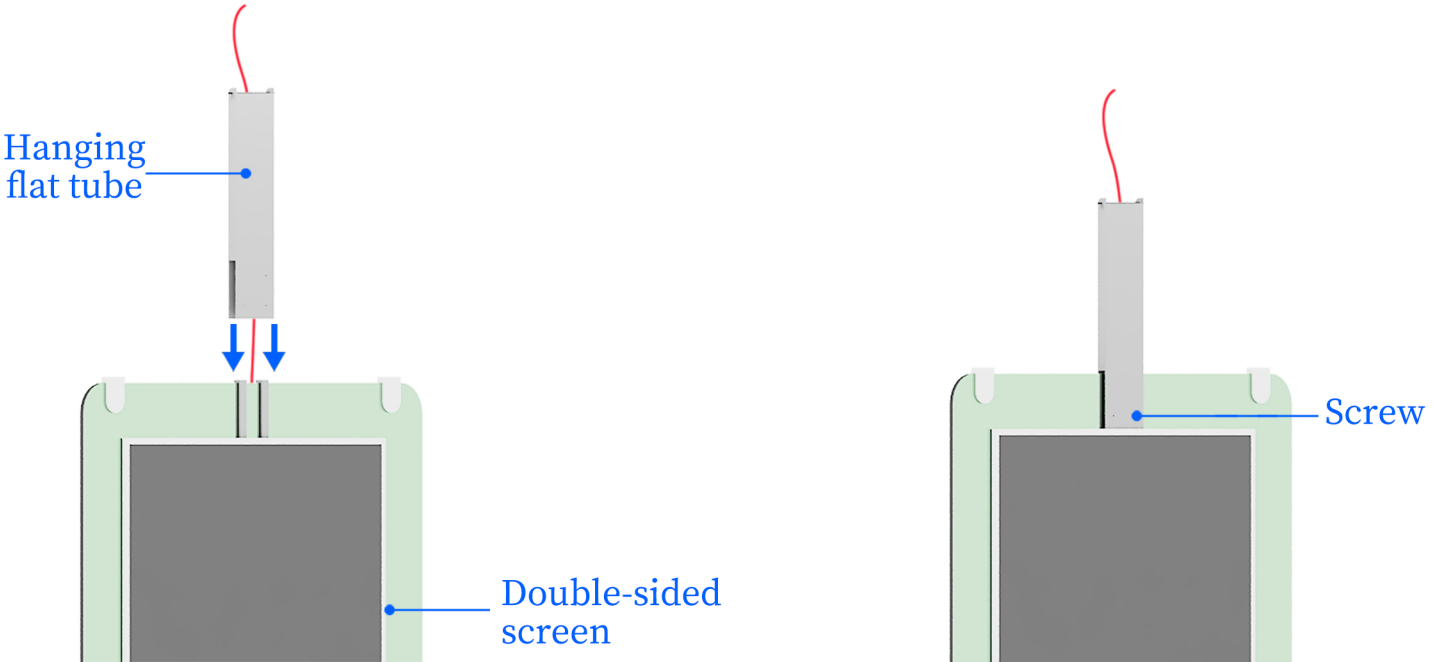


③

Attach the wire rope to the top of the fuselage.
Hang the prepared fuselage hanger onto the host box and secure the steel wire rope.

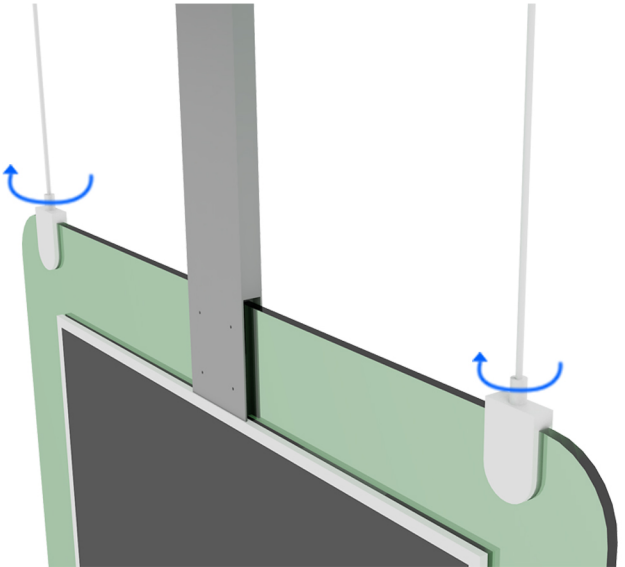

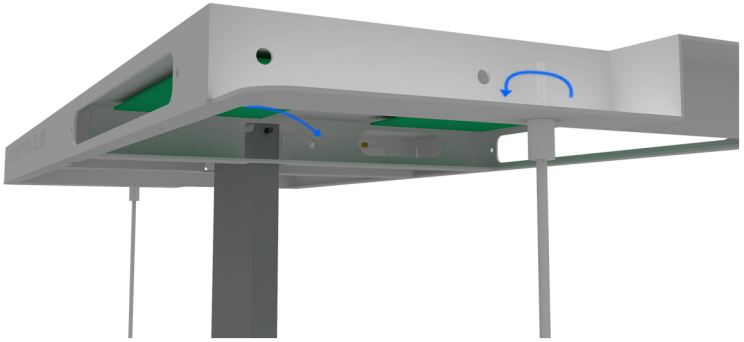

④

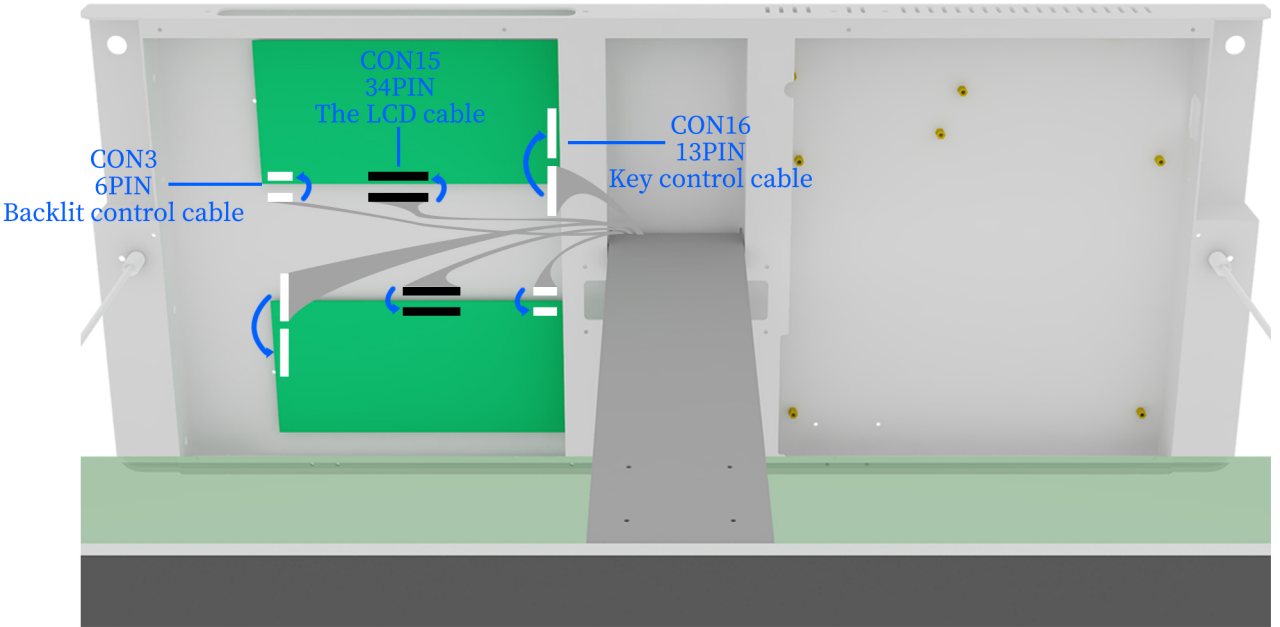
CON15
34PIN
The LCD cable
CON16
13PIN
Key control cable
CON3
6PIN
Backlit control cable

⑤

Install host box cover plate

