AI Network Camera

Web Operation Guide

ISSUE	**V 1.1**
DATE	**2022-04-11**

About This Document

Purpose

This document describes how to use the web management system, including network access, network configuration, and troubleshooting.

Intended Audience

This document is intended for:

- Technical support engineers
- Maintenance engineers
- IP camera operators

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
 NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results. NOTICE is used to address practices not related to personal injury.
 NOTE	Calls attention to important information, best practices and tips. NOTE is used to address information not related to personal injury, equipment damage, and environmental deterioration.

Special Announcement

This manual may contain misprints, technology information that is not accurate enough, and description of product function and operation that is slightly inconsistent with the actual product. The manufacturer will update this manual according to product function enhancement or changes and regularly update the software and hardware described in this manual. Updated information will be added to new versions of this manual without prior notice.

This manual is only for reference. There may be slight difference between different models. Please refer to the actual products.

Update Version

Version	Update Time	Description
V1.1	04/2022	Update some functions and pictures. Remark the special functions.

Contents

About This Document i

Contents iii

1 Quick Start 1

1.1 Login and Logout 1
1.2 Change the Password 1
1.3 Browse Real-Time Videos 3
1.4 Main Page Layout 9
1.5 AI Interface (Only for Some Models) 10
1.6 Playback 11
1.7 Personnel Count (Only for Some Models) 13

2 Sensor Setting 15

2.1 Control and Configure the PTZ (Only for Some Models) 15
2.2 Sensor Setting 21
2.2.1 Access the Sensor Setting Interface 21
2.2.2 Mode 22
2.2.3 Image Setting 23
2.2.4 Scene Mode 24
2.2.5 Exposure 26
2.2.6 WB Setting 28
2.2.7 Daynight 30
2.2.8 Noise Reduction 35
2.2.9 Enhance Image 37
2.2.10 Zoom Focus (Supplied for some model) 39

3 Configure the Device 42

3.1 Device Information 42
3.2 Video and Audio Stream 44
3.3 ROI Parameter 48
3.4 Snapshot 50
3.5 Local Network 51
3.6 Device Port 53
3.7 Date and Time 55
3.8 Camera 58
3.9 OSD 59
3.10 Microphone (Only for Some Models) 62
3.11 Audio Output (Only for Some Models) 63
3.12 CVBS Function (Suppled for some models) 64
3.13 System Service 64
3.14 Video Denoise (Only for Some Models) 65
3.15 Software Licenses 66

4 Configure External Devices 67

4.1 External PTZ Parameters(Only for Some Models) 67

5 Configure Intelligent Analysis 69
5.1 Perimeter 69
5.2 Single Virtual Fence 72
5.3 Double Virtual Fences 75
5.4 Multiple Loiter 78
5.5 Converse 81
5.6 Personnel Count (Only for Some Models) 84
6 Configure the Alarm Function 88
6.1 Alarm Output (Only for Some Models) 88
6.2 Disk Alarm 90
6.3 Network Alarm 90
6.4 Day Night Switch Alarm 91
6.5 I/O Alarm Linkage (Only for Some Models) 93
6.6 Motion Detection Alarm Linkage 95
6.7 Push Message 97
6.8 Audio Abnormal Detection 98
6.9 Sound Alarm Output (Only for Some Models) 100
6.10 Flashlight Alarm Output (Only for Some Models) 100
7 AI Multiobject 102
7.1 AI Configuration 102
8 Configure the Recording Function 104
8.1 Record Policy 104
8.2 Record Directory 105
8.2.2 Configure the SD Card 107
9 Configure the Privacy Mask Function 109
10 Configure the Network Service 111
10.1 802.1x 111
10.2 DDNS 111
10.3 PPPoE 113
10.4 Port Mapping 114
10.5 SMTP 116
10.6 FTP 117
10.7 IP Filter 119
10.8 CGI Alarm Service Center 121
10.9 SNMP 123
10.10 QOS 126
10.11 Platform Access 127
11 Privilege Manager 129
11.1 Configure a User 129
12 Configure Protocol Parameters 132
12.1 Protocol Information 132
12.2 Security Authentication 133

12.3 CMS Configuration 133
12.4 Multicast Parameters 134
13 Query Device Logs 137
13.1 Query Operation Logs 137
13.2 Query Alarm Logs 138
13.3 Collect All Logs 140
14 Maintain the Device 141
14.1 Restart a Device 141
14.2 Auto Reboot 142
14.3 Update the Software Package 142
14.4 Restore Device to Factory Settings 143
14.5 Export / Inport Configuration 143
15 Local Configuration 145
16 Troubleshooting 146
A Acronyms and Abbreviations 148

1 Quick Start

1.1 Login and Logout

CAUTION


Please access web interface through Internet Explorer 8 or above; Otherwise, some functions may be unavailable.

Login

Step 1 Open Internet Explorer, enter the IP address of the IP camera (default value: 192.168.0.120) in the address box, and press **Enter**.

The login page is displayed, as shown in Figure 1-1.

Figure 1-1 Login page

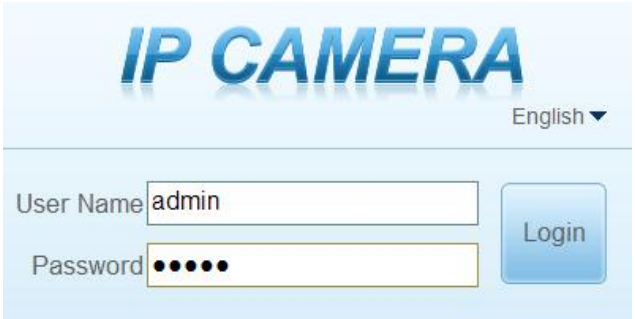

Step 2 Enter the user name and password.

NOTE

- The default user name is **admin**. The default password is **admin**.
- Please change the password to ensure system security at the first login.
- It is advised to restarted the device three minutes later after modifying password
- Switch language as needed on login page.

Step 3 Click Login to enter the interface.

The main page is displayed.

----End

Logout


Click  in the upper right to return to login page.

1.2 Change the Password

Description


For the first login, the change default password page is as shown in Figure 1-2.

Figure 1-2 Change the default password page

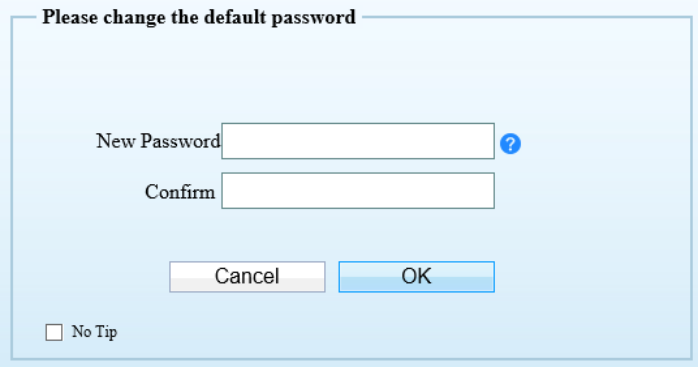

Or click  to change the password to login the system, as show in Figure 1-3.

Figure 1-3 Change password dialog box

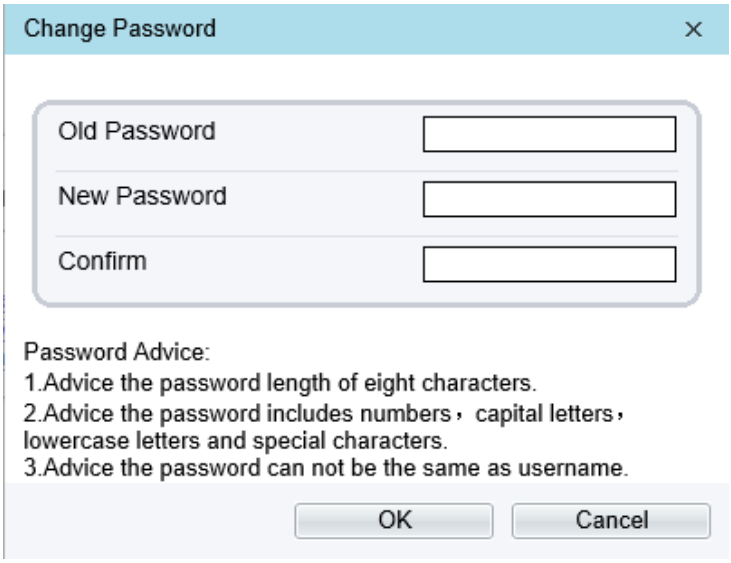

Procedure

Step 1 Input the old password, new password, and confirmation password.

Step 2 Click **OK**.

If the message "Change own password success" pops up, the password is successfully changed. If the password fails to be changed, the password advice is displayed. (For example, the new password length couldn’t be less than eight.).

It is advised to restarted the device three minutes later after modifying password.

Step 3 Click **OK**.

The login page is displayed.

1.3 Browse Real-Time Videos

You can browse real-time videos in the web management system.


Preparation

To ensure that real-time videos can be played normally, you must perform the following operations when you log into to the web management system for the first time:

Step 1 Open Internet Explorer. Choose Tools > Internet Options > Security > Trusted sites > Sites.


In the displayed dialog box, click **Add**, as shown in Figure 1-4.

Figure 1-4 Adding a trusted site

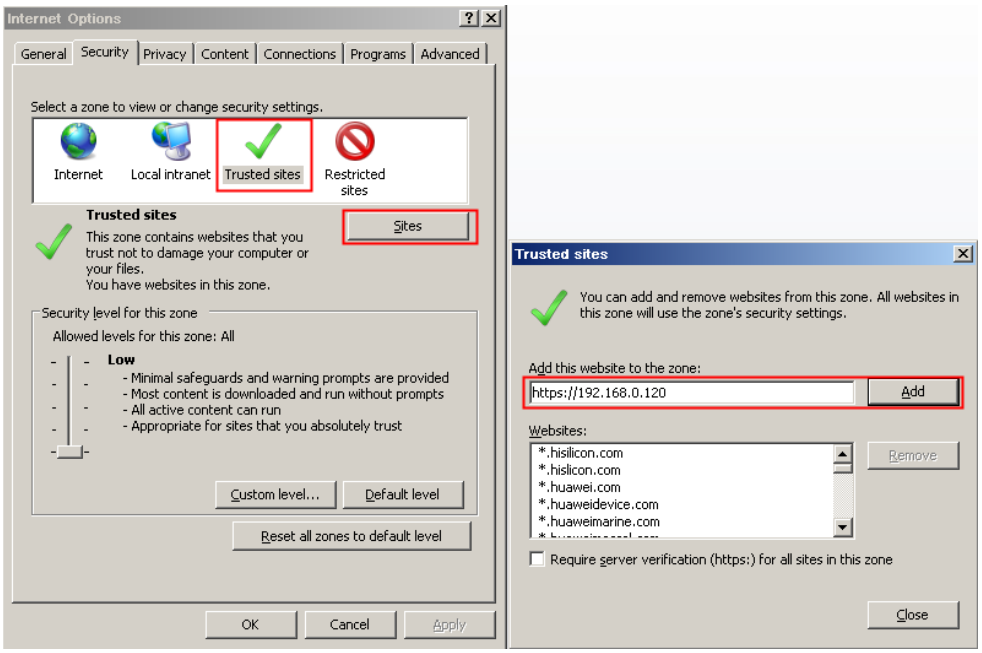

Step 2 In Internet Explorer, choose **Tools > Internet Options > Security > Customer level**, and set Download unsigned **ActiveX controls** and Initialize and **script ActiveX controls** not marked as safe for scripting under ActiveX controls and plug-ins to Enable, as shown in Figure 1-5.

Figure 1-5 Configure ActiveX controls and plug-ins

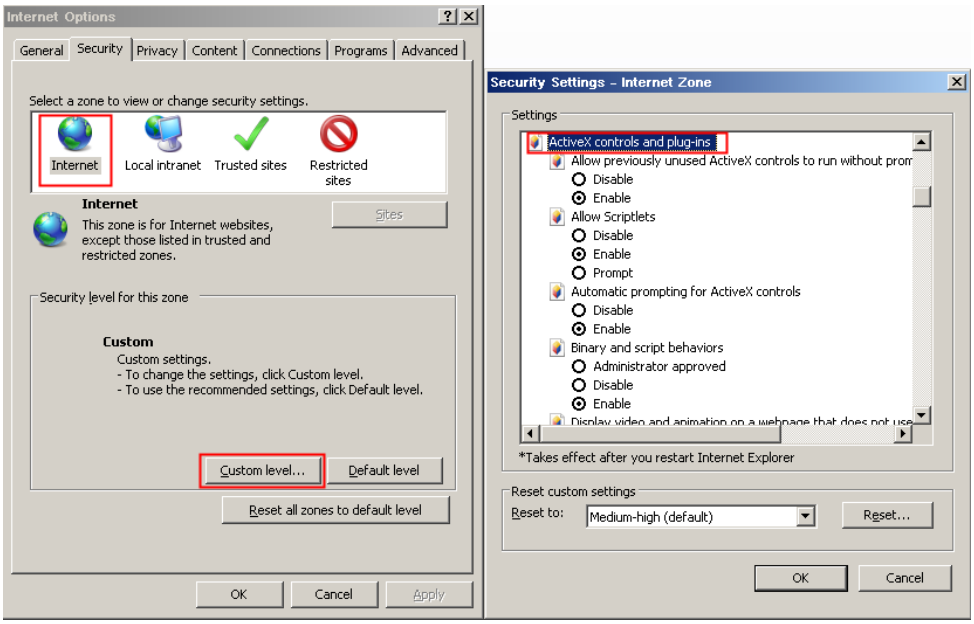

Step 3 Download and install the player control as prompted.

NOTE


If the repair tips displayed when installing the control , please ignore the prompt, and continue the installation, the login page is displayed when the control is loaded.

----End

Select the play mode

You can select VLC player to play the video, or select the plugin to play the video as shown in Figure 1-4 when you login to the web management system for the first time.


Figure 1-6 Download the plugin page

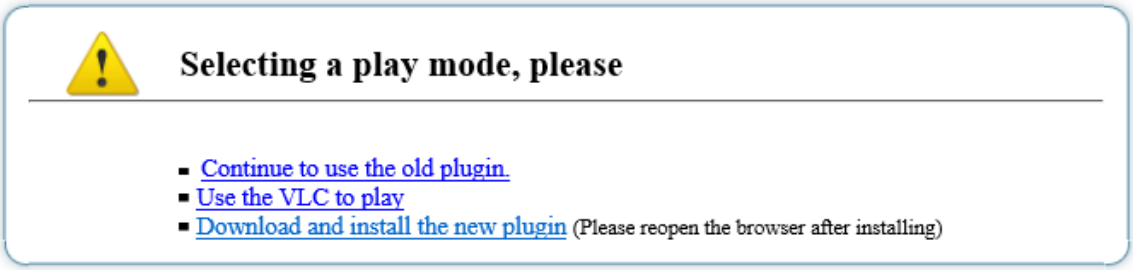

If plugin is selected, please install player control at first.


Step 1 Click " download and install the new plugin", download the plugin as shown in Figure 1-7.

Figure 1-7 Run the plugin

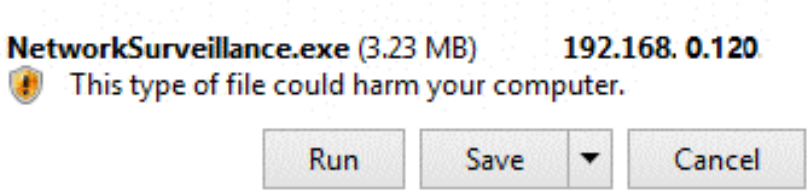


Step 2 Click ”Run”, select destination location as shown in Figure 1-8.

Figure 1-8 Select destination location

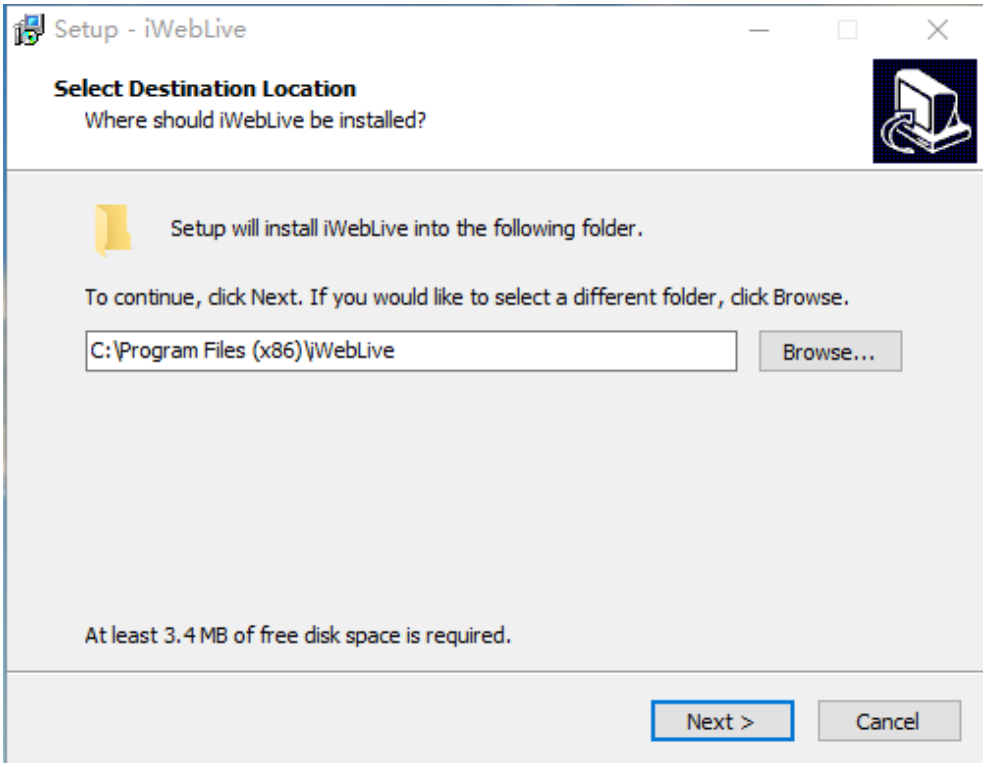


Step 3 Click “Next”, ready to install the plugin, as shown in Figure 1-9.

Figure 1-9 Ready to install

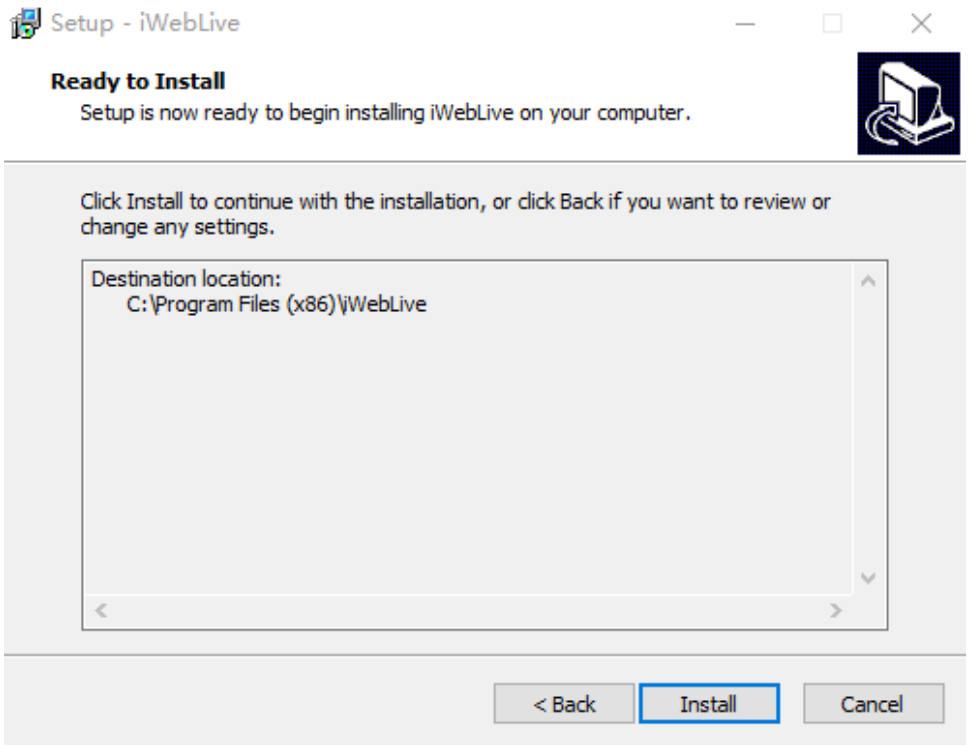


Step 4 Click “Install” to install the plugin, as shown in Figure 1-10.

Figure 1-10 Installing

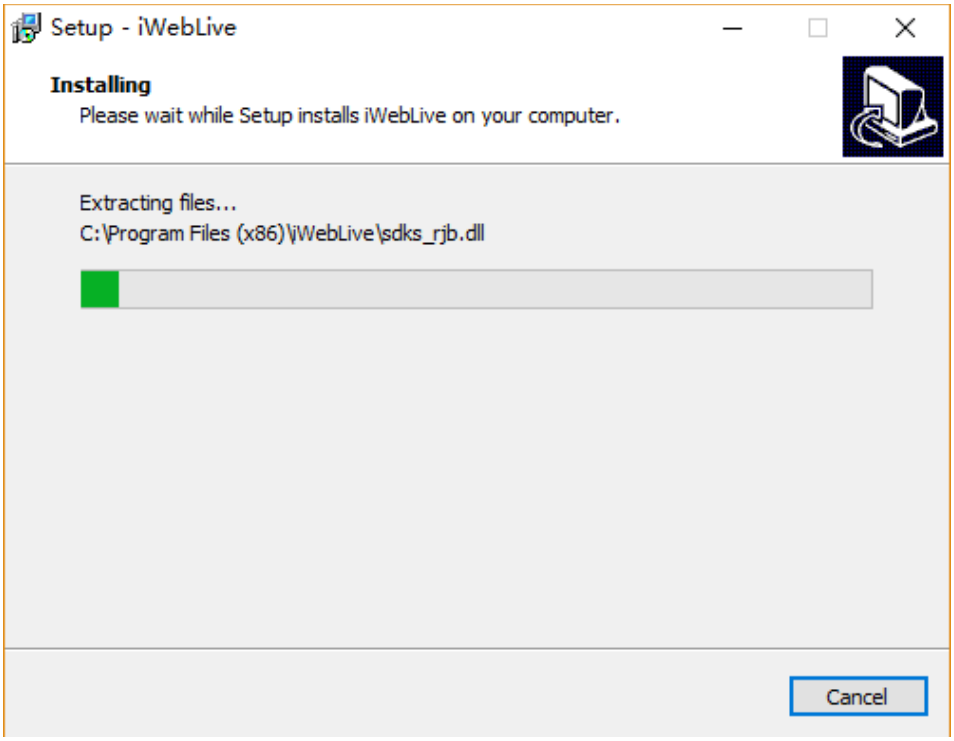

Step 5 Click “Finish” , complete complete plugin installation, as shown in Figure 1-11.

Figure 1-11 Complete to install the plugin

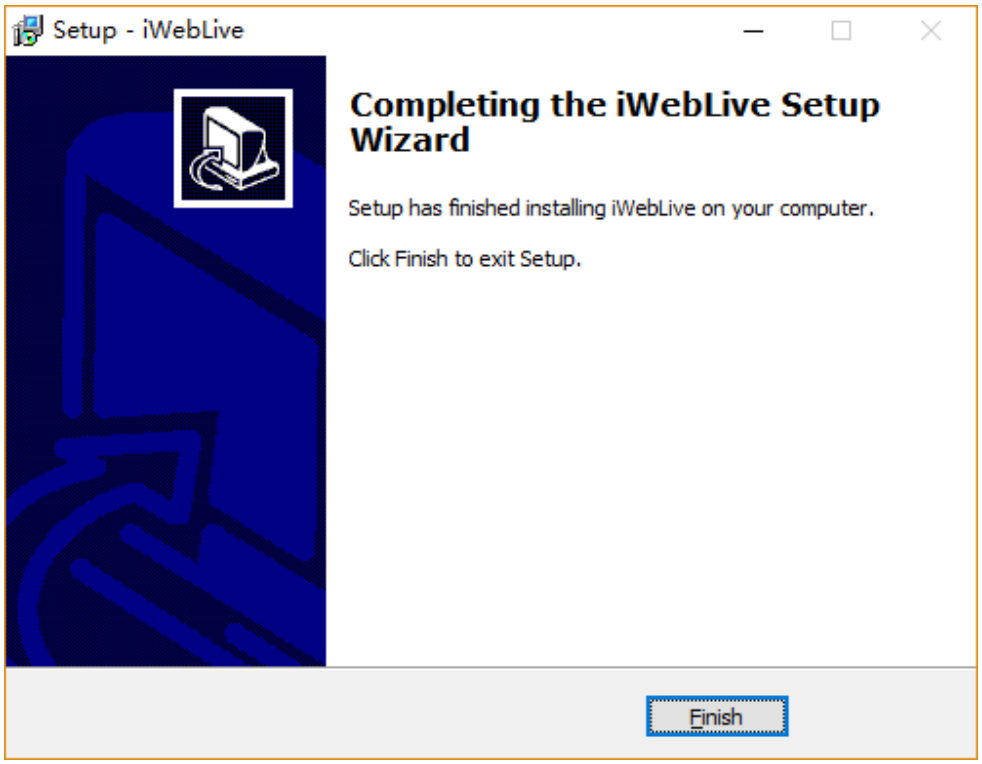

Step 6 Reopen the browser after installing.

NOTE


- If the repair tips displayed when installing the control , please ignore the prompt, and continue the installation.
- During installing the plugin, the browser should be closed.

----End

Description

To browse real-time videos, click **Live Video**. The **Live Video** page is displayed, as shown in Figure 1-12.

Figure 1-12 Live Video page

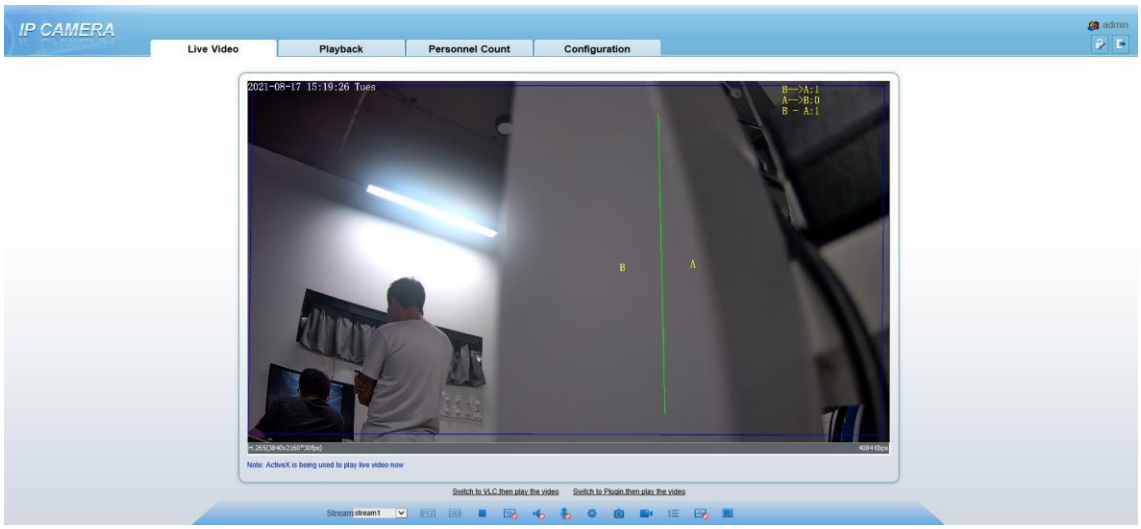

On the **Live Video** page, you can perform the following operations:


- Click  to stop playing a video.
- Click  to play a video.
- Double-click in the video area to enter the full-screen mode, and double-click again to exit.
- Configure the PTZ. For details, see Configure the PTZ.
- Control the PTZ. For details, see Controlling the PTZ.
- Switch between three modes. For details about how to configure streams, see 3.2 Video and Audio Stream .
- Click  to switch the video to smooth mode.
- Click  to snapshot and save the photos.
- Click  to enable the local record.
- Configure the sensor.

  You can right-click in the video area. A shortcut menu is displayed and allows you to enter the full-screen mode, set sensor parameters, zoom in or out, and return to the default view.

  To set sensor parameters, click  to open the **Sensor Setting** page. On the **Sensor Setting** page, you can adjust the image, mirror, camera mode, focus setting, Iris setting, white balance, and noise filter as prompted.

  Click  to show AI multi object live video, as shown in Figure 1-13.

Figure 1-13 AI multi object live video

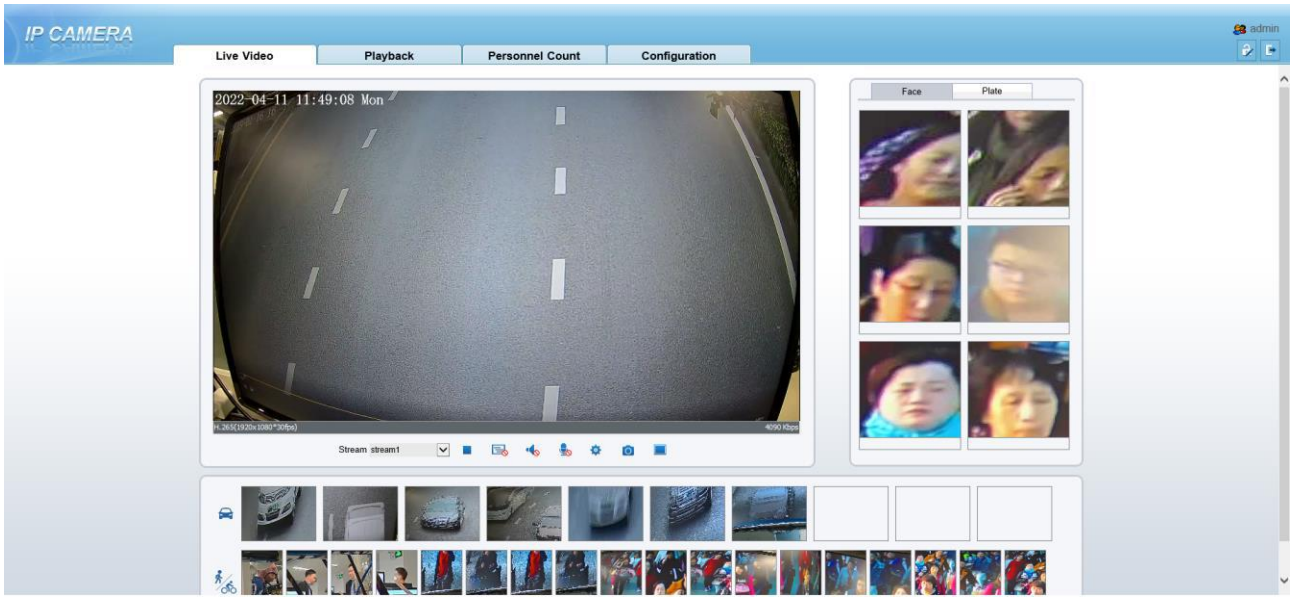

Click “AI” icon to enter AI multiobject interface, as shown in Figure 1-13. The upper right of interface can switch face snapshot and license plate snapshot.

NOTE

- AI interface is supplied for some models.

1.4 Main Page Layout

On the main page, you can view real-time videos, receive alarm and fault notifications, set parameters, change the password, and log out of the system. Figure 1-14 shows the main page layout. Table 1-1 describes the elements on the main page.

Figure 1-14 Main page layout



Table 1-1 Elements on the main page

No.	Element	Description
1	Real-time video area	Real-time videos are played in this area. You can also set sensor parameters, right click on the real-time video display.
2	Playback	You can query the playback videos in this area. NOTE Only when the SD card or NAS has videos that you can query the playback videos.
3	Personnel count	Set the query condition to query the personnel count, the statistical can be shown in different types, such as line chart, histogram, list, for more detail information please refer to chapter 1.7 . Only for Some Models.
4	Device configuration	You can choose a menu to set device parameters, including the device information, audio and video streams, alarm setting, privacy mask function and so on.
5	Change password	You can click to change the password.
6	Sign Out	You can click to return to the login page.
7	Stream	Choose stream mode from drop-list. Set the parameters in "**Configuration > Streams > Basic Streams**".

No.	Element	Description
8	PTZ	Only used for dome cameras, set parameters. Only for Some Models.
9	3D	Only used for dome cameras, locate the exact location on the live video screen. Only for Some Models.
10	Pause/play	Pause the live video or play the video.
11	Live/smooth	Switch the resolution of live video automatically.
12	Audio	Open/close the audio.
13	Microphone	Open/close the microphone.
14	Sensor	Set the sensor parameters.
15	Snapshot	Click the icon to snapshot the video and save the images to the specified location.
16	Local record	Record the video and save the file to the specified location.
17	Mode	Only used for fisheye camera, click the icon to choose mode to play video.
18	Intelligent analysis	Open/close the intelligent analysis. Open the intelligent, choose the stream to stream 2, click to open the intelligent analysis, it will show target information and video stream draw line after you have turned on the function in IVS settings.
19	AI live video	Click the icon to switch to AI live video, you can view the snapshots of AI multi object, there are face, plate, car, human body, riding, as shown in Figure 1-15. Only for Some Models.

NOTE


- When the device accepts an alarm signal, the alarm icon will display within 10s in the web management system. The alarm icon is displayed. You can click to view the alarm information.
- When the device is abnormal, the fault icon is displayed. You can click to view the information.

1.5 AI Interface (Only for Some Models)

The AI cameras can capture specific targets, such as human face, license plate, ride bicycle, vehicle, and so on. Click at live video interface, it will show AI interface as shown in Figure 1-15.



Figure 1-15 AI multi object interface

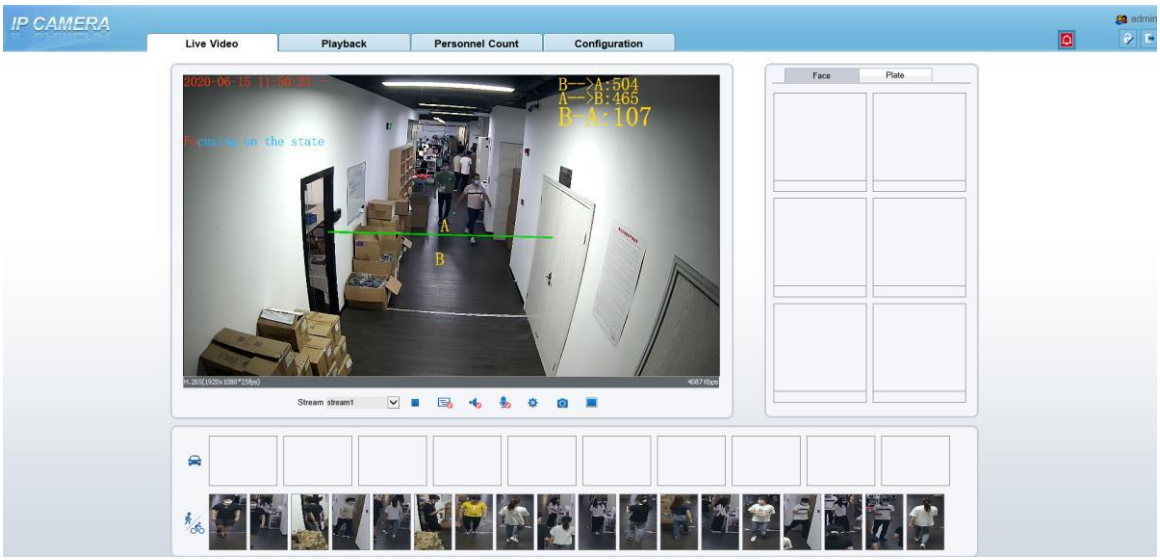

The face frame will show the snapshot of human face.

The plate frame will show the snapshot of license plate.


NOTE

The AI function is only available for some cameras.


1.6 Playback

Click “Playback” at IE web interface, if user install SD card, and there are video in SD card, click “Playback” and the playback video will show as in Figure 1-16.

Figure 1-16 Playback interface

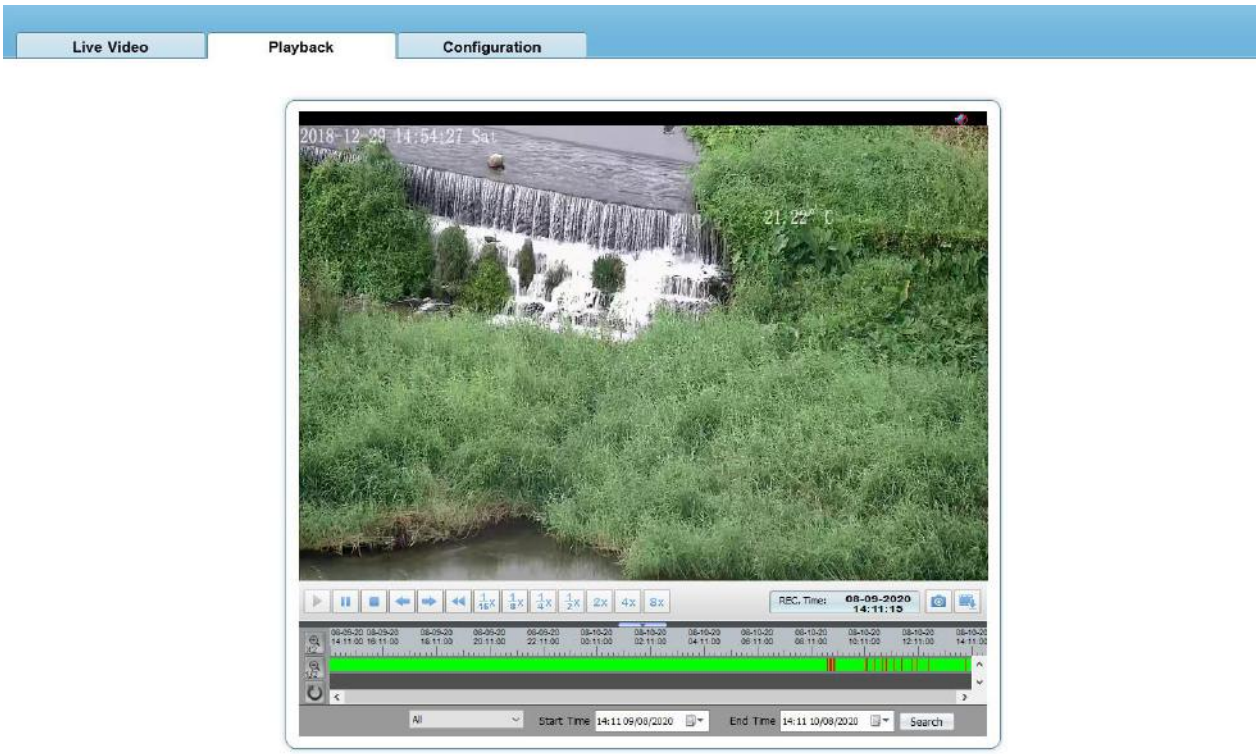

: Play, click “speaker” to switch sound on or off. The play time is shown




and the blue line is pointing on timeline.

: Pause.

: Stop.

: Frame back / frame play.




: Fast forward, user can choose the different speed to play.


: Snapshot, click the icon to snapshot current interface


: Backup, use can view the status of backup, as shown in Figure 1-17.

Figure 1-17 Record backup

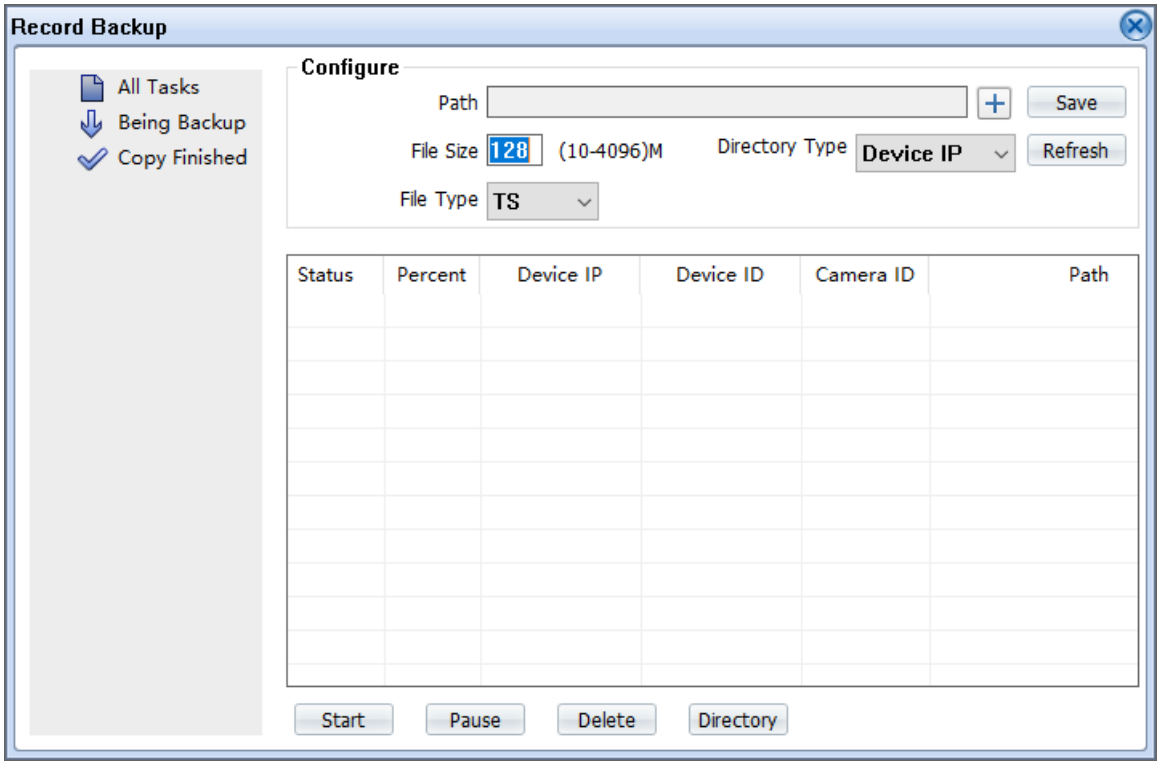

Drag the mouse to choose backup time, right-click to save, as shown in the figure.

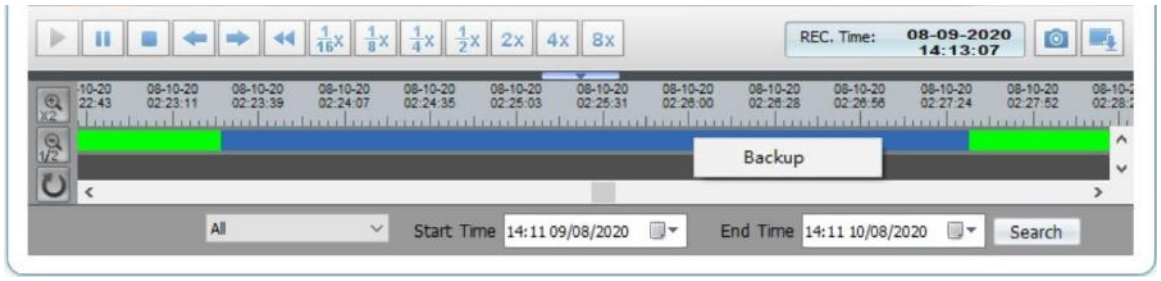

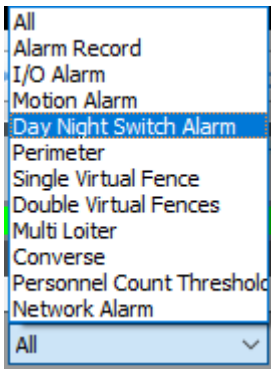

Choose the type of alarm, set the start time and end time to search alarm record quickly.

1.7 Personnel Count (Only for Some Models)

At **personnel count** interface, you can view the personnel count throughout setting query condition (choose the detail time at date's pop up window).

There are three modes to show the data, such as line chart, histogram, and list, as shown in Figure 1-18

Figure 1-18 Personnel count interface



Click “Download” to download the query result.

Choose the mode of showing result, such as line chart, histogram and list.

Click “Query” to query the data of personnel count.

The data result can be saved to local folder.

----End

2 Sensor Setting

2.1 Control and Configure the PTZ (Only for Some Models)

description


All PTZ functions are only available for High Speed Network Dome and device connected to an external PTZ. The focus and zoom action can be used for motorized cameras

Controlling the PTZ

When browsing real-time videos shot by a dome camera or a camera connected to an external PTZ, you can control the PTZ to view videos shot in different directions.

Click PTZ below the **Live Video** page to open the **PTZ Control** page as shown in Figure 2-1, you can click the eight arrow keys to move the PTZ in eight directions. You can also zoom the lens and adjust the focal length.

Figure 2-1 PTZ Control area

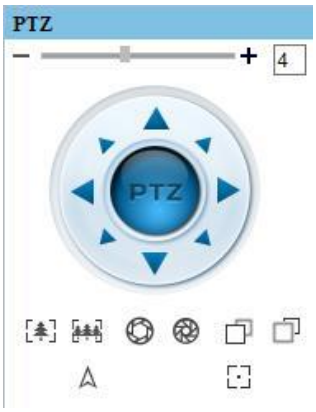


In the PTZ control area, you can perform the following operations:

- Slide the slider left or right beyond the PTZ rotation keys, you can adjust the PTZ rotation speed.
- Click the arrows on the to move the PTZ in eight directions.
- Click or to adjust the focal length.
- Click or to adjust the aperture.
- Click or to focus.
- Click to set due north direction. You can define any direction as due north as the reference point of the PTZ rotation.
- Click to enable automatic focus.

Configure the PTZ

It is available for the cameras with PTZ or connected to PTZ. **PTZ Configure** interface is as shown in Figure 2-2.

Figure 2-2 PTZ Configure area

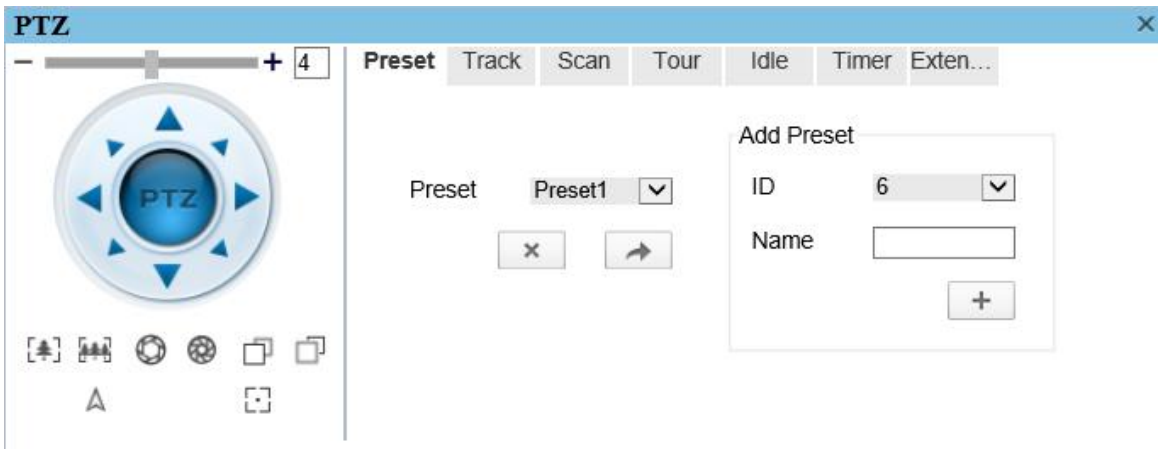

In the PTZ configure area, you can perform the following operations:

- Add, delete, and invoke preset positions.
- Add, delete, and invoke tracks.
- Add, delete, and invoke scans.
- Add, delete, and invoke tours.
- Set the idle.
- Set the timer.
- Set the extension.

  Set Light On/Off and Brush function.

  Brush is used to clean the lens. Light On/Off is used to control the infrared camera shields on and off.

NOTE

- **Brush** is available only for a camera with a brush or a camera shield.
- **Light On/Off** is available only for specific camera shields.

3D Positioning

Click 3D below the Live Video page to configure the 3D positioning function.

The 3D positioning function quickly rotates the PTZ and changes the focal length in specific scenarios. You can also change the focus by drawing rectangle frames.

NOTE

The default value of 3D Positioning is ON.

Configure and Invoke Preset Positions

You can configure preset positions and quickly rotate the camera to a preset position by invoking the preset position.

The procedure is as follows:

Step 1 Configure a preset position.

1. Set the preset ID and name.
2. Click + to finish the preset position setting.

Step 2 Invoke a preset position.

Select a preset position from the **Preset** drop-down list box to invoke the preset position.

----End

Configure and Invoke Tracks

You can record a track to allow the camera to repeatedly rotate based on the preset track.

Step 1 Configure a track.

1. Set the track ID and name.
2. Click ▶ to set the starting position of the track.
3. Use arrow keys in the **PTZ Control** area to set a required a track.
4. Click ■ to finish the track setting.

Step 2 Invoke a track.

Select a track name from the **Track** drop-down list box to invoke the track.

NOTE

A maximum of six tracks can be configured.

Configure and Invoke Scans


You can configure a starting point and end point to allow the camera to repeatedly rotate from the starting point to end point.

Step 1 Configure a scan.

1. Click **Scan**.

   The **Scan Add** page is displayed as shown in Figure 2-3.

Figure 2-3 Scan configuration

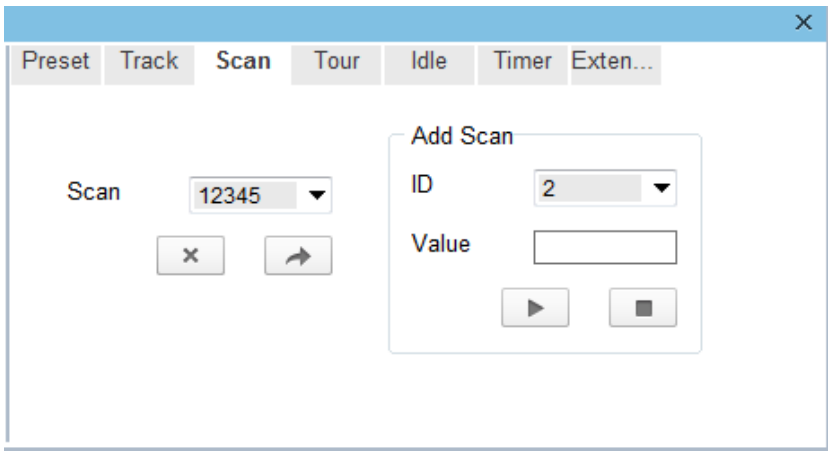

2. Set the scan ID and name.
3. Click ▶.
4. Use arrow keys in the **PTZ Control** area to set a start point and an end point.
5. Click ■ to finish the scan setting.

Step 2 Invoke a scan.

Select a scan value from the **Scan** drop-down list box to invoke the scan.

NOTE

A maximum of twelve scans can be configured.

Configure and Invoke Tours


You can configure a tour to allow the camera to repeatedly rotate based the tours. Each tour includes presets and wait time should be set.

Step 1 Configure a tour.

1. Click **Tour**.

   The **Tour Add** page is displayed as shown in Figure 2-4.

Figure 2-4 Tour configuration

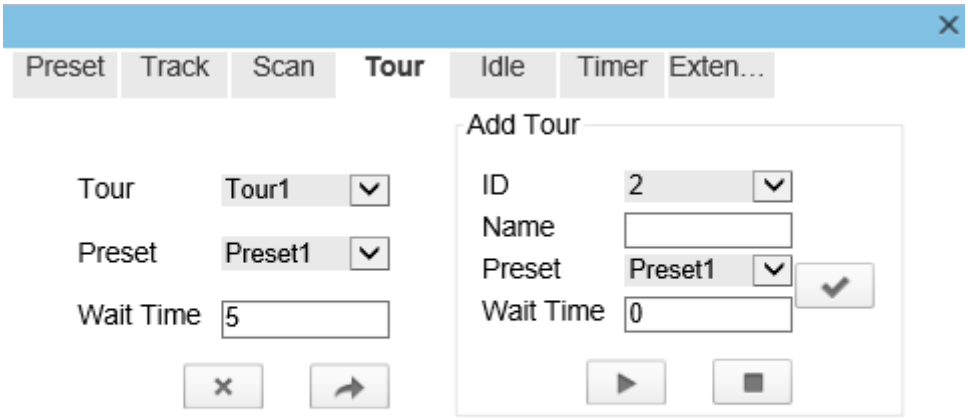

2. Set the tour ID and name.
3. Select a preset and set the wait time and click .
4. Continue to select a preset and set the wait time and click .
5. Repeat the step 3 and step 4 to add more presets.
6. Click to finish the tour setting.

Step 2 Invoke a tour.

Select a tour value from the **tour** drop-down list box to invoke the tour.

NOTE

A maximum of twelve tours can be configured.


Configure Idles

You can enable idle to allow the camera to run the preset, track, scan and tour automatically after the waiting time (1 minute ~ 240 minutes).

Step 1 Click **Idle**.

The **Idle Add** page is displayed as shown in Figure 2-5.

Figure 2-5 Idle configuration

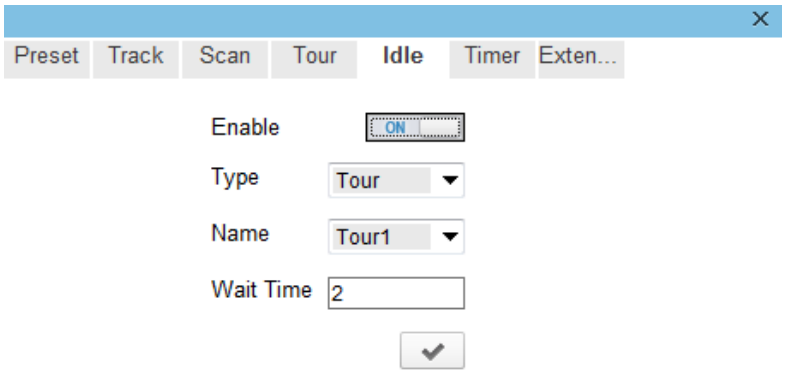

Step 2 Enable the Idle button.

Step 3 Set the idle type and name from the drop-down list box.

Step 4 Set the wait time(1 min ~240 min).

Step 5 Click  to finish the idle setting.


Configure Timer

You can set the PTZ timer to allow the camera to invoke the preset, track, scan and tour automatically in the setting time and the camera will restore to the operation and location after the end time.

Step 1 Click **Timer**.

The **Set the PTZ Timer** page is displayed and click , the **Timer** page is displayed as shown in Figure 2-6.

Figure 2-6 Timer configuration

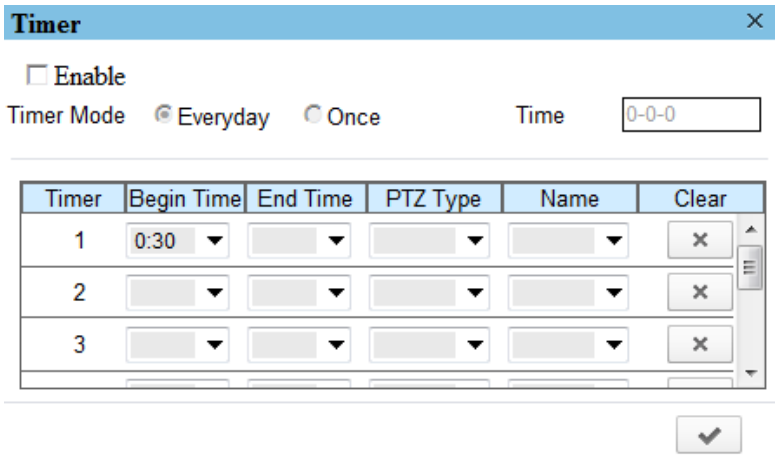

Step 2 Enable Timer.

Step 3 Set the Timer Mode. Timer mode includes Everyday and Once. You should set the time when once mode is selected.

Step 4 Choose Once, click Time to choose day from the pop-up calendar.

Step 5 Set Timers.

Select the begin time, end time, PTZ type and name from the drop-down list box.

NOTE

- A maximum of eight timers can be configured.
- Click Clear to delete the setting.


Step 6 Click to finish the timer setting.

Configure Extension

You can set light On/Off, brush function and reboot action in extension page.

Click Extension, the **Extension** page is displayed as shown in Figure 2-7.

Figure 2-7 Extension

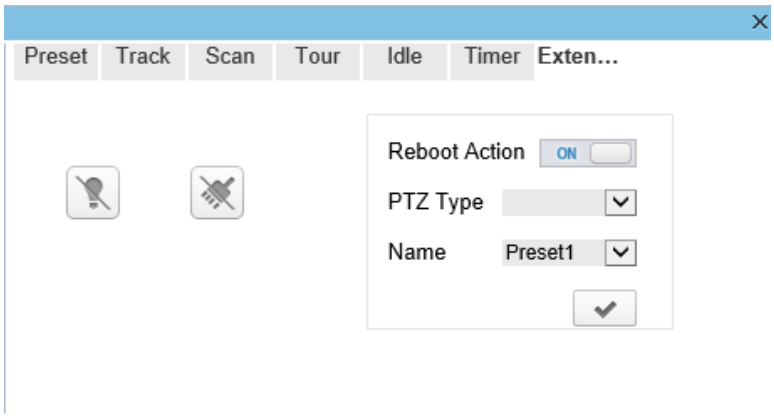

- Light function

Click to enable the light.

Light On/Off is used to control the infrared camera shields on and off.

- Brush function

Click to enable brush.

Brush is used to clean the lens.

NOTE

- **Brush** is available only to a camera with a brush or a camera shield.
- **Light On/Off** is available only to specific camera shields.
- Reboot action

The camera will perform the selected PTZ type and name when the camera reboots and the reboot action is enabling.

- Click the reboot action button to enable reboot action
- Set the PTZ Type and name from the drop-down list box.
- Click to finish the reboot setting.

----End

2.2 Sensor Setting

2.2.1 Access the Sensor Setting Interface

Operation procedure:

Step 1 On the web interface or client interface, move the cursor to the real-time video page and right-click. A shortcut menu is displayed, as shown in Figure 2-8. Or enter **Configuration > Sensor Setting** interface. Table 2-1 describes the sensor setting interface.

Figure 2-8 Sensor Setting interface

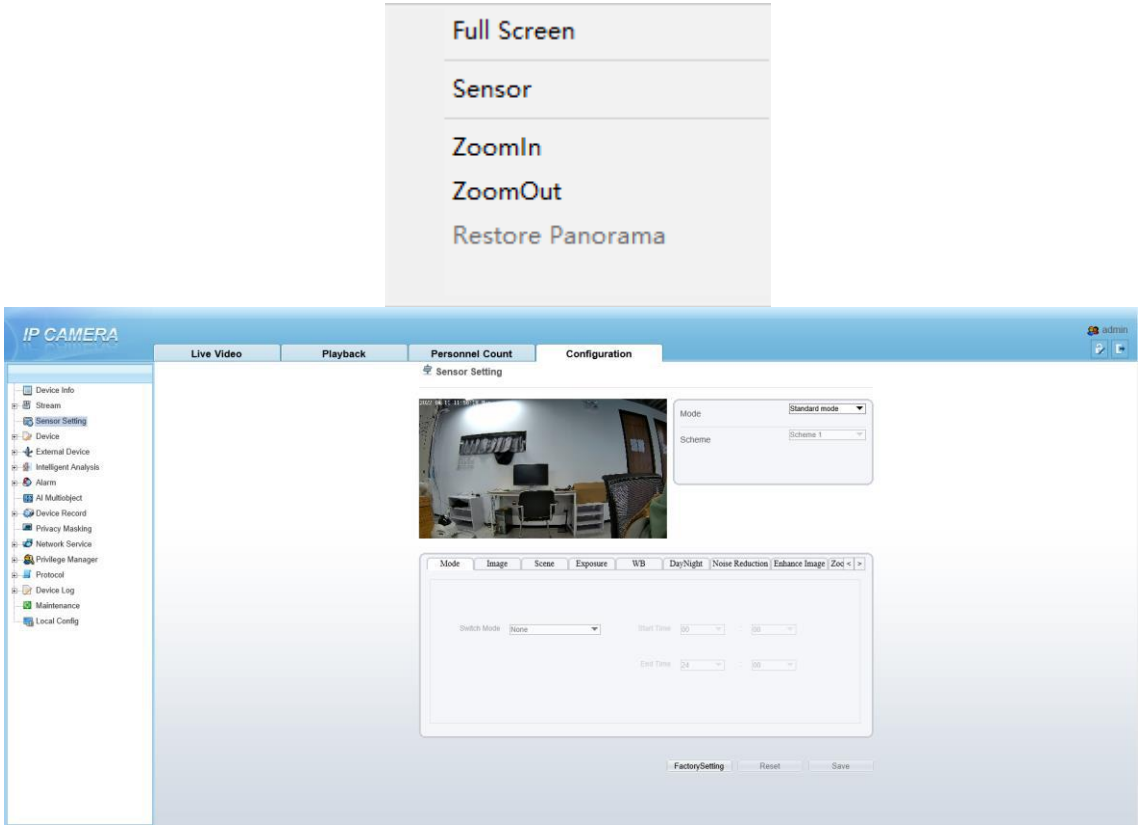


Table 2-1 Sensor parameters description

Parameter	Description
Full Screen	It enlarges and displays the image in full screen.
Sensor	It is used for configure the parameter set of front-end images.
Zoom In/Out	It zooms in/out images by electronic means. This function may also be used with the mouse wheel.
Restore Panorama	Only apply for screen is zooming, the default state is unavailable.

Step 2 Choose **Sensor Configure** and the **Sensor Setting** dialog box appears.


----End

2.2.2 Mode

Operation procedure:

Step 1 Click **Mode** tag on sensor setting interface, the Mode page is displayed, as shown in Figure 2-9.

Figure 2-9 Mode page

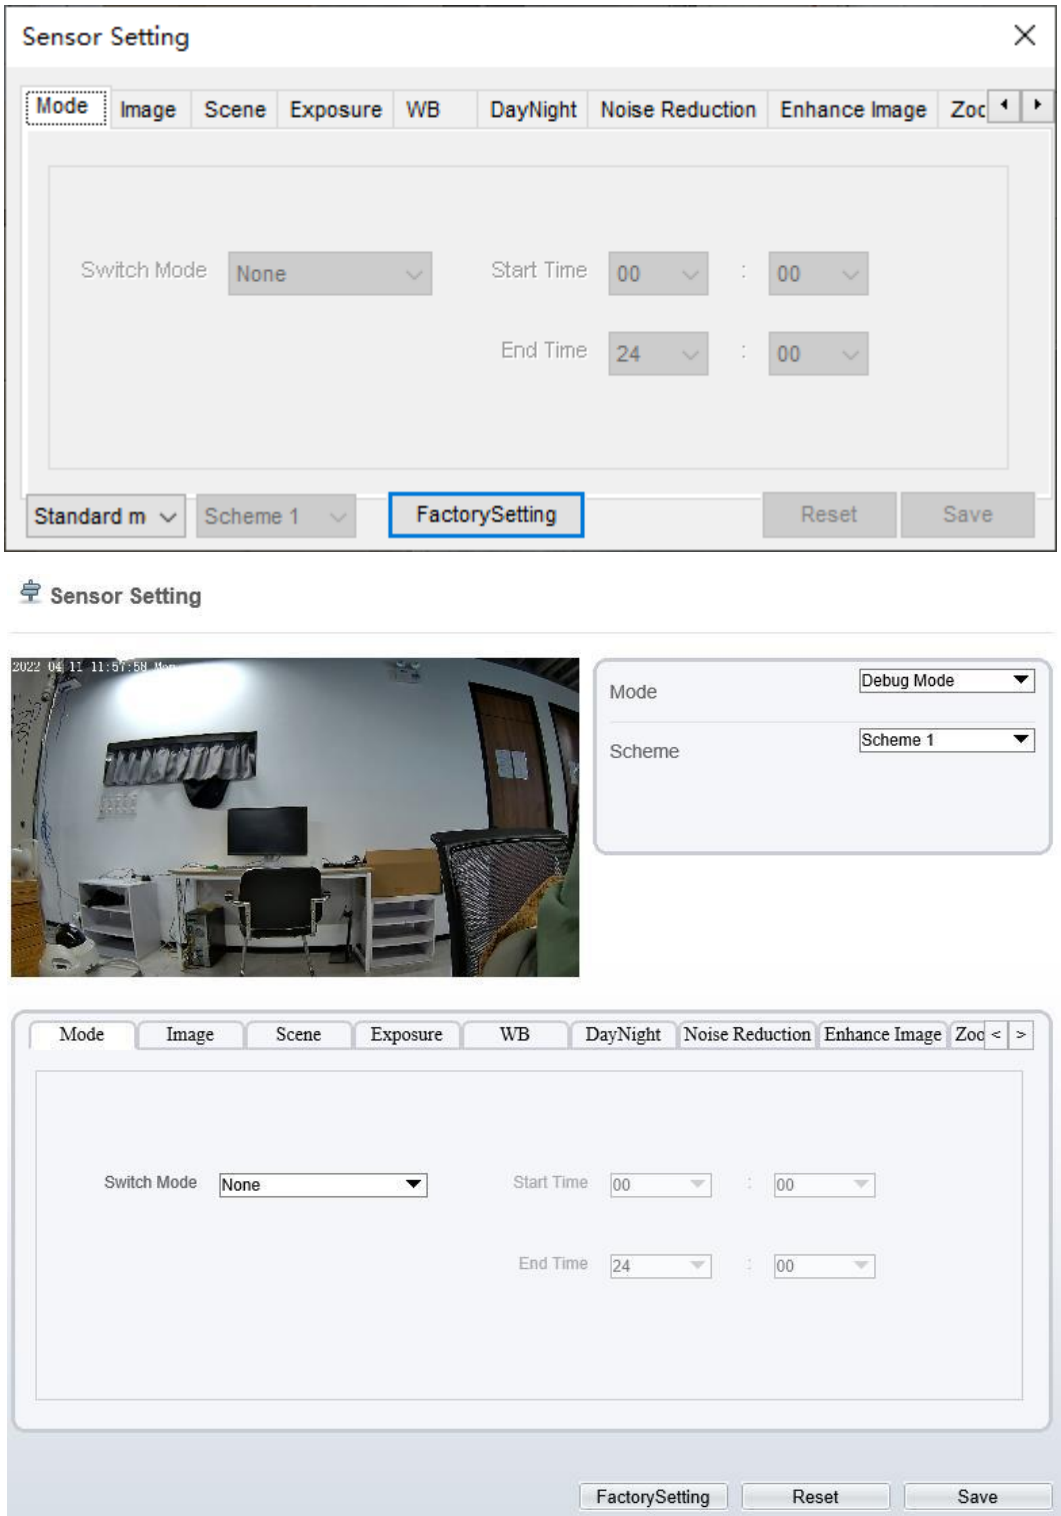

Step 2 Choose Debug Model in the lower left corner to activate the sensor setting page.

Step 3 Tick the Enable, then set the start time and end time.

Step 4 Click Save to save the setting.

2.2.3 Image Setting

Figure 2-10 shows the image setting interface.

Figure 2-10 Image setting interface

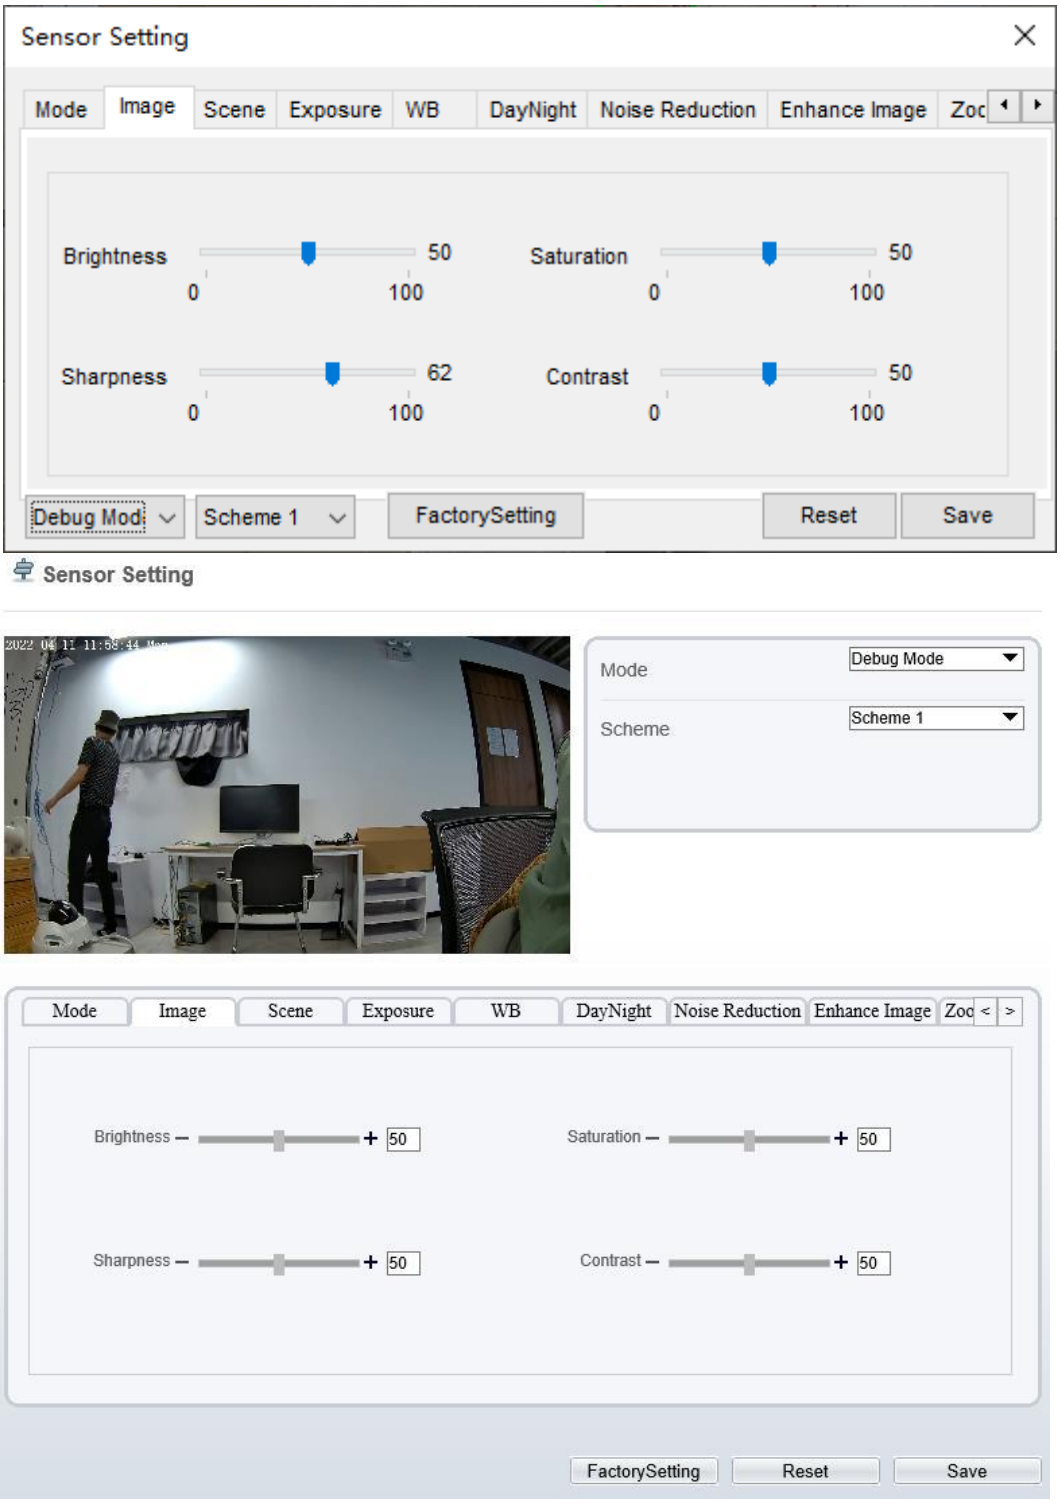


Table 2-2 describes the i**mage setting** parameters.


Table 2-2 Image setting parameters description

Parameter	Description	Configuration Method
Brightness	It indicates the total brightness of an image. As the value increases, the image becomes brighter.	[Setting method] Drag the slider. [Default value] **50**
Saturation	It indicates the color saturation of an image. As the value increases, the image becomes more colorful.	[Setting method] Drag the slider. [Default value] **50**
Sharpness	It indicates the definition of an image. As the value increases, the image becomes more definitional.	[Setting method] Drag the slider. [Default value] **50**
Contrast	It indicates the contrast between the bright part and the dark part of an image. As the value increases, the contrast increases.	[Setting method] Drag the slider. [Default value] **50**

2.2.4 Scene Mode

Figure 2-11 shows the **scene mode** interface.

Figure 2-11 Scene mode interface for IP camera

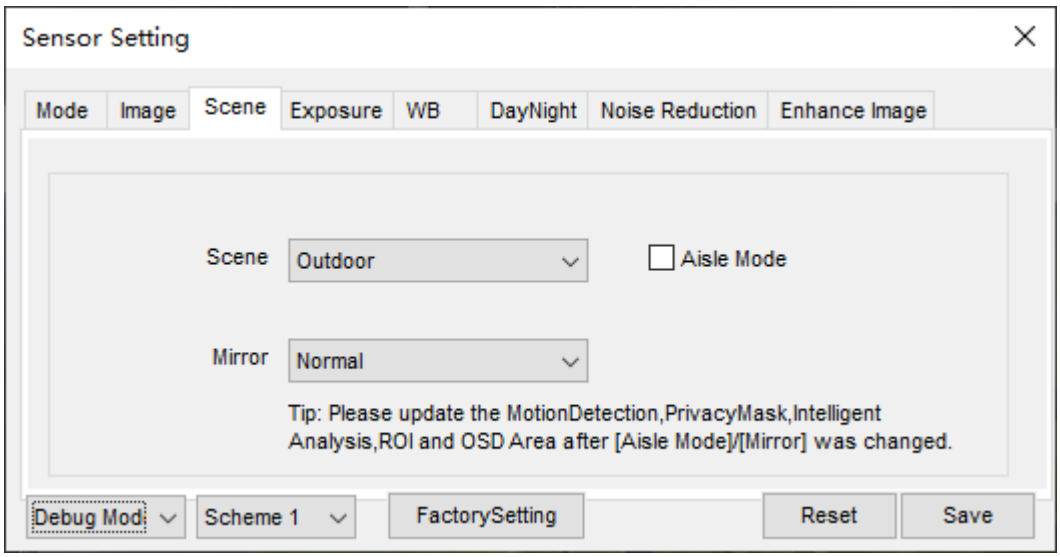

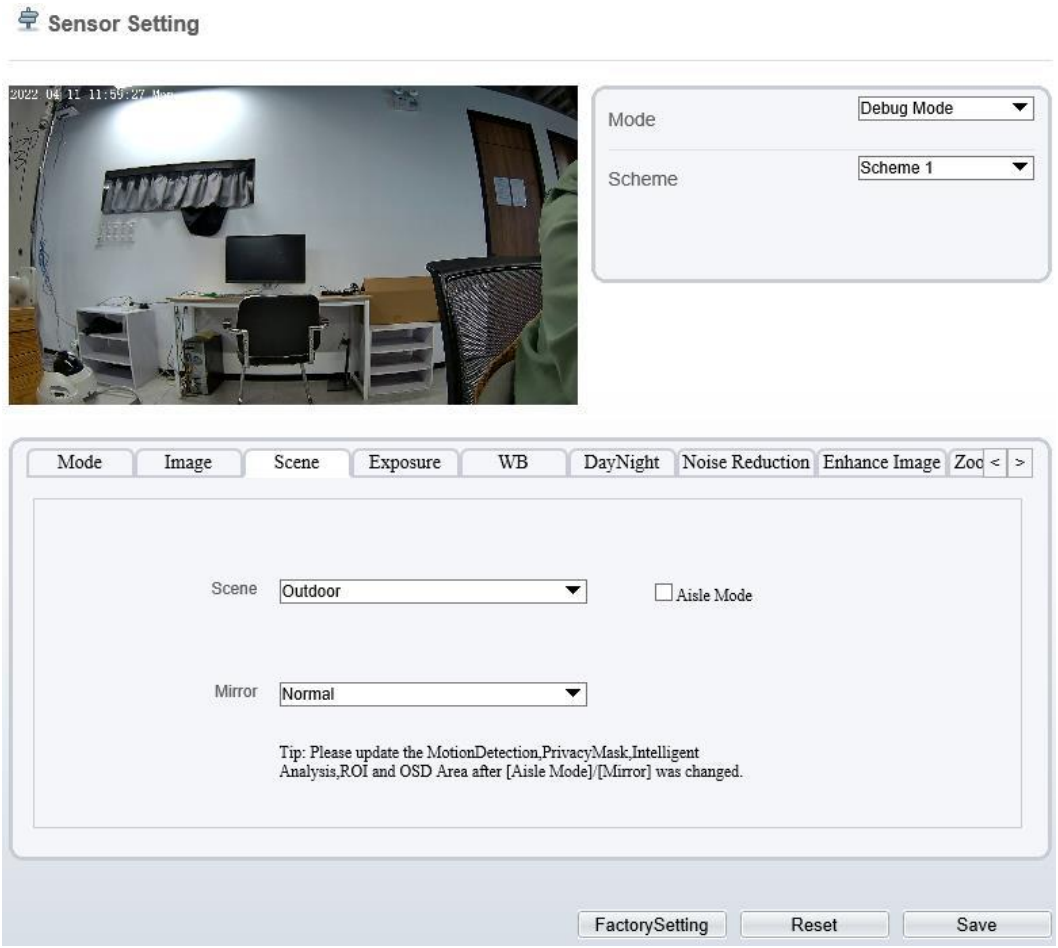


Table 2-3 describes the FFC mode parameters.

Table 2-3 FFC mode parameters description

Parameter	Description	Configuration Method
Scene	It indicates the working mode of a camera. • Outdoor: It applies to outdoor scenarios. • Indoor: It applies to indoor scenarios.	[Configuration method] Select from the drop-down list [Default value] Outdoor
Mirror	It is used to select the pixel location of an image. • Normal: The image does not flip. • Horizontal: The image flips to the left and right. • Vertical: The image flips up and down. • Horizontal and vertical: The image rotates at 180 degrees.	[Setting method] Select a value from the drop-down list. [Default value] Normal
Aisle Mode	The image rotates 90 degrees clockwise when aisle mode is enabled. For some models, when you choose stream 2 / 3, H.265 or H.264 video encode type, resolution chosen CIF or QVGA, it maybe not to play the live video.	[Setting method] Tick the Aisle mode. [Default value] Disable

2.2.5 Exposure

Figure 2-12 and Figure 2-13 shows the **Exposure** interface.

Figure 2-12 Exposure interface for IP camera

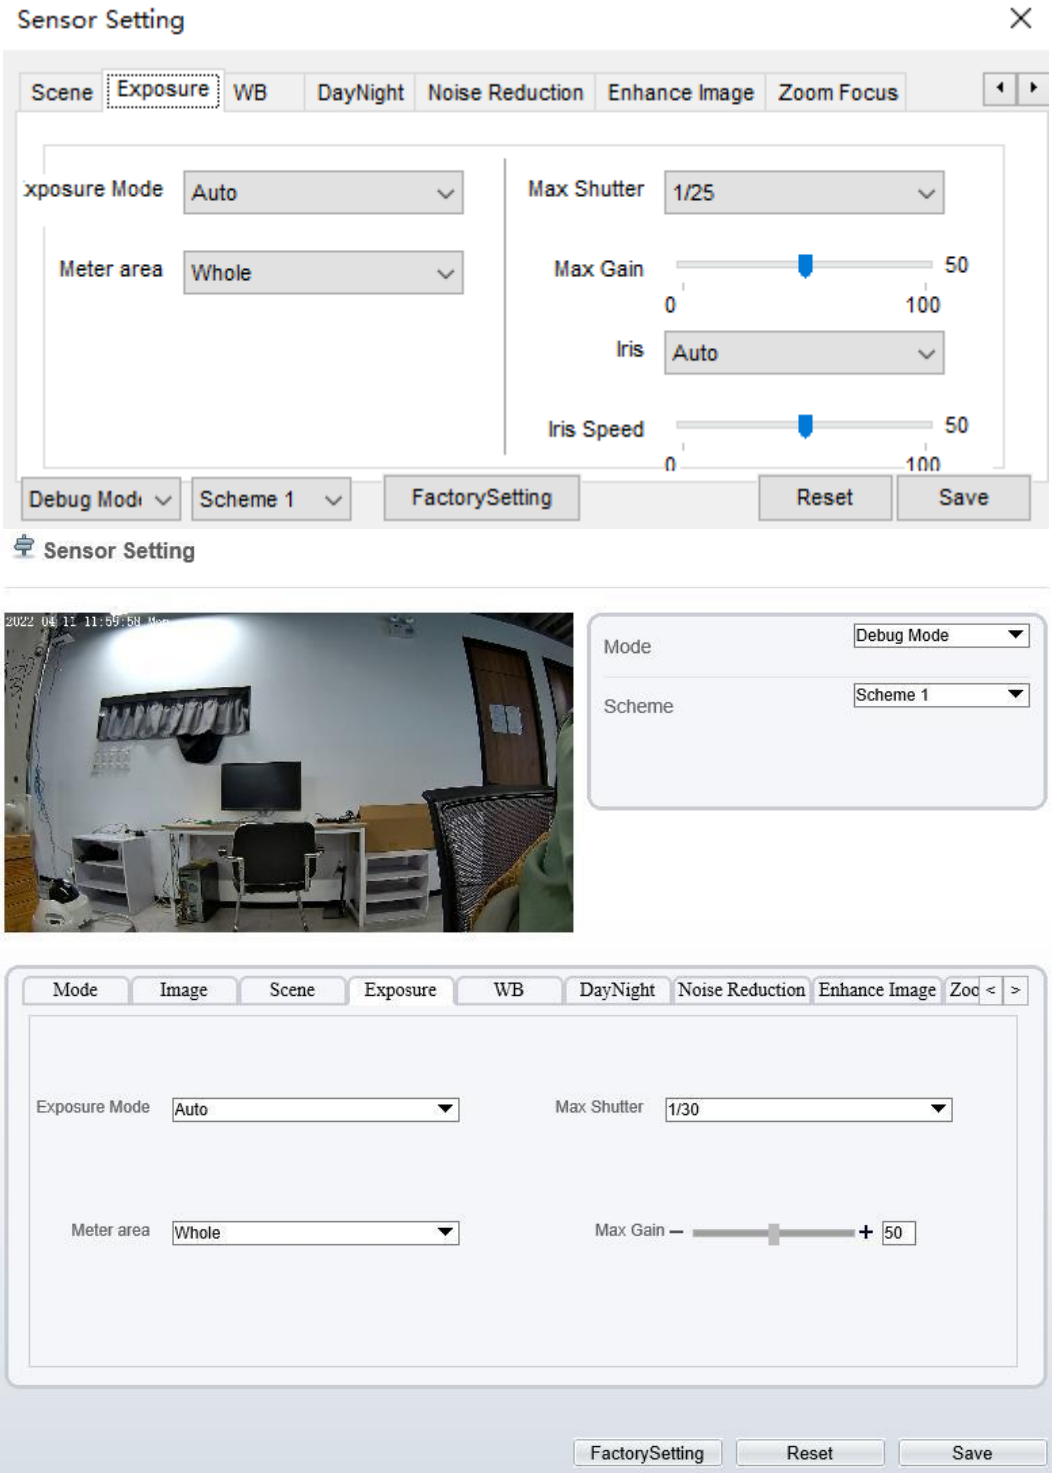


Figure 2-13 Exposure interface for high-speed dome

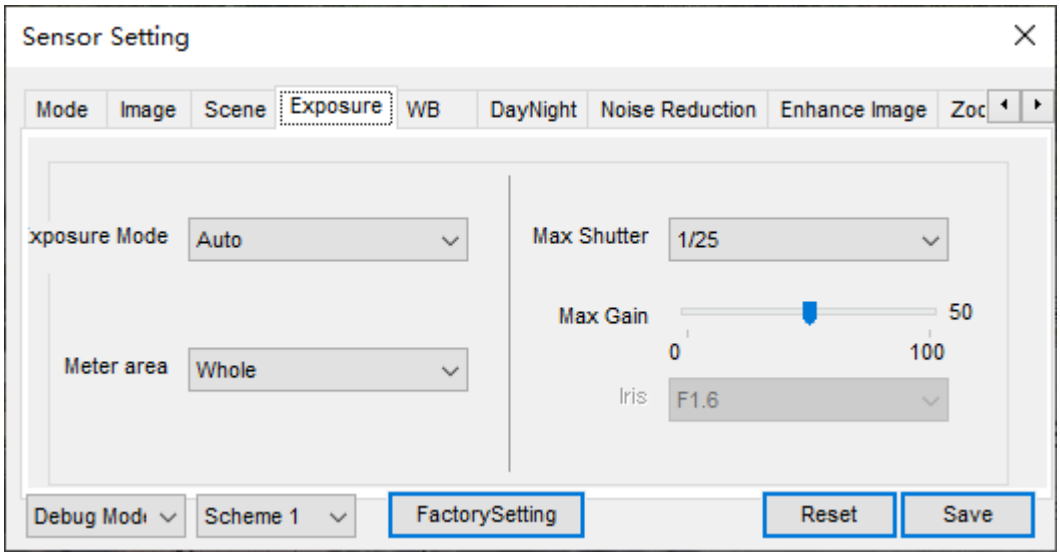


Table 2-4 describes Exposure parameters.

Table 2-4 Exposure parameters description

Parameter	Meaning	Configuration Method
Exposure Mode	The exposure modes include: • **Auto**: The system performs auto exposure based on the monitoring environment. • **Manual**: You can adjust the brightness of an image by setting the following three items: **Shutter Setting**, **Iris Setting** and **Gain Setting**. • **Shutter Priority**: You can set **Shutter Setting** to fixed values. The iris and gain are automatically adjusted by the system. • **Iris Priority (for high-speed dome):** You can set Iris Setting to fixed values. The shutter and gain are automatically adjusted by the system.	[Setting method] Select a value from the drop-down list. [Default value] **Auto**
Meter area	It is used to select the metering area. • **Whole**: During metering, all areas of an image have an equal weight, that is, all areas are involved in the metering. • **Center spot**: During metering, the central spot of an image has the highest weight. • **Center Area**: During metering, the middle area (1/2 of the total area) of an image has the highest weight, and other areas have the lowest weight.	[Setting method] Select a value from the drop-down list. [Default value] **Whole**

Parameter	Meaning	Configuration Method
Max Shutter	The device automatically adjusts the shutter time based on the ambient brightness. The shutter time is less than or equal to the value of this parameter.	[Setting method] Select a value from the drop-down list. [Default value] **1/25**
Max Gain	The device automatically adjusts the gain based on the external light. The gain is less than or equal to the value of this parameter.	[Setting method] Drag the slider. [Default value] **50**
Iris (for high speed dome)	It is valid in manual mode and iris priority mode. You can adjust the brightness of an image by setting the iris. As the value increases, the brightness increases (when the shutter and gain remain the same). However, the camera movement automatically adjusts the shutter and gain in this mode. Therefore, the brightness of an image may not increase when you increase the iris.	[Setting method] Select a value from the drop-down list. [Default value] **F1.6**
Iris（for IP camera）	It is used to control the light admitted to the lens. The auto iris can be set to either of the following states: • **Auto** The iris is automatically adjusted to control the light admitted to the lens. • **Open fully** The iris is fully open.	[Setting method] Select a value from the drop-down list. [Default value] **Auto**
Iris Speed	It indicates the auto adjustment speed of the iris. As the value increases, the speed increases. Excessive speed may cause instability. NOTE This parameter is valid when the auto iris is enabled.	[Setting method] Drag the slider. [Default value] **50**
Fixed Gain	When the exposure Mode is Manual, you can set the fixed gain.	[Setting method] Drag the slider. [Default value] **50**

2.2.6 WB Setting

Figure 2-14 shows the **WB Setting** interface.

Figure 2-14 WB Setting interface

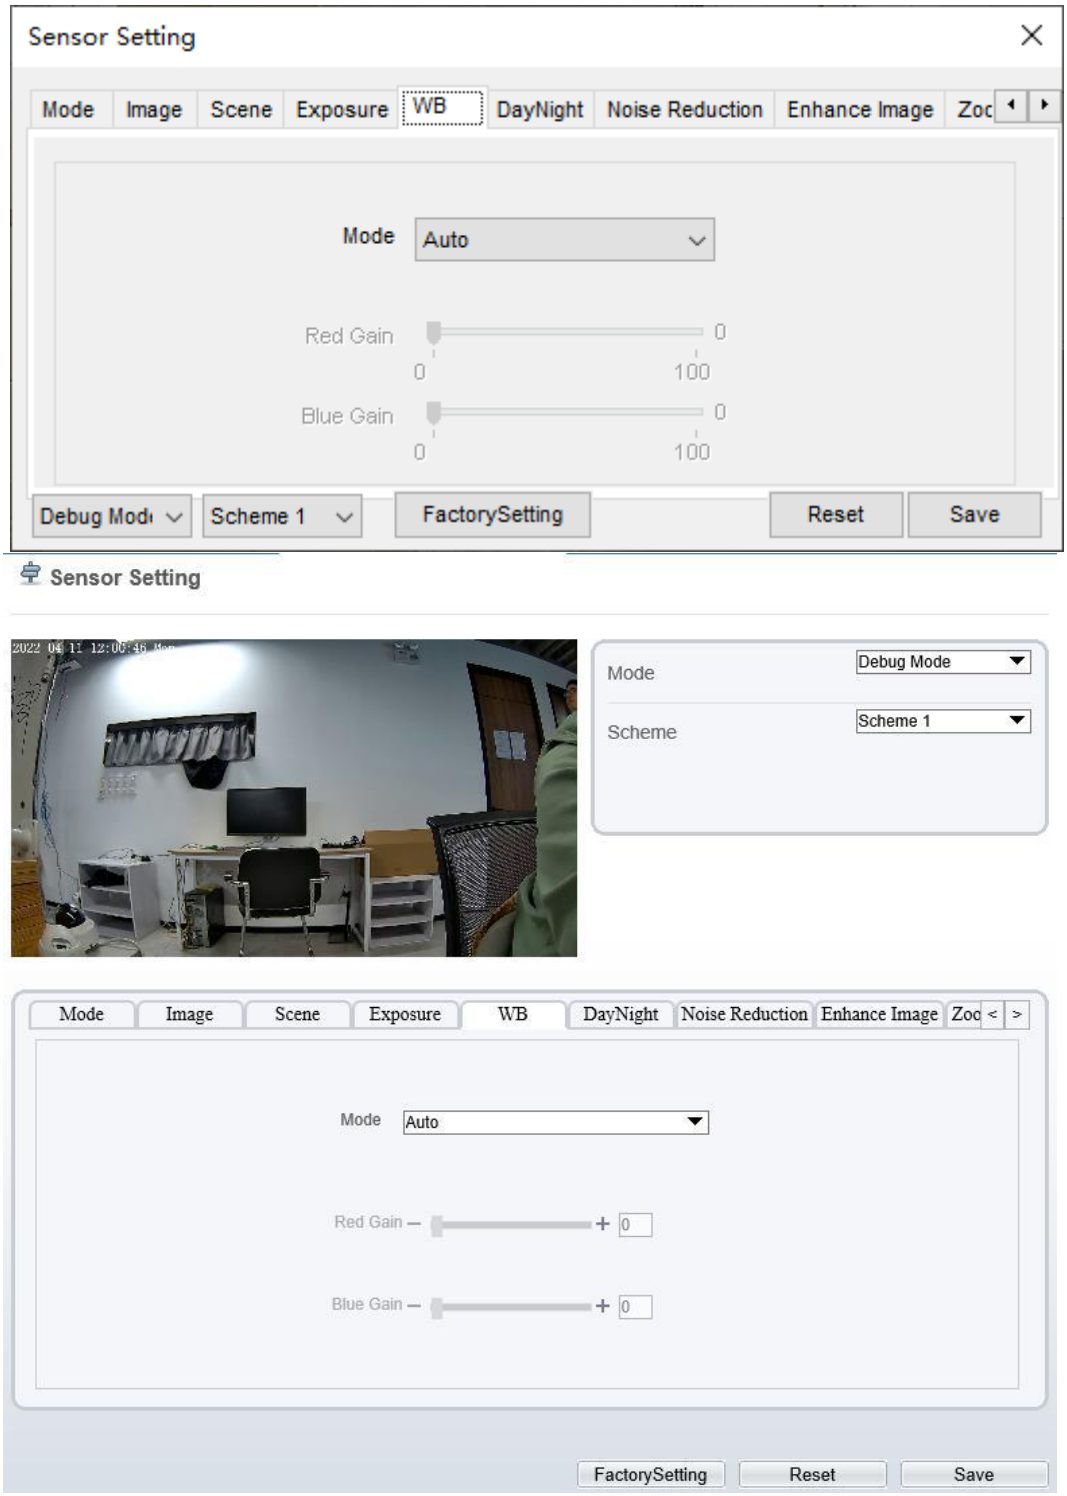


Table 2-5 describes **WB Setting** parameters.

Table 2-5 WB Setting parameters description

Parameter	Meaning	Configuration Method
Mode	Select WB mode according to different scenes for better image color reproduction. • **Auto**: In automatic white balance (WB) mode, the system automatically performs white balance based on the monitoring environment. • **Tungsten** • **Fluorescent** • **Daylight** • **Shadow** • **Manual**: In manual WB mode, you can manually select a WB mode based on the monitoring environment.	[Setting method] Select a value from the drop-down list. [Default value] **Auto**
Red Gain	It indicates the gain applied to red channels. As the value increases, the color temperature becomes lower. NOTE This parameter is valid when **Manual Mode** is set to **Customized**.	[Setting method] Drag the slider. [Default value] **0**
Blue Gain	It indicates the gain applied to blue channels. As the value increases, the color temperature becomes higher. NOTE This parameter is valid when **Manual Mode** is set to **Customized**.	[Setting method] Drag the slider. [Default value] **0**

2.2.7 Daynight

The day night mode settings vary based on device models. For details, see the following sections.

Figure 2-15 to Figure 2-18 shows the **DayNight Mode** interface.

Figure 2-15 DayNight Mode (1) interface

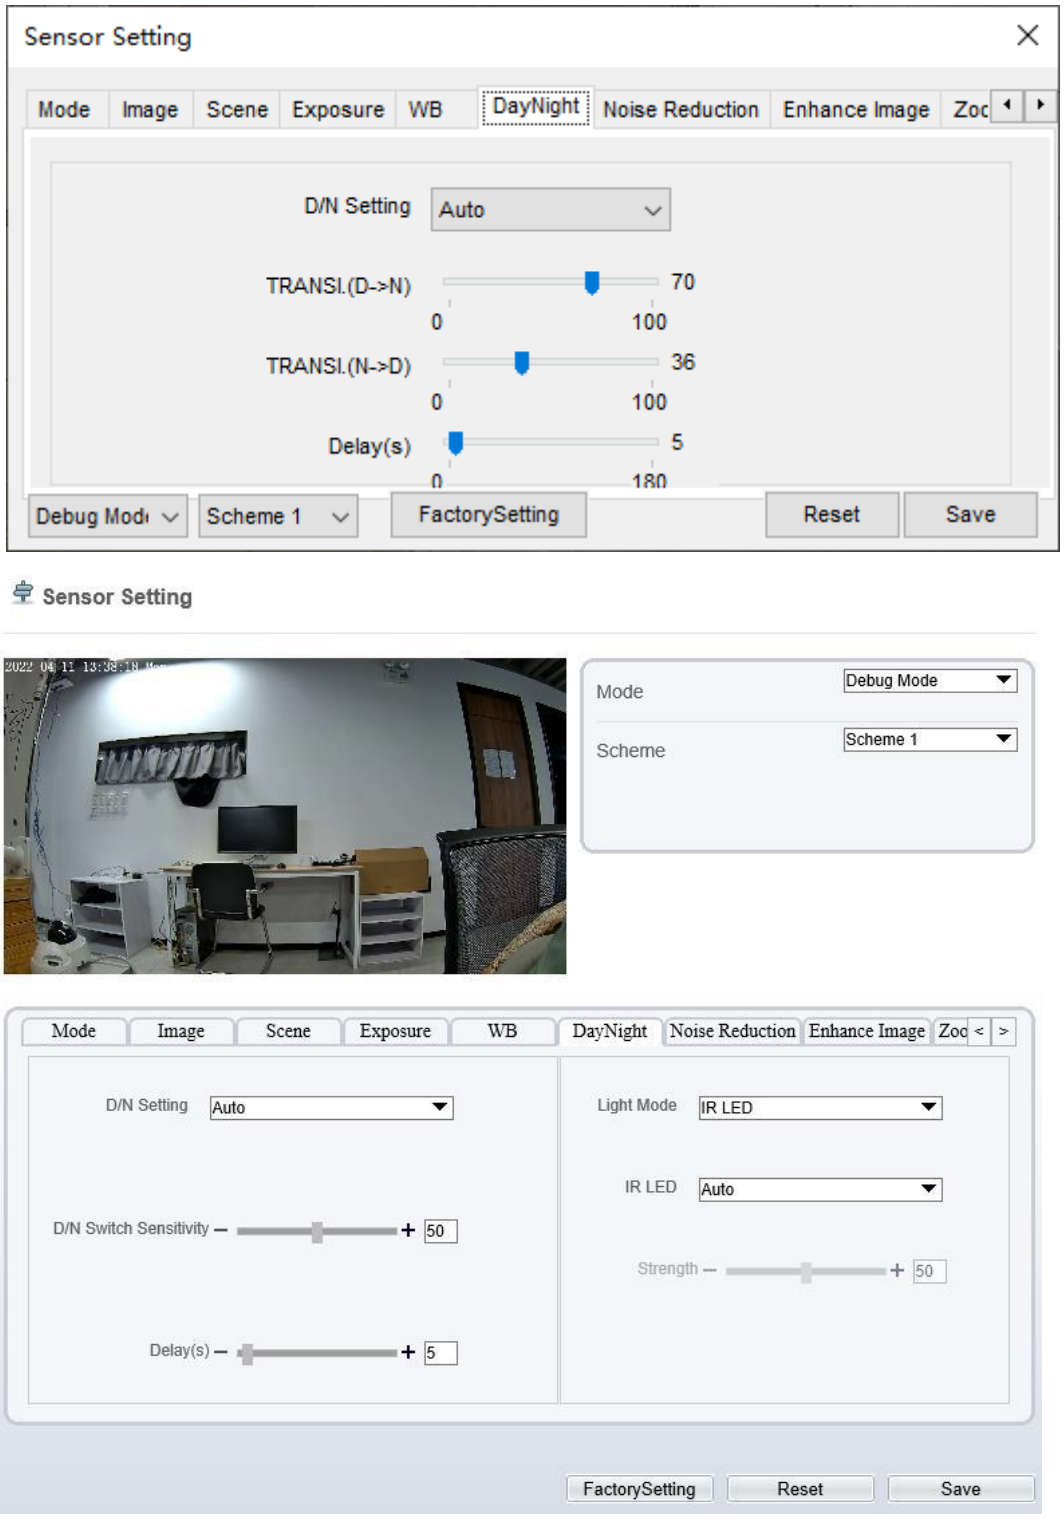


Figure 2-16 DayNight Mode (2) interface

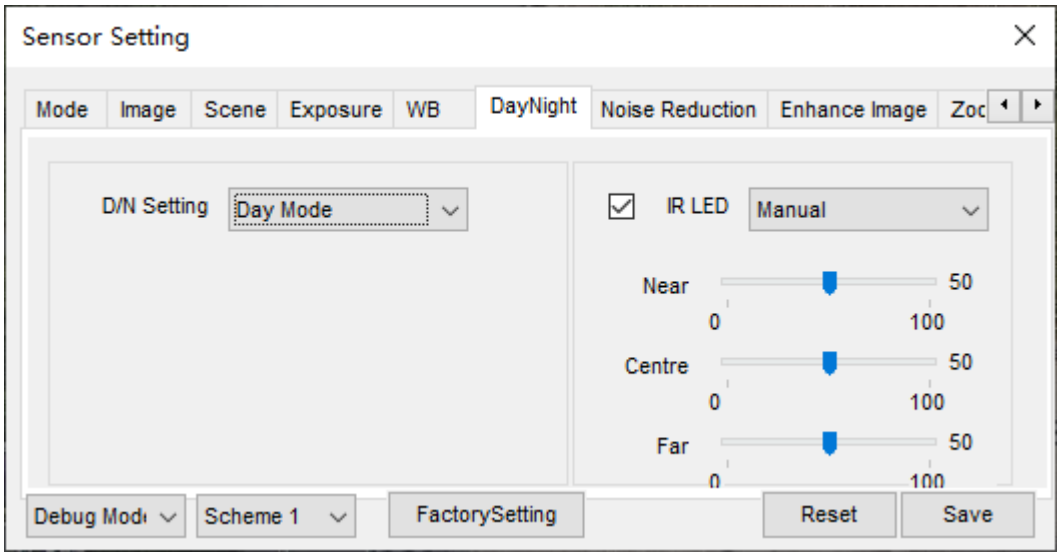


Figure 2-17 DayNight Mode (3) interface

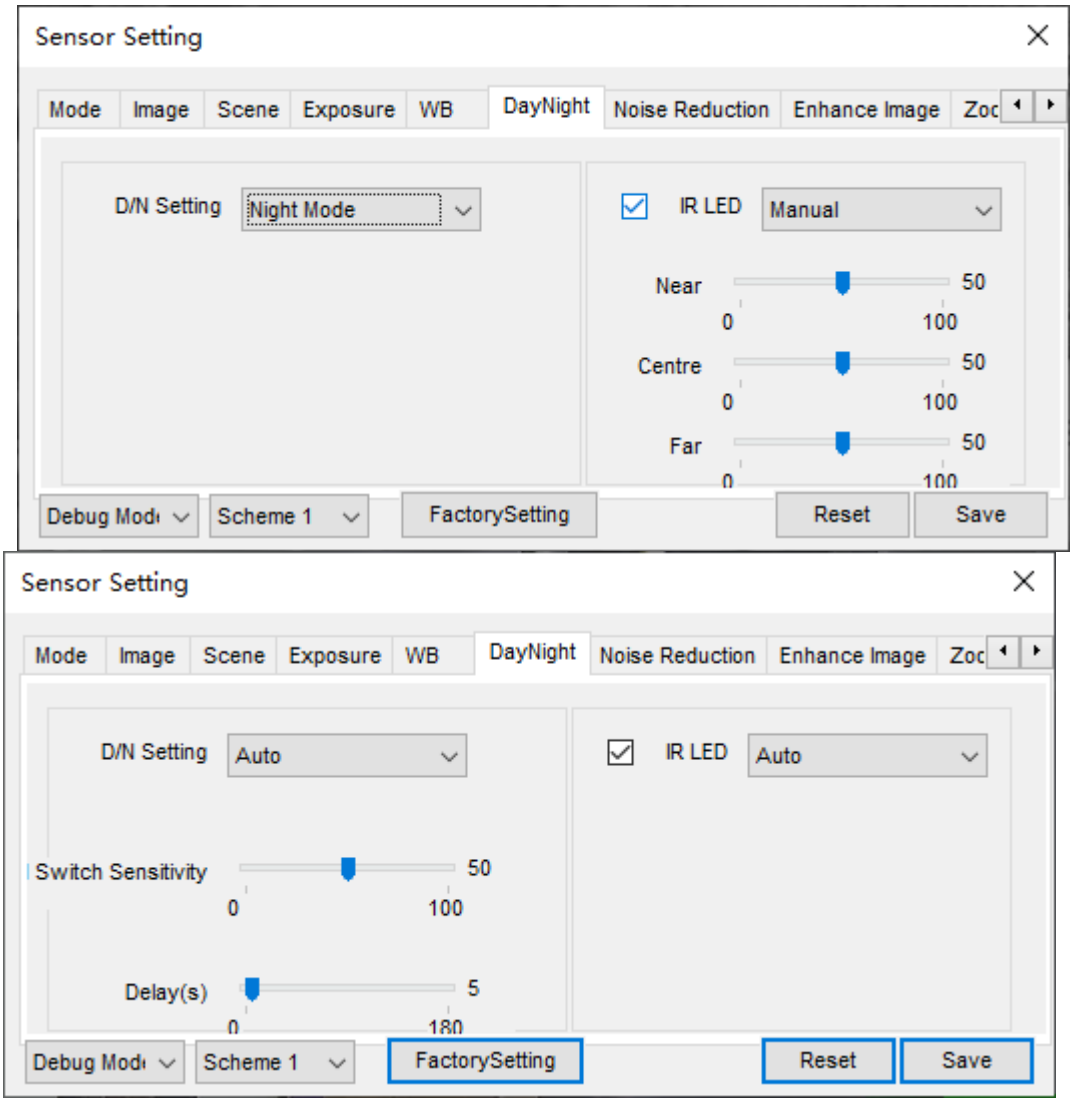


Figure 2-18 DayNight Mode (4) interface

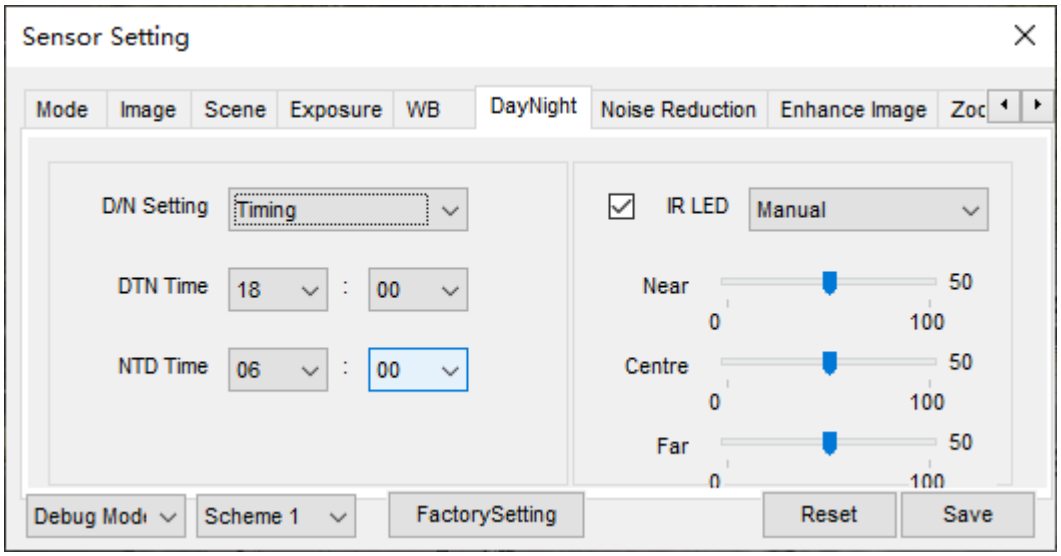


Table 2-6 describes **DayNight Mode** parameters.

Table 2-6 DNR parameters description

Parameter	Meaning	Configuration Method
D/N Setting Mode	It can be set to **Auto**, **Day**, **Night** or **Timing**. • Auto mode The image color and filter status are automatically switched based on the ambient brightness. The filter keeps infrared light from reaching the sensor during the day; The filter allows all light to reach the sensor at night. • Day mode The image is colored, and the filter is in the day state, preventing infrared light from entering the sensor. • Night mode The image is black and white, and the filter is in the night state, allowing infrared light to enter the sensor. • Timing Switching between day mode and night mode according to the set time.	[Setting method] Select a value from the drop-down list. [Default value] **Auto**
Switch Sensitivity	The sensitivity of switching day and night. The higher value of sensitivity, and the lower light intensity will switch to day. NOTE This parameter is valid in auto mode.	[Setting method] Drag the slider. [Default value] **50**

Parameter	Meaning	Configuration Method
TRANSI. (D->N) (dB)	It determines the day-to-night switching in auto mode. When the system gain is greater than the value of this parameter, the system enters the night mode. NOTE This parameter is valid in auto mode. The value of **TRANSI. (D->N)** must be greater than the value of **TRANSI. (N->D)**.	[Setting method] Drag the slider. [Default value] **70**
TRANSI. (N->D) (dB)	It determines the night-to-day switching in auto mode. When the system gain is smaller than the value of this parameter, the system enters the day mode. NOTE This parameter is valid in auto mode. The value of **TRANSI.(D->N)** must be greater than the value of **TRANSI.(N->D)**.	[Setting method] Drag the slider. [Default value] **30**
Delay(s)	The delay time of day to night or night to day. NOTE This parameter is valid in auto mode.	[Setting method] Drag the slider. [Default value] **0**
IR LED	• **Auto**: The infrared lamp is enabled or disabled based on the external environment identified by the light dependent resistor (LDR). • **ON**: The system enters the night mode forcibly. • **OFF**: The infrared lamp is disabled. The filter and image color are switched based on the external environment identified by the LDR. NOTE This parameter is valid in auto mode.	[Setting method] Select a value from the drop-down list. [Default value] **Auto**
Strength	Strength of IR LED, as the value increases, the image becomes brighter.	[Setting method] Drag the slider. [Default value] **50**
DTN Time	Time of day to night.	[Setting method] Select a value from the drop-down list. [Default value] **18:00**
NTD Time	Time of night to day.	[Setting method] Select a value from the drop-down list. [Default value] **6:00**

Fill light settings

The camera fill light has four modes, there are intelligent dual light (the current fill light will switch to warm light after an alarm is triggered, and switch back to the original fill light for fill light 30s after the alert is released.), warm light, infrared lamp and close (Choose to close the fill light and the color of image will stay in the previous mode).

The different camera can be set different fill light modes, please set according to the actual scene.

Day mode: It can be used in the scene with sufficient ambient light for 24 hours, do not turn on the fill light, and the image is in color.

Night mode: it can be used in the scene where there is insufficient ambient light for 24 hours, turn on the fill light (it can be selected according to the four modes of the fill light).

Auto mode: Automatically switch the set fill light mode according to the brightness of the environment.


Timing mode: Set the start and end time of the day, this time period is in day mode.

The brightness of the fill light can be selected between automatic and manual, automatic mode is meaning it can be adjusted automatically according to the current environment; manual mode, you can scroll to check or set the value to control.

2.2.8 Noise Reduction

Figure 2-19 shows the Noise Reduction interface.

Figure 2-19 Noise Reduction interface(manual)

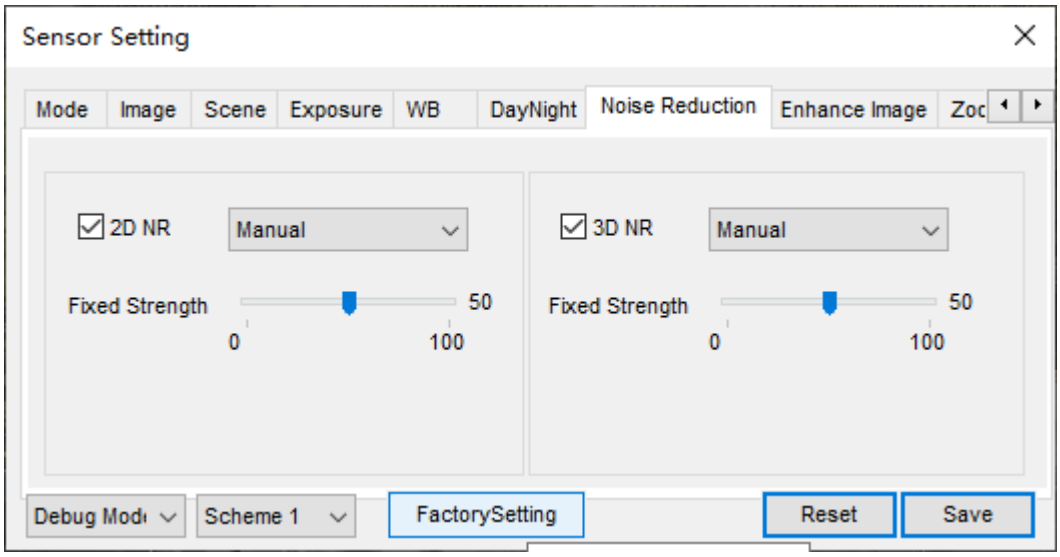

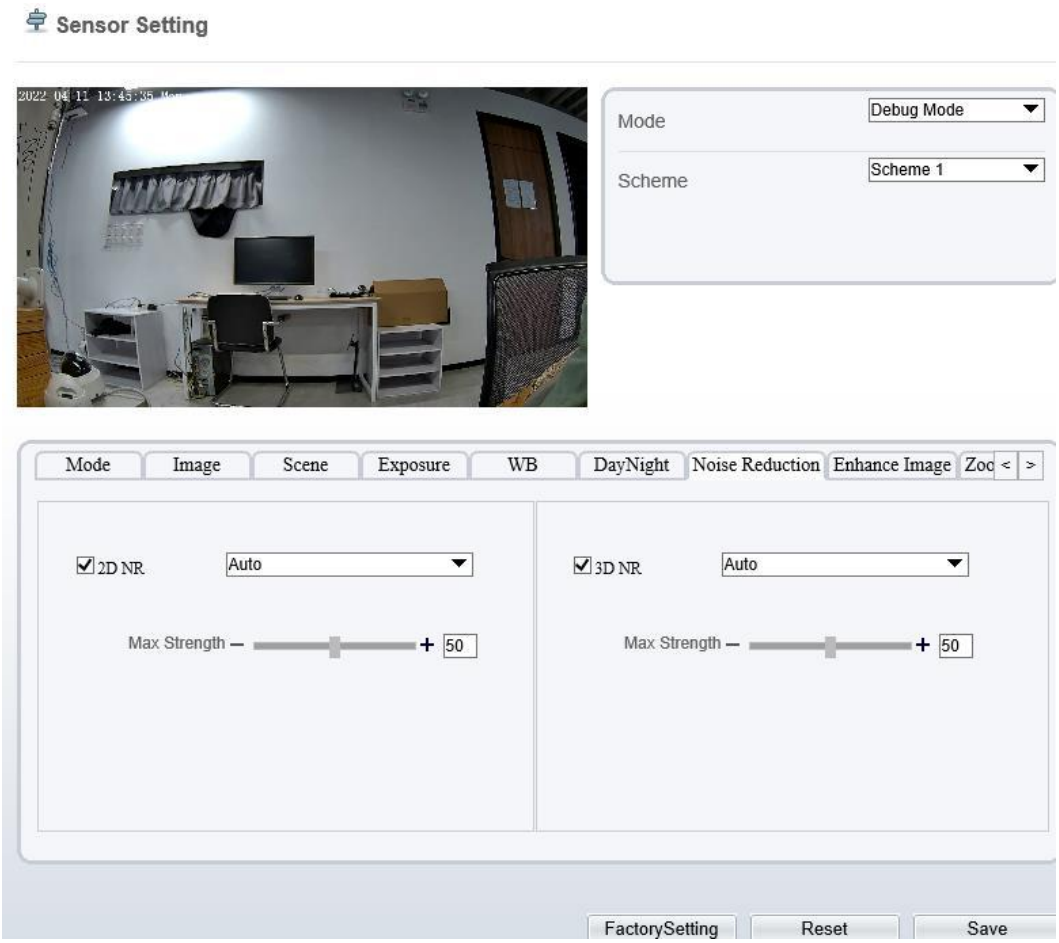


Figure 2-20 Noise Reduction interface(auto)

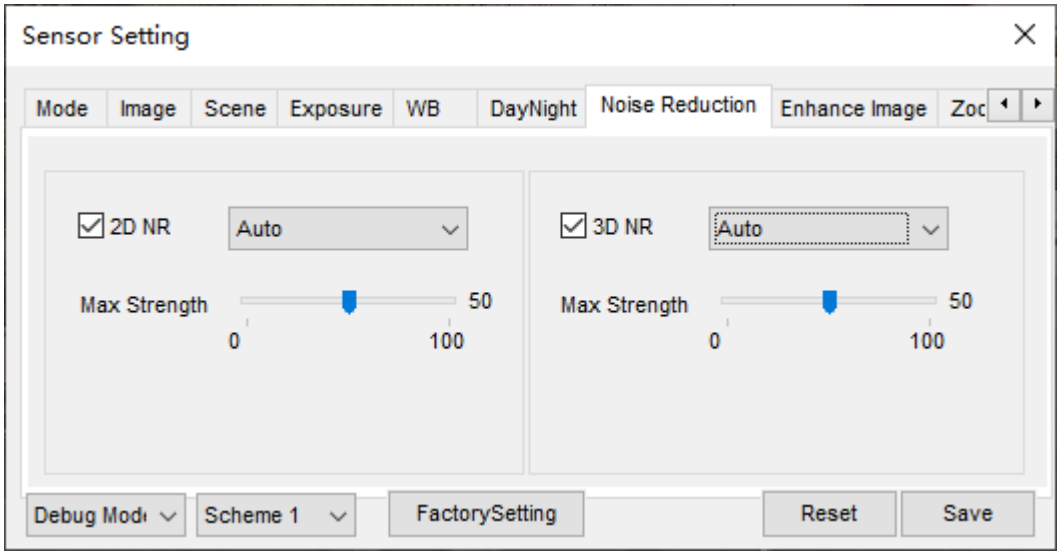


Table 2-7 describes DNR parameters.


Table 2-7 DNR parameters description

Parameter	Meaning	Configuration Method
2D NR	Reduce noise of image.	[Configuration method] Select from the drop-down list [Default value] Auto
3D NR	Reduce noise of image.	[Configuration method] Select from the drop-down list [Default value] Auto
Max Strength	It is valid in auto noise filter mode. When the parameter value is **0**, the noise filter is disabled. When the parameter value is greater than **0**, the noise filter is enabled, and the system automatically adjusts the noise filter level based on the ambient brightness without exceeding the value of this parameter.	[Setting method] Drag the slider. [Default value] **50**
Fixed Strength	It is valid in a manual noise filter mode.	[Setting method] Drag the slider. [Default value] **50**

2.2.9 Enhance Image

Figure 2-21 shows the enhance image interface and Table 2-8 shows the enhance image parameter.

Figure 2-21 Enhance image interface

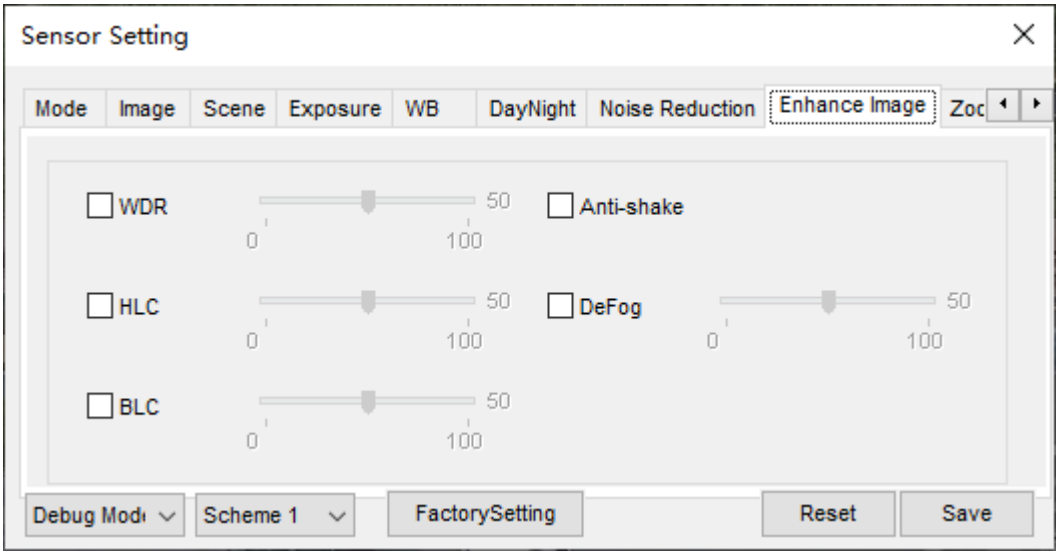

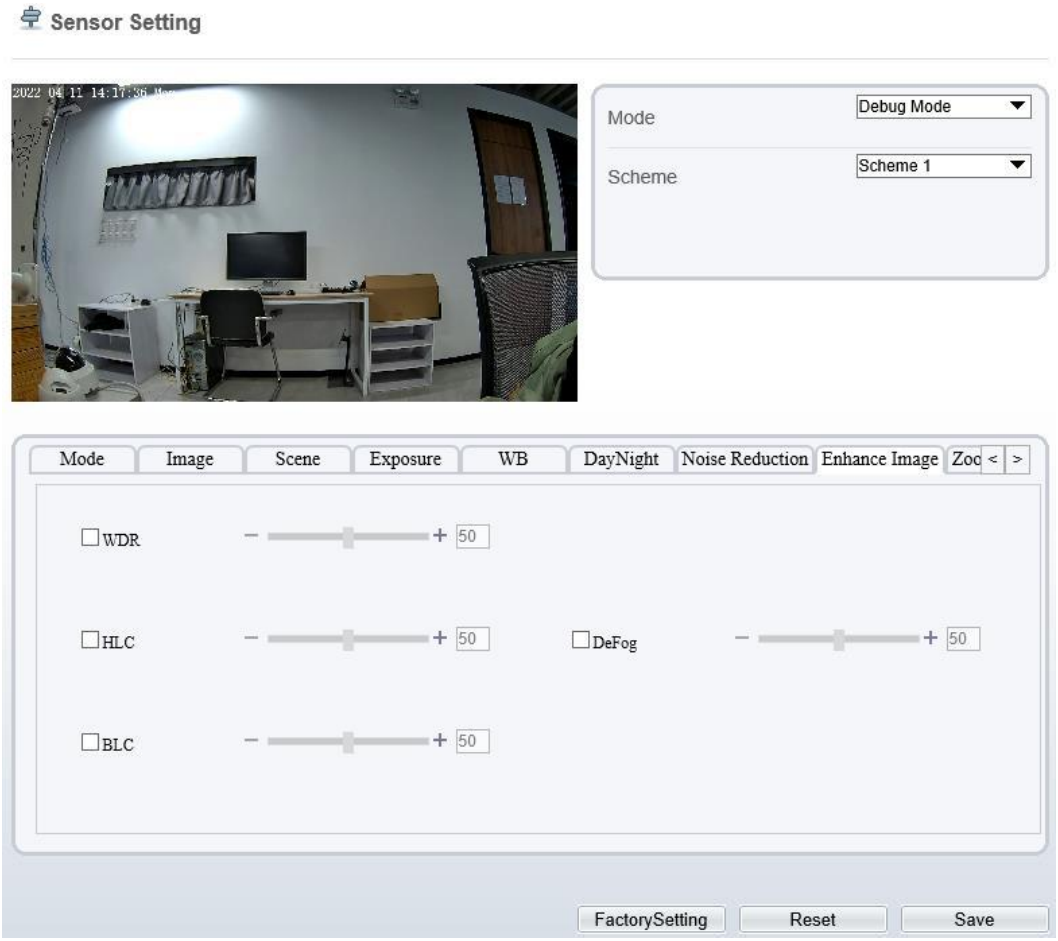


Table 2-8 Enhance image parameters description


Parameter	Meaning	Configuration Method
WDR	It is used to display the foreground and background at the same time in the environment with a large brightness difference. When the brightness difference is larger, you can increase the WDR level to obtain better image effect.	[Setting method] Tick the WDR mode and drag the slider. [Default value] **50**
HLC	It provides a clearer view of an image in the highlight environment. When HLC is enabled, the total brightness of an image is reduced, allowing you to view objects in front of the highlight.	[Setting method] Tick the HLC mode and drag the slider. [Default value] **50**
BLC	It provides a clearer view of an image in the backlight environment. When BLC is enabled, the total brightness of an image increases, allowing you to view objects in front of the backlight. Meanwhile, the objects behind the backlight are exposed excessively.	[Setting method] Tick the HLC mode and drag the slider. [Default value] **50**

Parameter	Meaning	Configuration Method
Anti-shake	The shakes and visual angle of image will reduce when the camera shakes slightly and the anti-shake is enable.	[Setting method] Tick the Anti-shake mode.
DeFog	It provides a clearer view of an image in the fogged environment when Defog is enabled. As the value increases, the image becomes clearer.	[Setting method] Tick the Defog mode and drag the slider. [Default value] **50**

2.2.10 Zoom Focus (Supplied for some model)

Figure 2-22 and Figure 2-23 shows the zoom focus interface and Table 2-8 shows the zoom focus parameter.

Figure 2-22 Zoom focus interface for IP camera

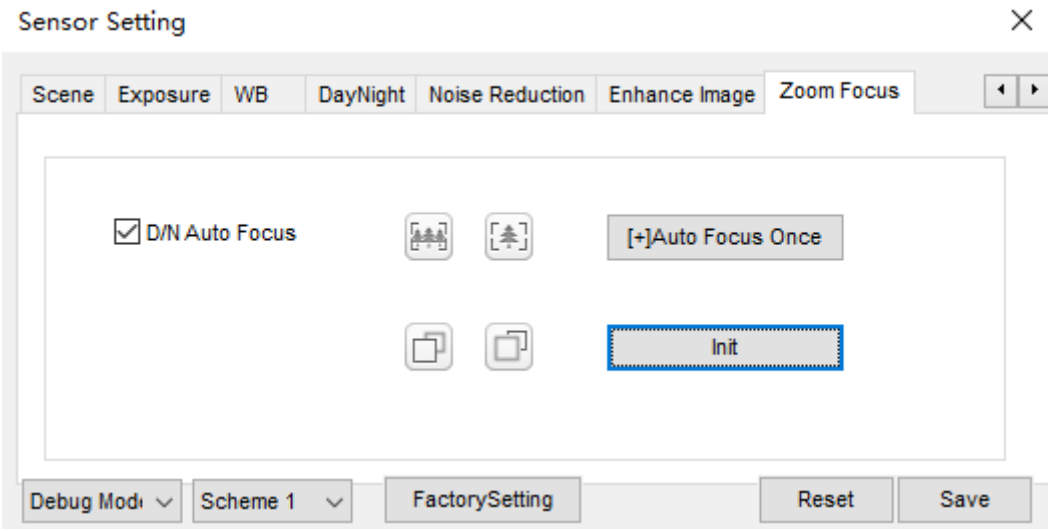

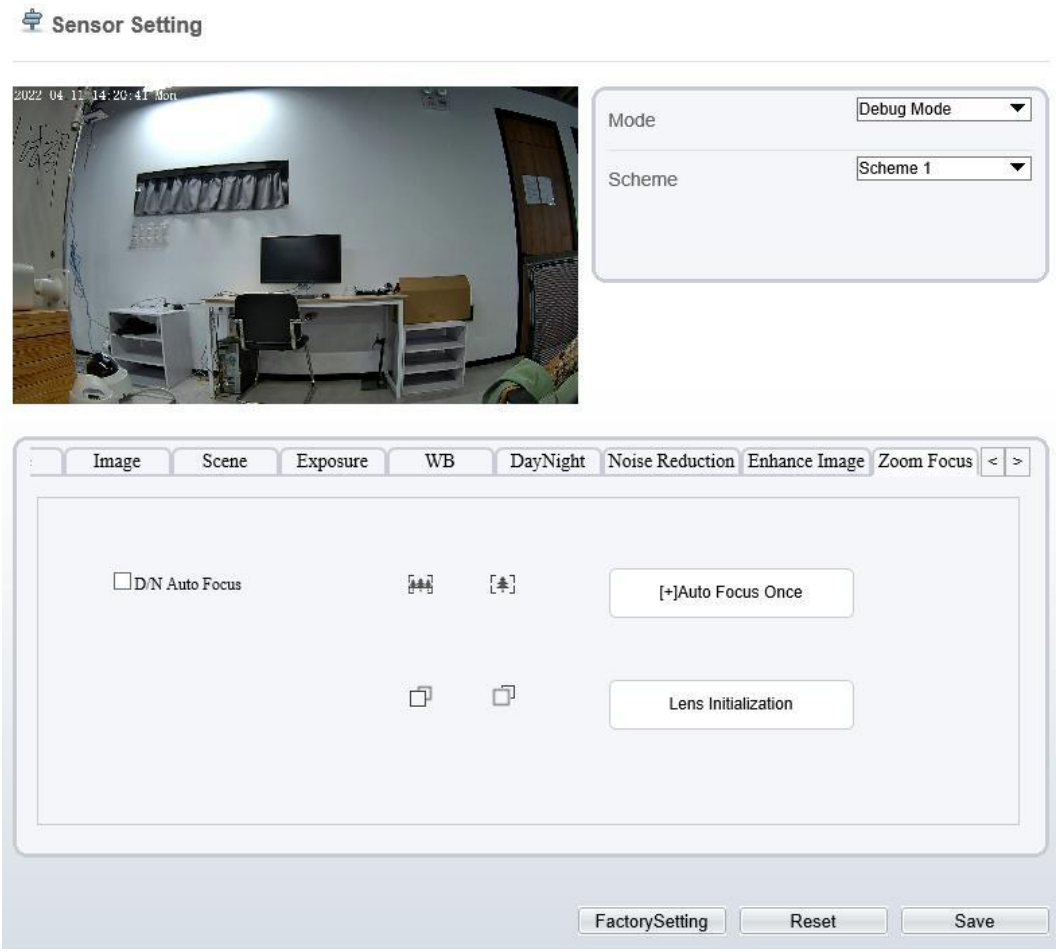


Figure 2-23 Zoom focus interface for high speed dome

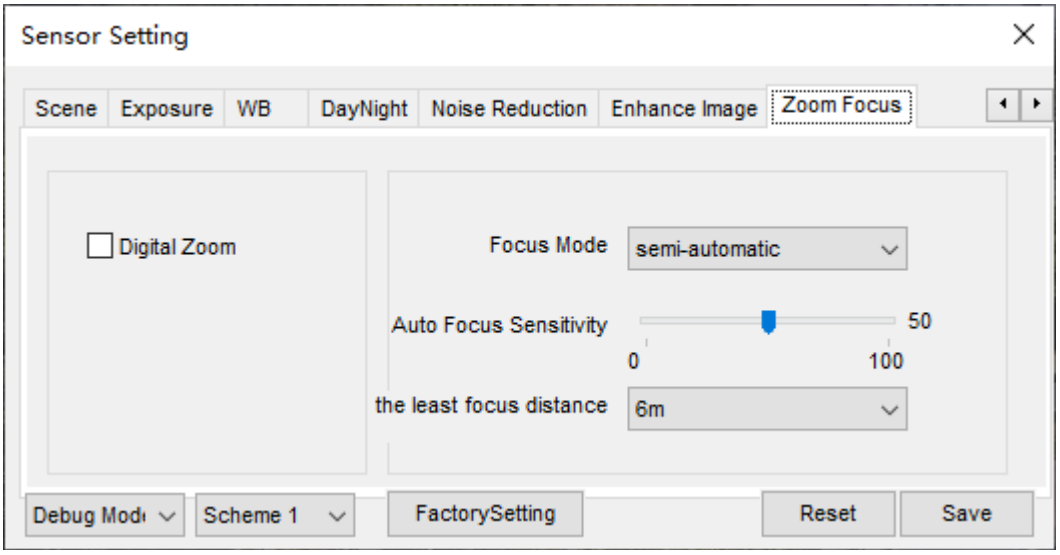


Table 2-9 Zoom focus parameters description

Parameter	Meaning	Configuration Method
D/N Auto Focus	It is used to trigger auto focus when day to night or night to day.	[Setting method] Tick the Auto focus.

Parameter	Meaning	Configuration Method
Auto Focus Once	Click to trigger once auto focus.	[Setting method] Click the button.
Init	The lens of camera returns to the initial position.	[Setting method] Click the button.
Digital	This function enables digital zoom after an image is zoomed in by 37 times in optical mode.	[Setting method] Tick the Digital.
Focus Mode	It can be set to the auto, manual or semi-automatic mode. Auto focus mode: The system automatically triggers focus based on application scenarios. Manual focus mode: You can trigger focus by using the buttons on the client. Semi-automatic focus mode: The system only automatically trigger focus once when the PTZ move or zoom in a scene.	[Configuration method] Select from the drop-down list [Default value] **Semi-automatic**
Auto Focus Sensitivity	It indicates the sensitivity of auto focus. When the sensitivity is high, the camera movement is more likely to focus again at slight changes of an image.	[Setting method] Drag the slider. [Default value] **50**
The least focus distance	It indicates the minimum focus distance. A camera does not focus when the distance is smaller than this value. For example, if the minimum focus distance is set to 1.5 m, a camera focuses only on objects more than 1.5 m away, and the changes of objects less than 1.5 m away do not affect the focusing. NOTE This parameter applies only to visible light.	[Configuration method] Select from the drop-down list [Default value] 3 m

----End

3 Configure the Device

3.1 Device Information

Description

The device information includes:

- Device ID, name, type, model, manufacturer name and MAC address.
- Hardware and software versions.
- Number of video channels, number of alarm input channels, number of alarm output channels, and number of serial ports, network cards.

NOTE


- You can modify the device name. All other parameters can only be viewed.
- When the device is upgraded, the device information is updated automatically.

Procedure

Step 1 Click Configuration > Device Info.

The **Device Info** page is displayed, as shown in Figure 3-1.

Figure 3-1 Device Info page

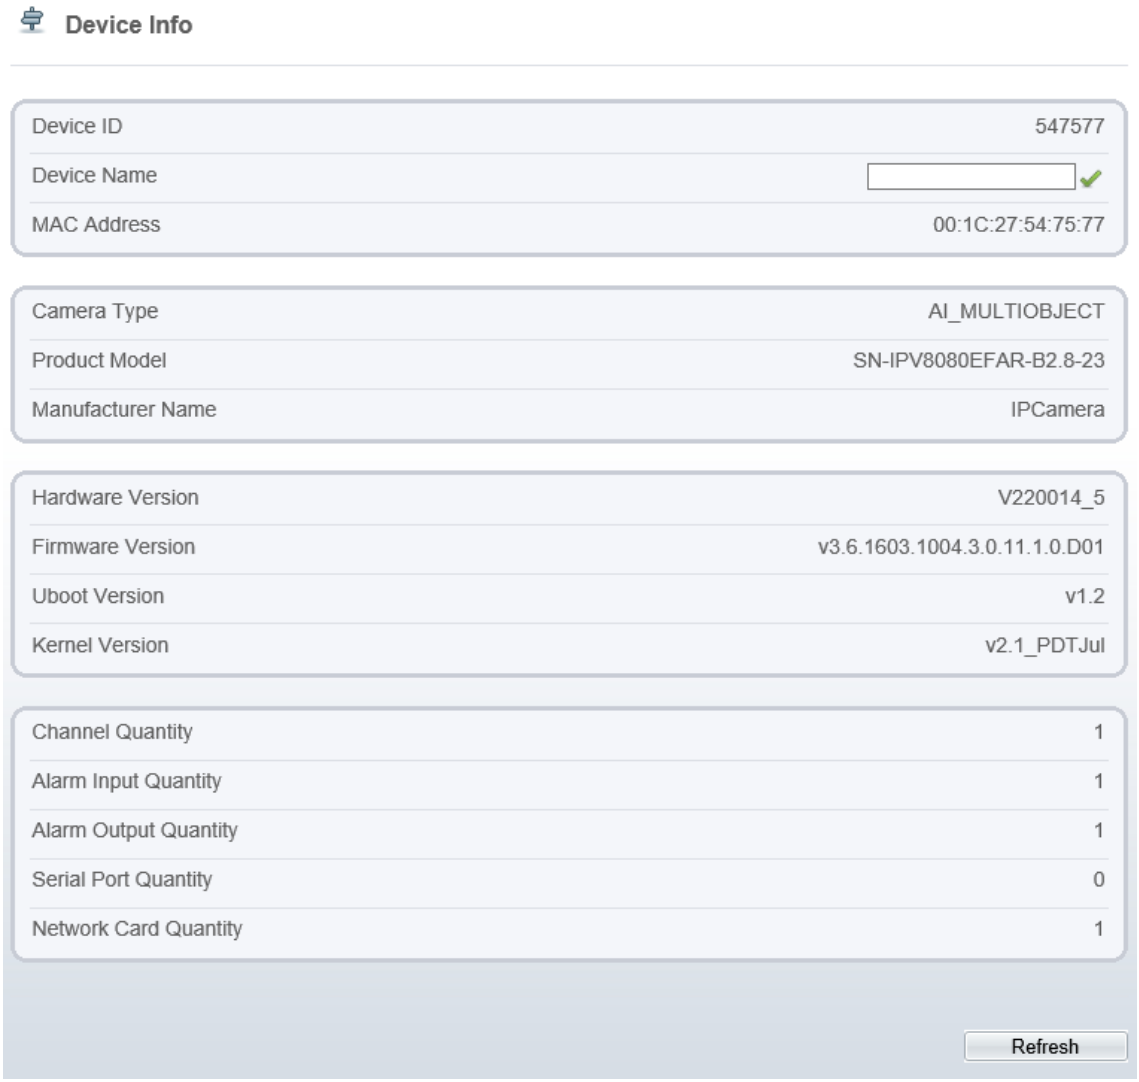

Step 2 View the device information, set the device name according to Table 3-1.

Table 3-1 Device parameters

Parameter	Description	Setting
Device ID	Unique device identifier used by the platform to distinguish the devices.	[Setting method] The parameter cannot be modified.
Device Name	Name of the device. NOTE The device name cannot exceed 32 bytes or 10 simplified characters; otherwise, the modification fails.	[Setting method] Enter a value manually.
MAC Address	N/A	[Setting method] These parameters cannot be modified.
Camera Type		
Product Model		

Parameter	Description	Setting
Manufacturer Name		
Hardware Version		
Firmware Version		
Uboot version		
Kernel version		
Video Channel(s)		
Channel Quantity		
Alarm Input Quantity		
Alarm Output Quantity		
Serial Port Quantity		
Network card Quantity		

Step 3 Click .

- If the message "Apply success!" is displayed, click **OK**. The system saves the settings.
- If the message "Apply failed!" is displayed, you must apply for the Parameter Configure permission from an administrator. For details, see 11.1 Configure a User.

----End


3.2 Video and Audio Stream

Procedure

Step 1 Click Configuration > Stream > Base Stream.

The **Stream Configuration** page is displayed, as shown in Figure 3-2.

Figure 3-2 Stream Configuration page

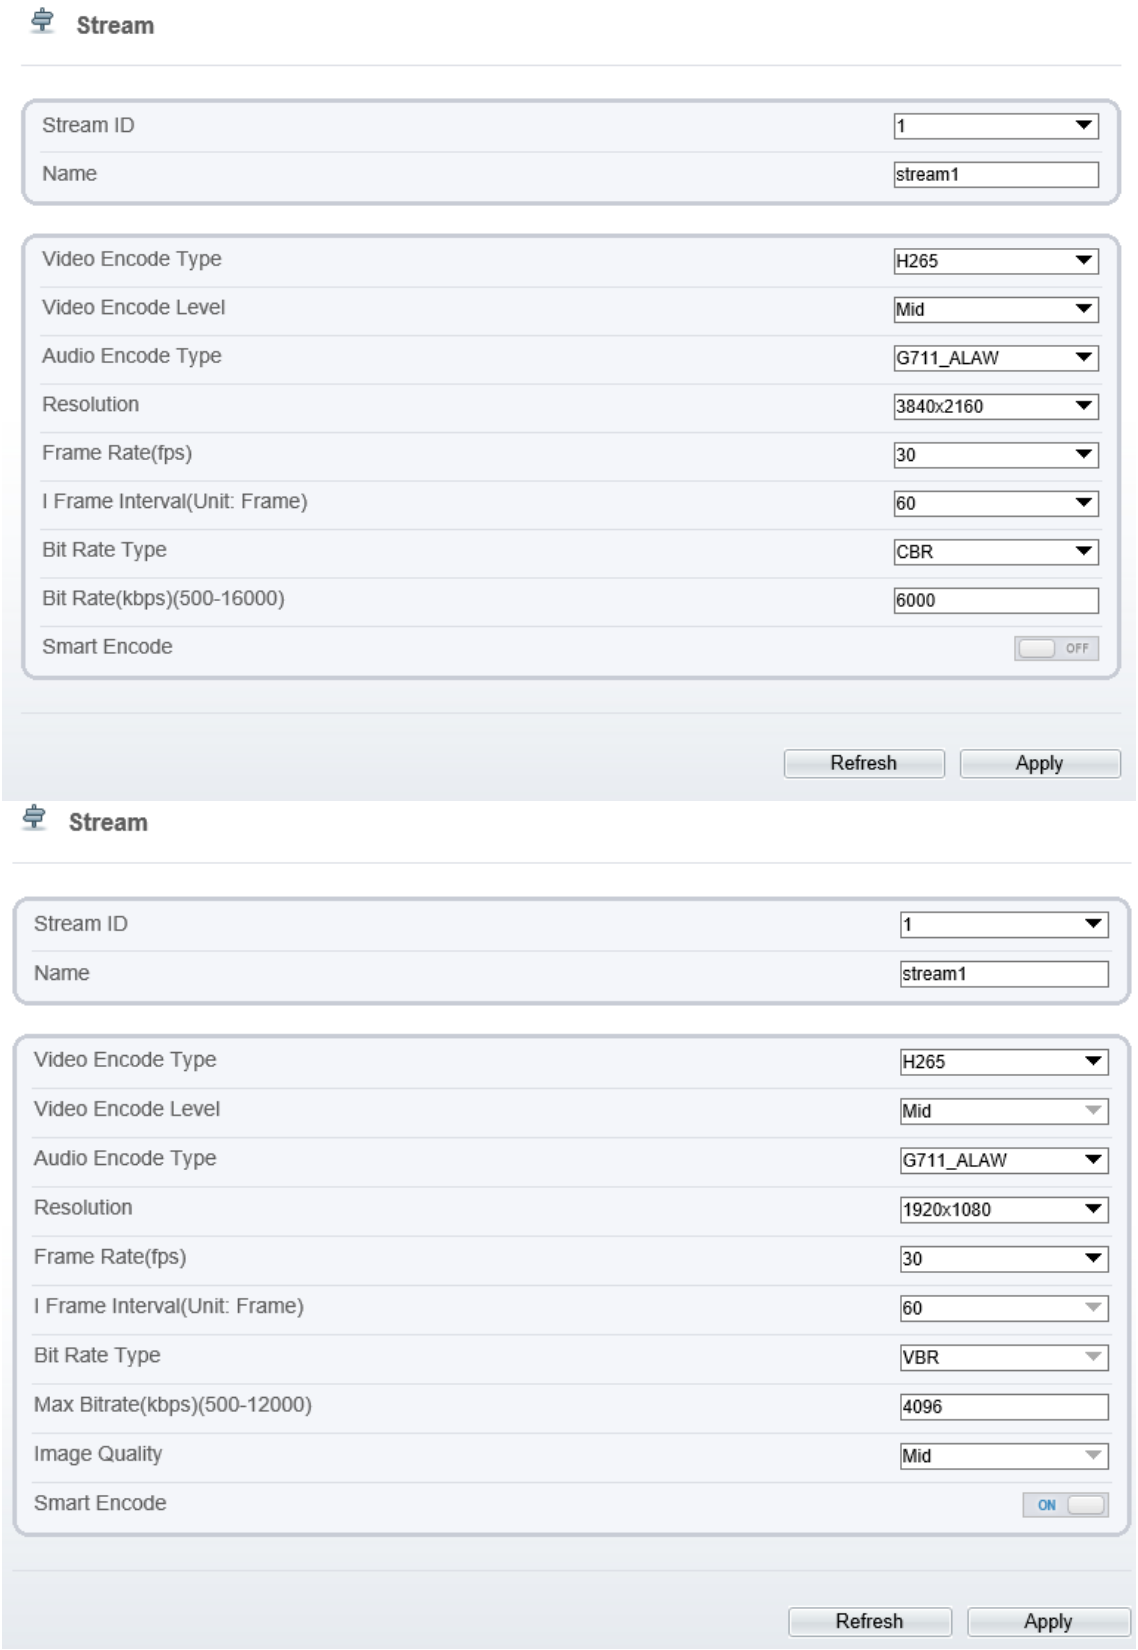

Step 2 Set the parameters according to Table 3-2.

Table 3-2 Stream configuration parameters

Parameter	Description	Setting
Stream ID	The device supports at most three main streams. • Streams 1 and 2 adopt H.264 code. • The maximum resolution can be set for streams 1. • Only a low resolution can be set for stream 2. • Stream 3 is the lowest resolution. • Stream 4 is the sub stream.	[Setting method] Select a value from the drop-down list box.
Name	Stream name. NOTE The stream name consists of Chinese character, number, character and underline.	[Setting method] Enter a value manually. The value cannot exceed 32 bytes. [Default value] Stream 1
Video Encode Type	The video codec determines the image quality and network bandwidth required by a video. Currently, the following codec standards are supported: • MJPEG MJPEG is a standard intra-frame compression codec. The compressed image quality is good. No mosaic is displayed on motion images. MJPEG does not support proportional compression and requires large storage space. Recording and network transmission occupy large hard disk space and bandwidth. MJPEG is not applicable to continuous recording for a long period of time or network transmission of videos. It can be used to send alarm images. • H.264 H.264 consists of H.264 Base Profile, H.264 Main Profile and H.264 High profile. The performance of H.264 High Profile is higher than that of H.264 Main Profile, and the performance of H.264 Main Profile is higher than that of H.264 Base Profile. If a hardware decoding device is used, select the appropriate codec based on the decoding performance of the device. H.264 High Profile has the highest requirements on the hardware performance, and H.264 Base Profile has the lowest requirements on the hardware performance. • H.265 H.265 is the advanced video encoding standard. It's the improvement standard from H.264. H.265 improves the streams, encoding quality and algorithm complexity to make configuration as optimization.	[Setting method] Select a value from the drop-down list box. [Default value] H.264 High Profile NOTE The H.264 High Profile codec means high requirements on the hardware. If the hard-decoding capability is low, use H.264 Main Profile or H.264 Base Profile.

Parameter	Description	Setting
Audio Encode Type	The following audio codec standards are supported: • G711_ULAW: mainly used in North America and Japan. • G711_ALAW: mainly used in Europe and other areas. • RAW_PCM: codec of the original audio data. This codec is often used for platform data.	[Setting method] Select a value from the drop-down list box.
Resolution	A higher resolution means better image quality. NOTE IP cameras support the different resolutions based on the model.	[Setting method] Select a value from the drop-down list box.
Frame Rate(fps)	Frame rate is the number of images, shots, or frames that a camera can take per second. The frames per second determine the smoothness of a video. A video whose frame rate is higher than 22.5 f/s is considered as smooth by human eyes. Frame rates for different frequencies are as follows: • 50 Hz: 1–25 f/s • 60 Hz: 1–30 f/s NOTE The frequency is set on the **Device Configuration** > **Camera** page. The biggest MJPEG coding format frame rate is 12 frames per second.	[Setting method] Select a value from the drop-down list
I Frame Interval(f)	I frame do not require other frames to decode. A smaller I frame interval means better video quality but higher bandwidth.	[Setting method] Select a value from the drop-down list
Bit Rate Type	The bit rate is the number of bits transmitted per unit of time. The following bit rate types are supported: • Constant bit rate (CBR) The compression speed is fast; however, improper bit rate may cause vague motion images. • Variable bit rate (VBR) The bit rate changes according to the image complexity. The encoding efficiency is high and the definition of motion images can be ensured.	[Setting method] Select a value from the drop-down list box.
Max Bitrate (500-12000)	Indicates the maximal value of the bit rate.	[Setting method] Enter a value manually.
Image Quality	The video quality the camera output.	[Setting method] Select a value from the drop-down list box.

Parameter	Description	Setting
Smart Encode	Smart Encode. • Smart encode includes H.264 & H.265. • The storage space will be reduced fifty percent when smart encode is enabled. • Only main stream supports smart encode.	[Setting method] Click the button on to enable **Smart Encode**.

Step 3 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If the message "Apply failed!" is displayed, you must apply for the Parameter Configure permission from an administrator. For details, see 11.1 Configure a User.
- If a message indicating that the bit rate invalid is displayed, enter a new bit rate value.

----End


3.3 ROI Parameter

Procedure

Step 1 Click Configuration > Stream > ROI.

The **ROI** page is displayed, as shown in Figure 3-3.

Figure 3-3 ROI Configuration page

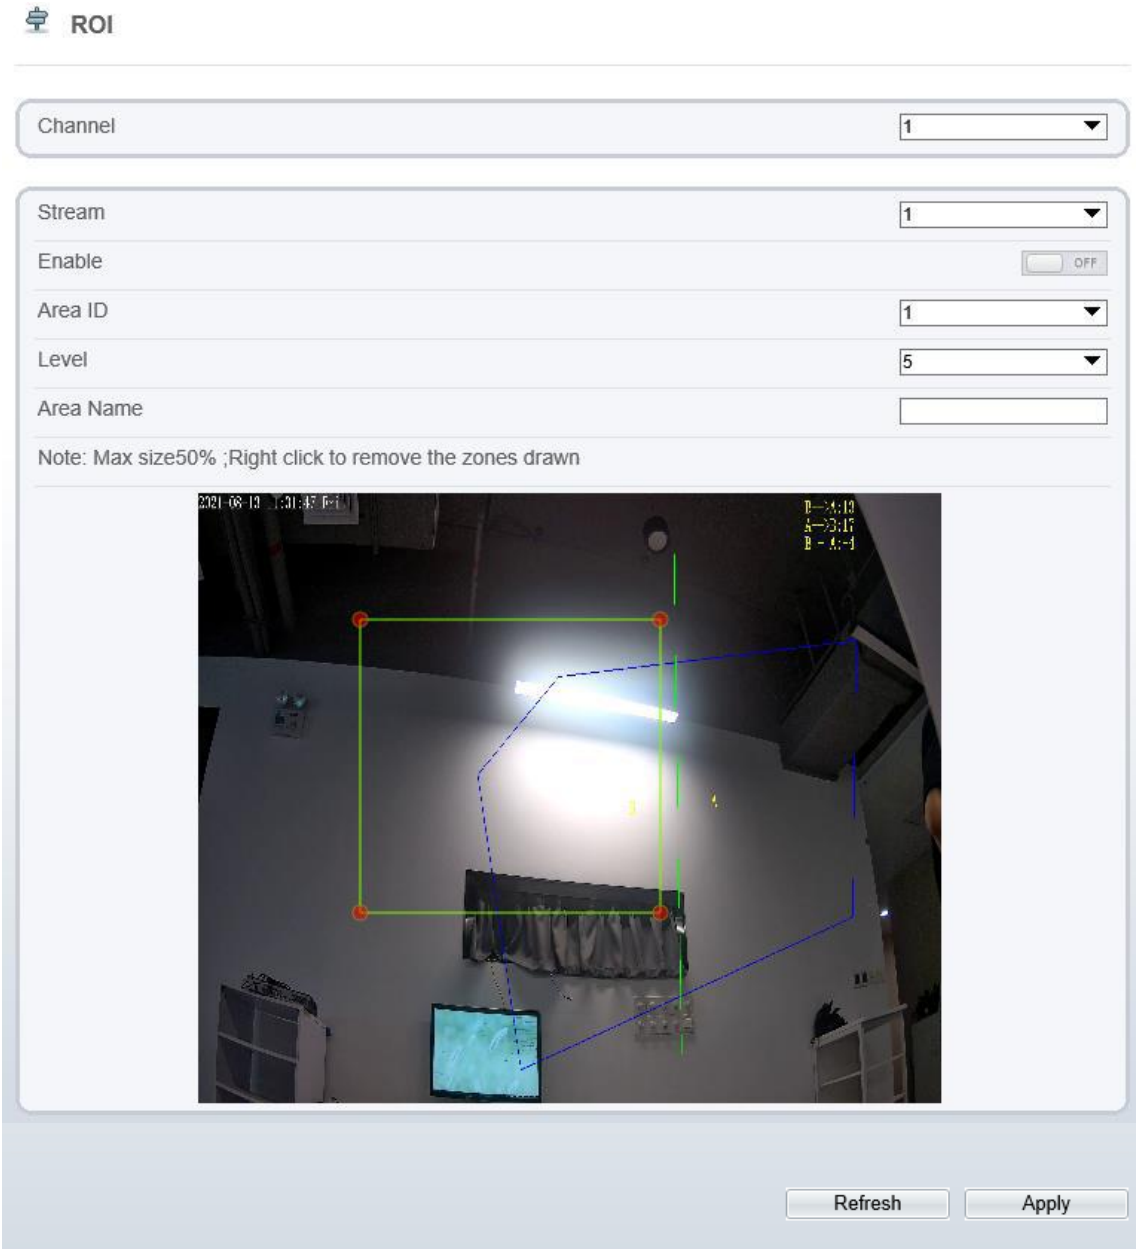

Step 2 Set the parameters according to Table 3-3.

Table 3-3 ROI configuration parameters

Parameter	Description	Setting
Stream	Stream ID.	[Setting method] Select a value from the drop-down list box. [Default value] Stream 1
Enable	Enable the ROI	[Setting method] Click the button. [Default value] OFF

Parameter	Description	Setting
Area ID	ROI area ID	[Setting method] Select a value from the drop-down list box. [Default value] 1
Level	The visual effect of ROI. The higher the level is, the clearer the area is; the more blurred outside the area.	[Setting method] Select a value from the drop-down list box. [Default value] 5
Area Name	The marked name used for areas.	[Setting method] Enter a value manually. The value cannot exceed 32 bytes.

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End


3.4 Snapshot

Procedure

Step 1 Click Configuration > Stream > Snapshot.

The **ROI** page is displayed, as shown in Figure 3-3.

Figure 3-4 ROI Configuration page

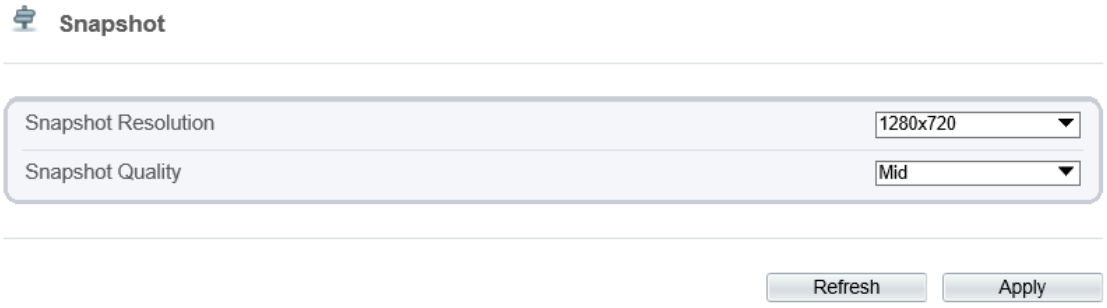

Step 2 Set the parameters according to Table 3-3.

Table 3-4 ROI configuration parameters

Parameter	Description	Setting
Snapshot Resolution	Choose resolution of snapshot	[Setting method] Select a value from the drop-down list box. [Default value] 1280*720
Snapshot Quality	Choose the quality of snapshot.	[Setting method] Click the button. [Default value] Mid

----End

3.5 Local Network

Description

Local network parameters include:


- IP protocol
- IP address
- Subnet mask
- Default gateway
- Dynamic Host Configuration Protocol (DHCP)
- Preferred Domain Name System (DNS) server
- Alternate DNS server
- MTU

Procedure

Step 1 Choose Configuration > Device > Local Network.

The **Local Network** page is displayed, as shown in Figure 3-5.

Figure 3-5 Local Network page

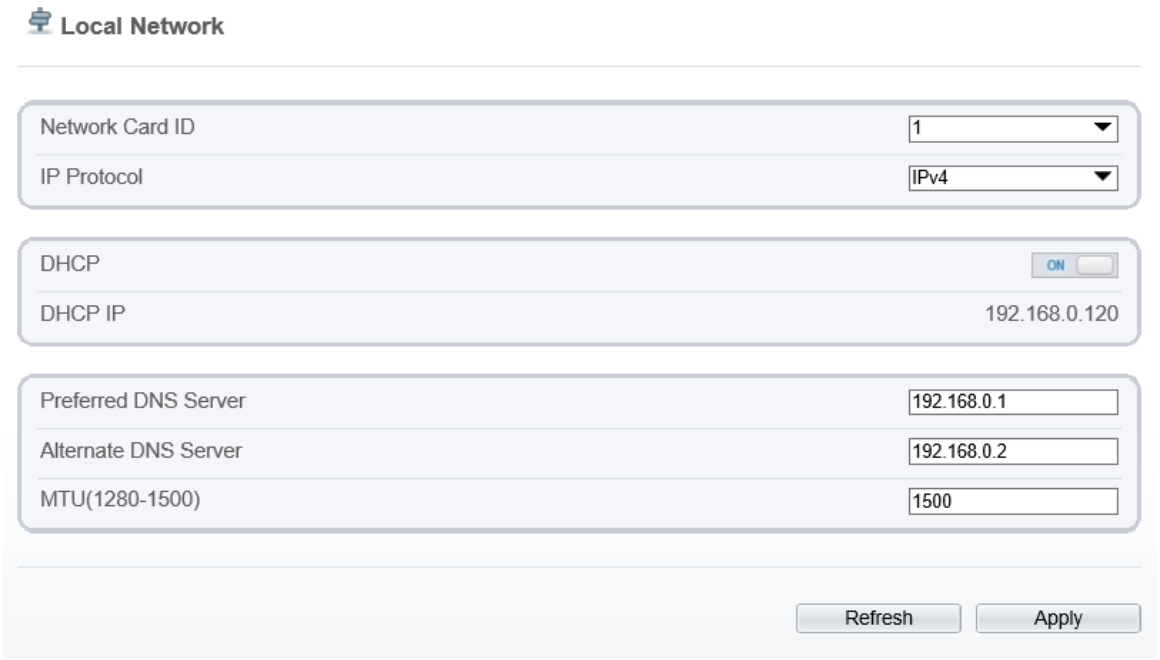

Step 2 Set the parameters according to Table 3-5.

Table 3-5 Local network parameters

Parameter	Description	Setting
IP Protocol	IPv4 is the IP protocol that uses an address length of 32 bits.	[Setting method] Select a value from the drop-down list box. [Default value] IPv4
Obtain IP address automatically	The device automatically obtains the IP address from the DHCP server.	[Setting method] Click the button on to enable **obtain IP address automatically**. NOTE To query the current IP address of the device, you must query it on the platform based on the device name.
DHCP IP	IP address that the DHCP server assigned to the device.	N/A
IP Address	Device IP address that can be set as required.	[Setting method] Enter a value manually. [Default value] 192.168.0.120

Parameter	Description	Setting
Subnet Mask	Subnet mask of the network adapter.	[Setting method] Enter a value manually. [Default value] 255.255.255.0
Default Gateway	This parameter must be set if the client accesses the device through a gateway.	[Setting method] Enter a value manually. [Default value] 192.168.0.1
Preferred DNS Server	IP address of a DNS server.	[Setting method] Enter a value manually. [Default value] 192.168.0.1
Alternate DNS Server	IP address of a domain server. If the preferred DNS server is faulty, the device uses the alternate DNS server to resolve domain names.	[Setting method] Enter a value manually. [Default value] 192.168.0.2
MTU	Set the maximum value of network transmission data packets.	[Setting method] Enter a value manually. NOTE The MTU value is range from 1280 to 1500, the default value is 1500, Please do not change it arbitrarily.

Step 3 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings. The message "Set network parameter success, Please login system again" is displayed. Use the new IP address to login to the web management system.
- If the message "Invalid IP Address", "Invalid Subnet Mask", "Invalid default gateway", "Invalid primary DNS", or "Invalid space DNS" is displayed, set the parameters correctly.

----End

3.6 Device Port

Description


You must configure the HTTP port, control port, Real Time Streaming Protocol (RTSP) port and SSL Control port for device route mapping in a LAN.

Procedure

Step 1 Choose Configuration > Device > Device Port.

The **Device Port** page is displayed, as shown in Figure 3-6.

Figure 3-6 Device Port page

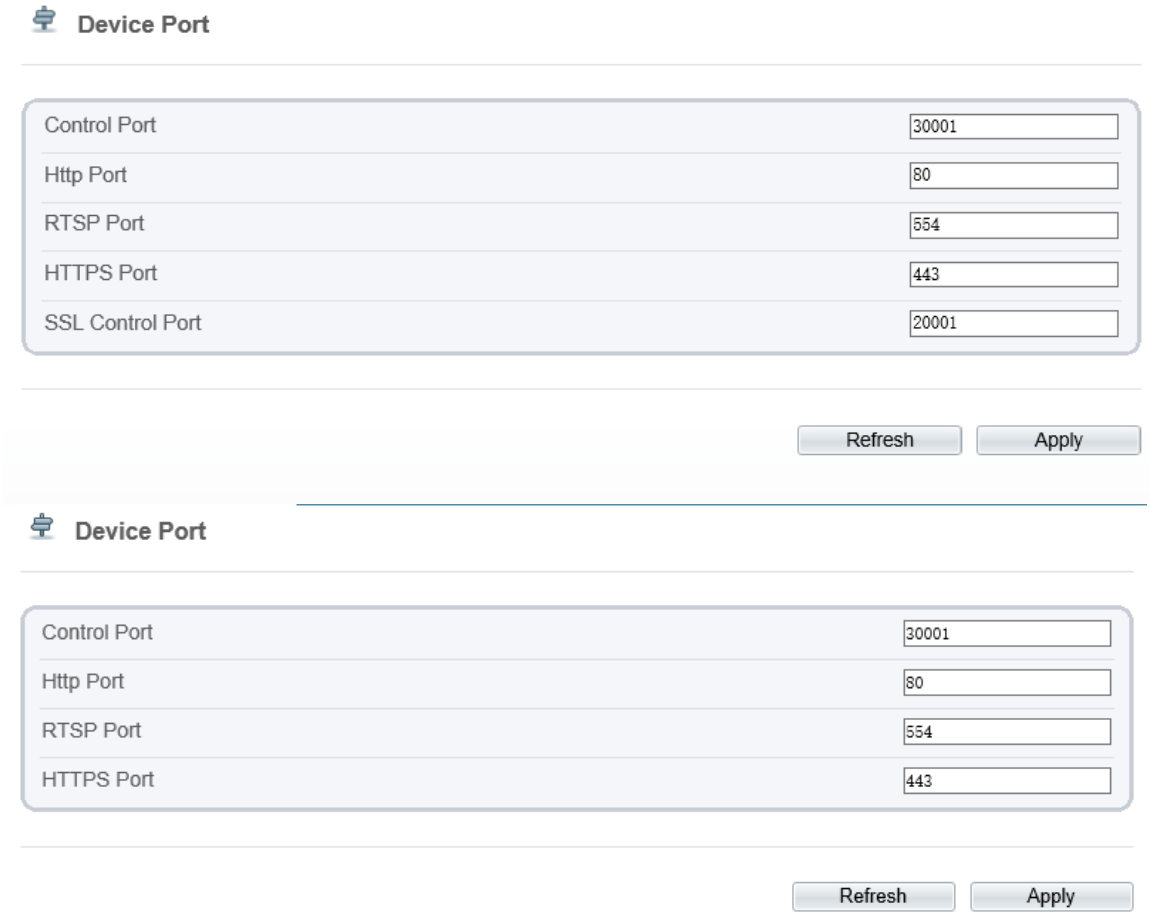

Step 2 Set the parameters according to Table 3-6.

Table 3-6 Device port parameters

Parameter	Description	Setting
Control Port	Port used for audio and video transfer and signaling interaction.	[Setting method] Enter a value manually. [Default value] 30001
HTTP Port	Port used in web access.	[Setting method] Enter a value manually. [Default value] 80
RTSP Port	RTSP protocol port.	[Setting method] Enter a value manually. [Default value] 554

Parameter	Description	Setting
HTTPS Port	Hyper Text Transfer Protocol over Secure Socket Layer	[Setting method] Enter a value manually. [Default value] 443
SSL Control Port	Secure socket layer control port. Only for Some Models.	[Setting method] Enter a value manually. [Default value] 20001

NOTE

It's not recommended to modify the control port, for details about the value ranges of the control port, HTTP port and SSL Control port, see the communication matrix.

Step 3 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If the message "Invalid Control Port, please input an integer between 1025 and 65535" is displayed, enter correct port numbers.

----End

3.7 Date and Time

Description

On the **Date and Time** page, you can modify the date and time. Parameters that can be set include:

- Time zone and daylight-saving time (DST)
- Date and time
- Network Time Protocol (NTP) server

Procedure

Step 1 Choose Configuration > Device > Date and Time.

The **Date and Time** page is displayed, as shown in Figure 3-7. Table 3-7 describes the parameters.

Figure 3-7 Date and Time page

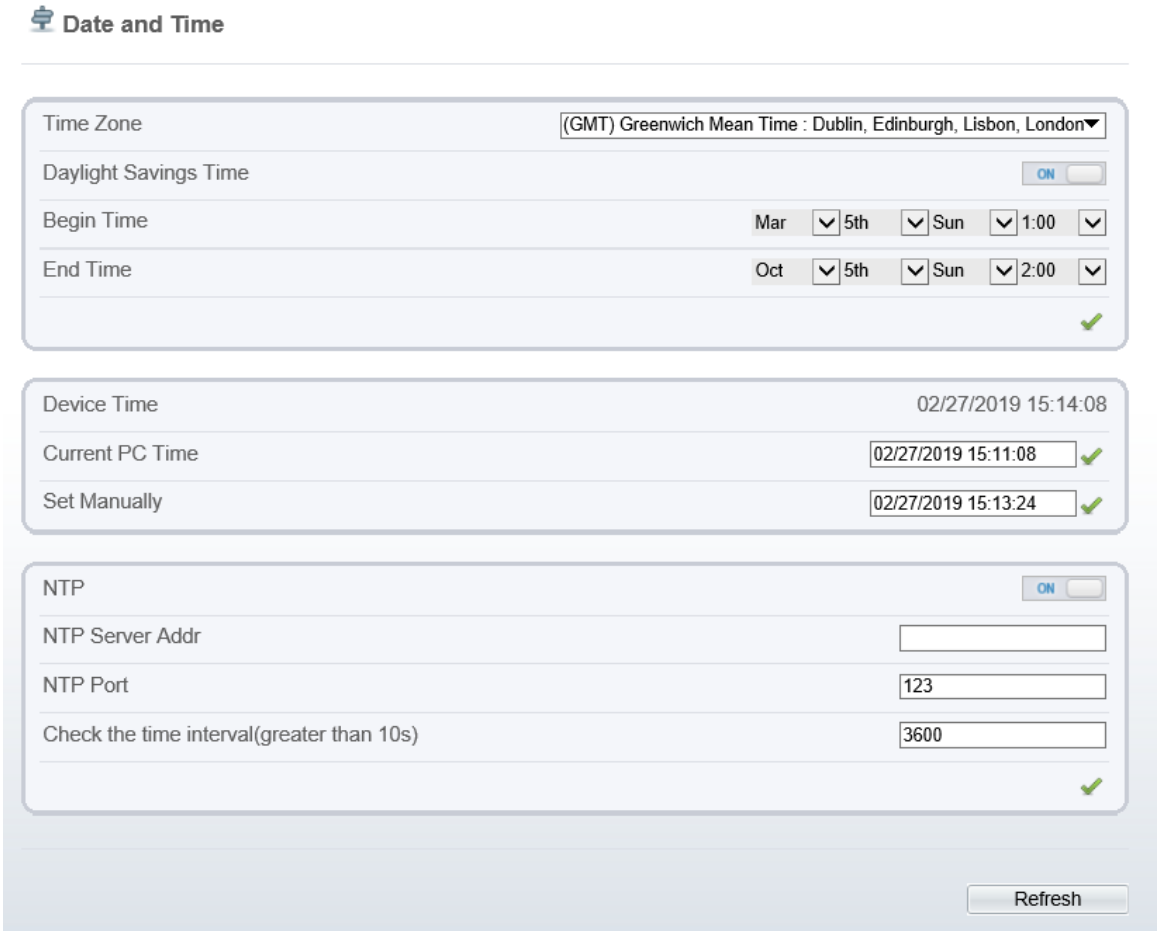


Table 3-7 Date and Time parameters

Parameter	Description	Setting
Time Zone	N/A	[Setting method] Select a value from the drop-down list box. [Default value] Greenwich mean time
Daylight Saving Time	When the DST start time arrives, the device time automatically goes forward one hour. When the DST end time arrives, the device time automatically goes backward one hour. NOTE DST is the practice of advancing clocks so that evenings have more daylight and mornings have less. Currently, about 110 countries in the world use DST. Different countries have different DST provisions. Since March 27, 2011, Russia has started to use permanent DST.	[Setting method] Click the button on to enable **Daylight Saving Time**.

Parameter	Description	Setting
Device Time	Device display time.	[Setting method] • Synchronize the time from the PC. • Enter a value manually.
Current PC Time	Time on the current PC.	N/A
Set Manually	Enables you to manually set the device time.	[Setting method] Click **Set Manually** and set the date and time in the format *YYYY-MM-DD HH:MM: SS*.
NTP	IP address or domain name of the NTP server.	[Setting method] Click the button on to enable **NTP** and enter a value manually.
NTP Server Addr	The NTP server IP.	[Setting method] Enter a value manually.
NTP Port	Port number of the NTP server.	[Setting method] Enter a value manually. [Default value] 123
Check the time interval (at least 10 s)	Set time interval to check if the device time synchronizes with the NTP server time.	[Setting method] Enter a value manually. [Default value] 3600

Step 2 Select a time zone from the **Time Zone** drop-down list box.

Step 3 (Optional) Click the button on to enable **Daylight Saving Time** and specify the DST start time and end time.

Step 4 Modify the device time.

- Synchronizing time from the PC

  Click **Current PC Time**.
- Manually setting the device time
  - Click Set Manually.
  - A time setting control is displayed.
  - Set the date and time.

Step 5 Configure the NTP.

1. Click the button on to enable **NTP**.
2. Enter the IP address or domain name of the NTP server, the port number and the time interval.

Step 6 Click .

The message "Apply success!" is displayed and the system saves the settings.

----End

3.8 Camera

Procedure

Step 1 Choose Configuration > Device > Camera.

The **Camera** page is displayed, as shown in Figure 3-8. Table 3-8 describes the parameters.

Figure 3-8 Camera page

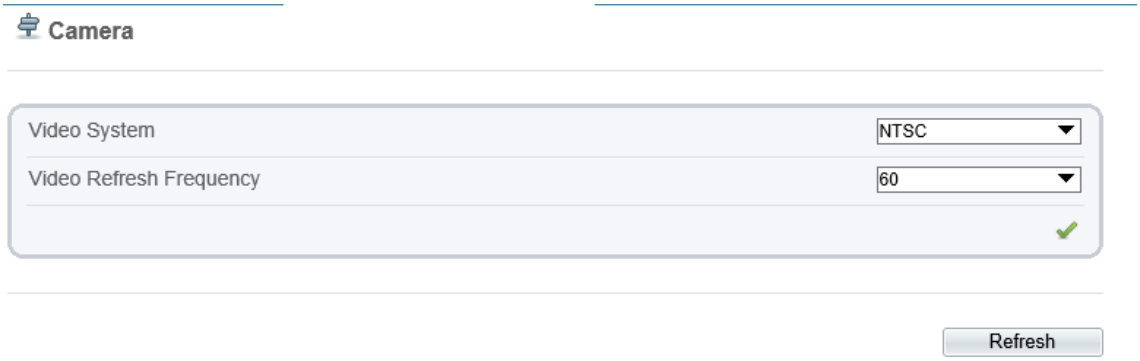


Table 3-8 Camera parameters

Parameter	Description	Setting
Video System	The options are as follows: • PAL: Used in Europe and China mainland, India, Pakistan, etc. • NTSC: Used in USA, Japan, South Korea, and Taiwan Province of China, etc.	[Setting method] Select a value from the drop-down list box. [Default value] PAL NOTE Whether the video system can be changed depends on the device model.
Video Refresh Frequency	The options are as follows: • 50 Hz: corresponds to the PAL system. • 60 Hz: corresponds to NTSC system.	[Setting method] Follow the video standard.

Step 2 Enter a channel name.

NOTE

The channel name must be within the length of 0 to 32 bytes, it is combined with digital and character (except for some special character, such as< > % & \",=+|).

Step 3 Click .

The message "Apply success!" is displayed.

NOTE

If the video system is modified, the message "The device will be restart, are you sure to modify?" is displayed, and the system automatically saves the settings. The settings take effect after the device restarts.

----End

3.9 OSD

Description

The on-screen display (OSD) function allows you to display the device name, channel ID and name, time, and other customized contents on videos. You can drag the OSD frames to anywhere you want to put.


- When the resolution is D1 and CIF, the OSD customized in web interface can show at most 22 words normally.
- The OSD support simplified Chinese, English, digital and some special character only.

Procedure

Step 1 Choose Configuration > Device > OSD.

The **OSD** page is displayed, as shown in Figure 3-9.

Figure 3-9 PTZ OSD page

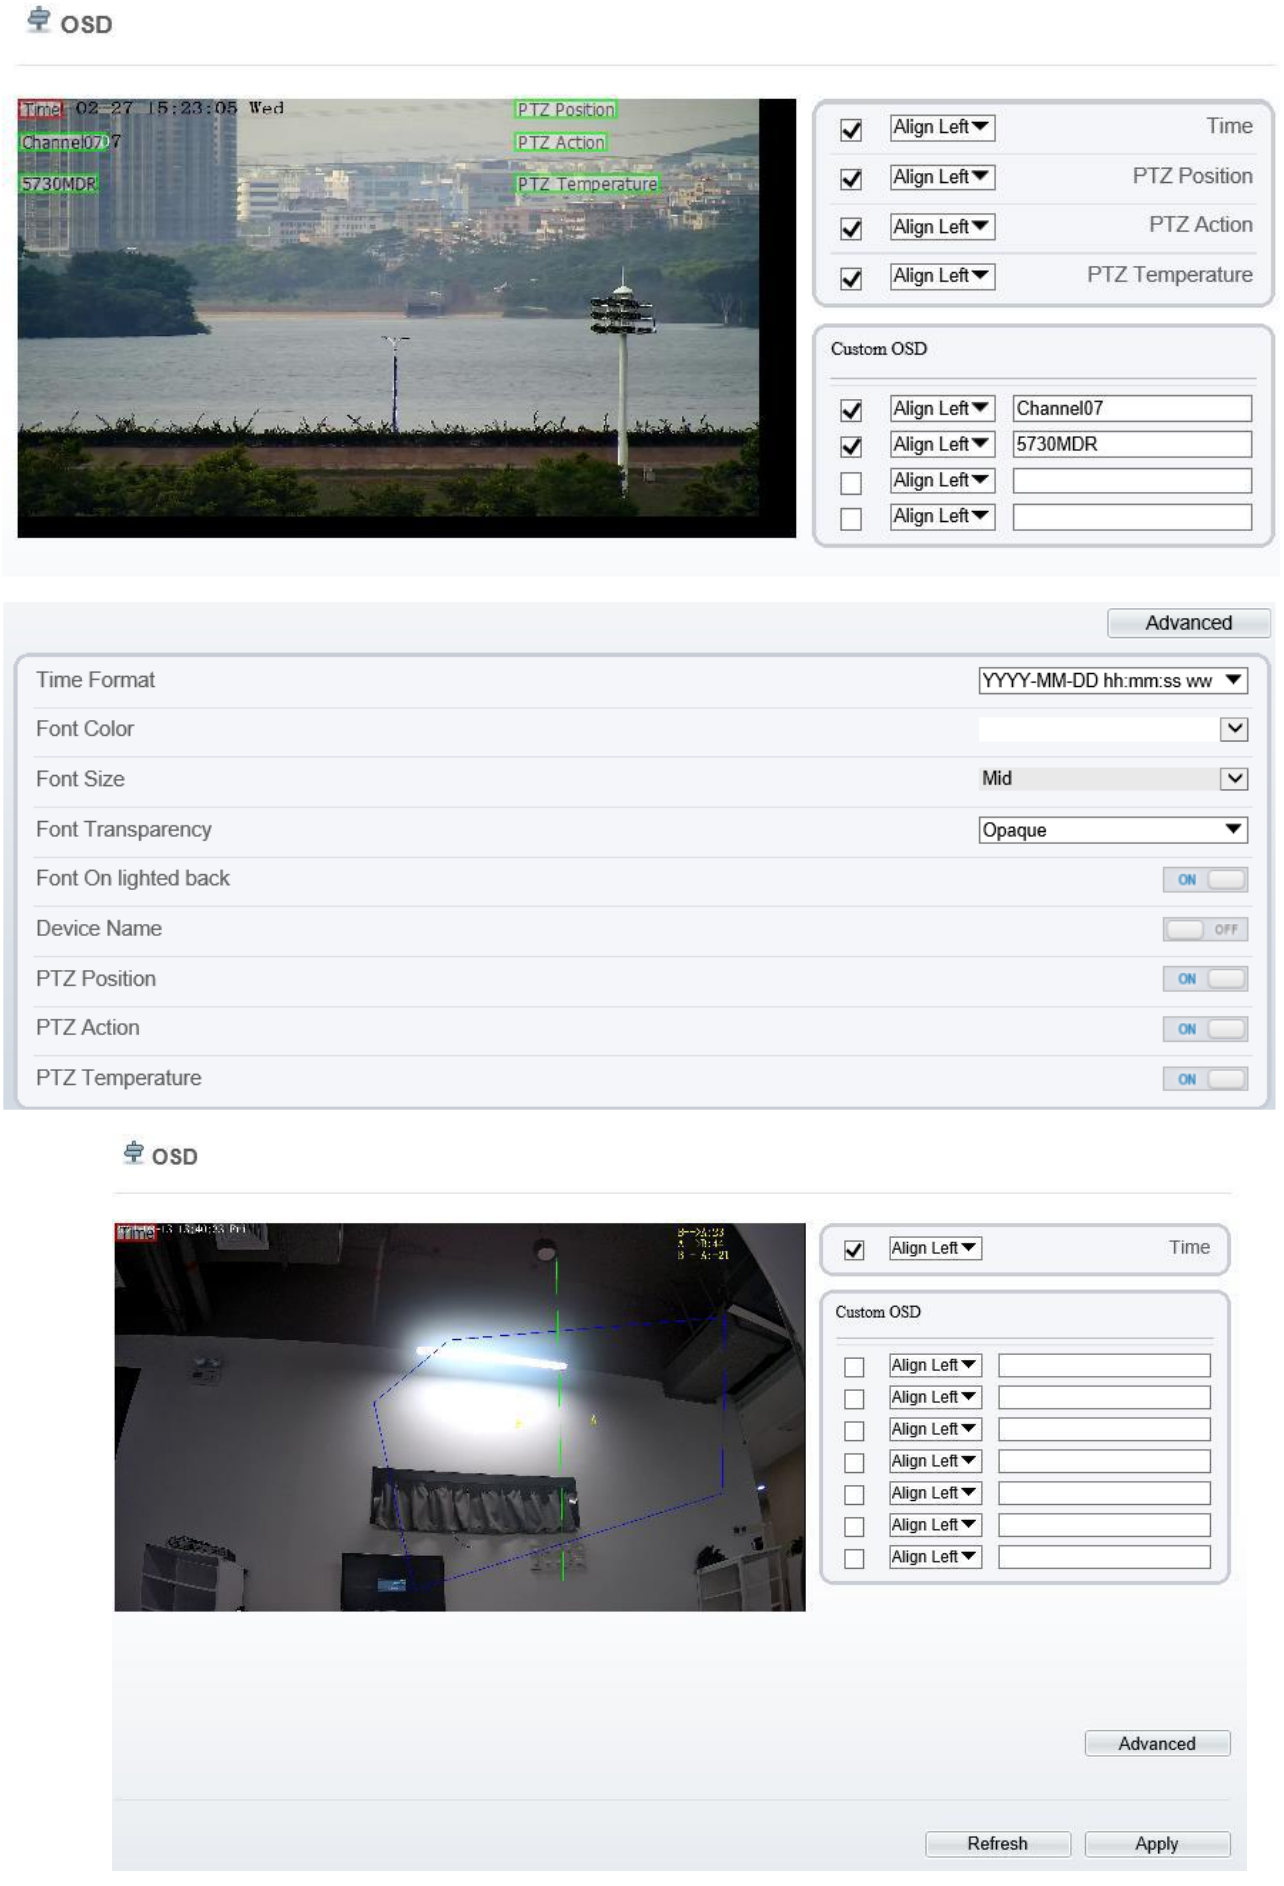

Step 2 Set the parameters according to Table 3-9.

NOTE

- There are at most six OSD display areas..

Table 3-9 OSD parameters

Parameter	Description	Setting
Time	Indicates whether to display the time.	[Setting method] Tick the time.
Focusing on the state	Displays the state of focusing on. NOTE: Only Supplied for camera of auto focusing lens.	[Setting method] Tick the Focusing on the state.
Custom OSD	Enables you to enter a line of characters.	[Setting method] 1. Tick the custom OSD list. 2. Enter the characters. Click to save the value.
Time Format	Format in which the time is displayed.	[Setting method] Select a value from the drop-down list box. [Default value] YYYY-MM-DD hh:mm:ss ww
Font Color	Set the font color.	[Setting method] Select a value from the drop-down list box. [Default value] Blank
Font Size	Set the font size.	[Setting method] Select a value from the drop-down list box. [Default value] Mid
Font Transparency	Set the font transparency.	[Setting method] Select a value from the drop-down list box. [Default value] Opaque
Font on lighted back	Enable the font on lighted back.	[Setting method] Click the button on to enable **Font on lighted back**.
Device Name	Indicates whether to display the device name.	[Setting method] Click the button on to enable **Device Name**

Step 3 Click **Advanced,** set the parameter of " Time Format", "Font Color", "Font Transparency", "Font on lighted back"

Step 4 Click **Apply**.

The message "Apply success!" is displayed And the system saves the settings.

----End

3.10 Microphone (Only for Some Models)

Description

On the **Microphone** page, you can set the microphone input mode and volume.

Procedure

Step 1 Choose Configuration > Device > Microphone.

The **Microphone** page is displayed, as shown in Figure 3-10. Table 3-10 describes the parameters.

Figure 3-10 Microphone page

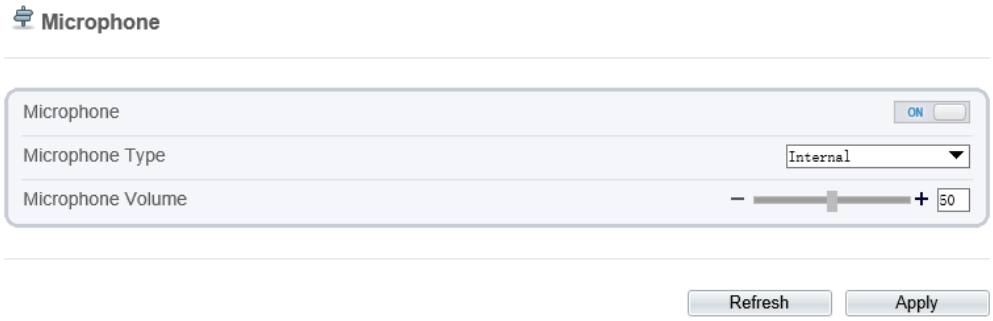


Table 3-10 Microphone parameters

Parameter	Description	Setting
Enable Microphone	Indicates whether to enable the microphone function.	[Setting method] Click the button on to enable microphone.
Microphone Type	Microphone types include: • Line In An active audio input is required.	[Setting method] Select a value from the drop-down list box.
Microphone Volume	Allows you to adjust the microphone volume.	[Setting method] Slide the slider left or right. [Default value] 50 NOTE The value ranges from 0 to 100.

Step 2 Click **Apply**.

The message "Apply success!" is displayed. And the system saves the settings.

----End

3.11 Audio Output (Only for Some Models)

Description

On the **Microphone** page, you can set the microphone input mode and volume.

Procedure

Step 1 Choose Configuration > Device > Audio Output.

The **Audio Output** page is displayed, as shown in Figure 3-11. Table 3-11 describes the parameters.

Figure 3-11 Audio output page

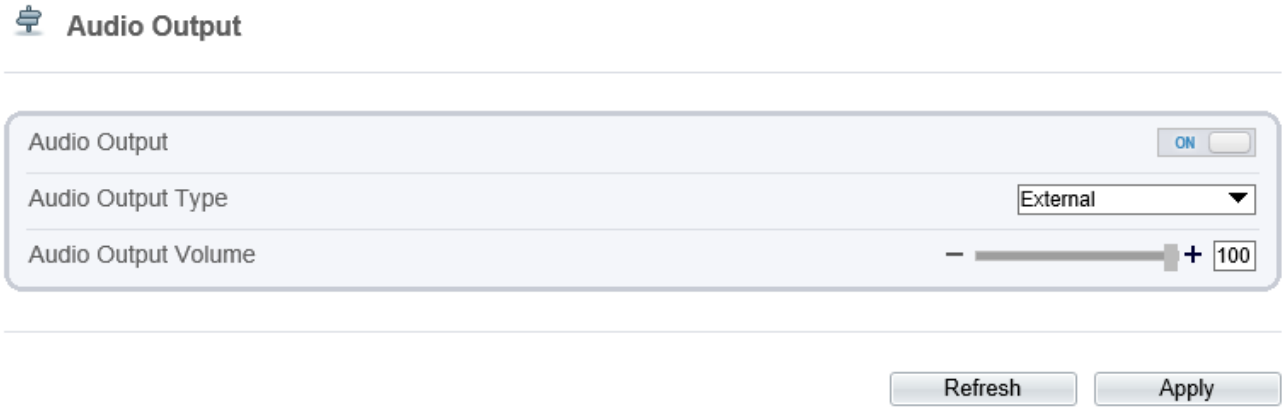


Table 3-11 Audio output parameters

Parameter	Description	Setting
Enable audio output	Indicates whether to enable the audio output function.	[Setting method] Click the button on to enable audio output.
Microphone Type	Microphone types include: • External An active audio output is required.	[Setting method] Select a value from the drop-down list box.
Audio output Volume	Allows you to adjust the audio output volume.	[Setting method] Slide the slider left or right. [Default value] 50 NOTE The value ranges from 0 to 100.

Step 2 Click **Apply**.

The message "Apply success!" is displayed. And the system saves the settings.

----End

3.12 CVBS Function (Suppled for some models)

Preparation

Connect a display device to the VIDEO OUT port.

Description


When the analog output function is enabled, the IP camera can send analog signals to a video server or display device through the VIDEO OUT port.

Procedure

Step 1 Choose Configuration > Device > CVBS.

The **BNC Video Output** page is displayed, as shown in Figure 3-12.

Figure 3-12 BNC **Video Output** page

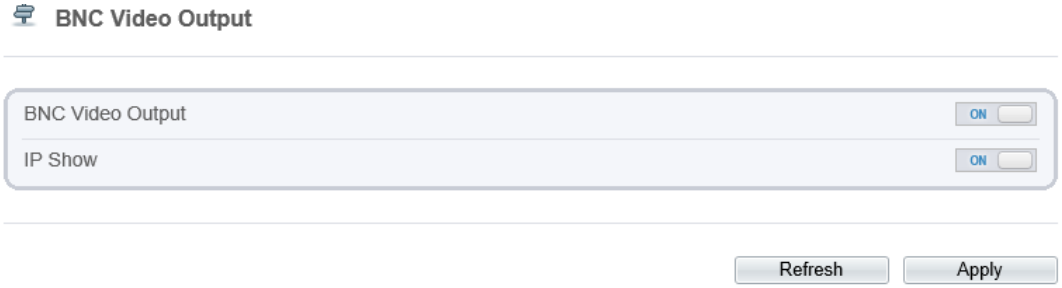

Step 2 Click the button on to enable **BNC Video Output**.

Step 3 Click **Apply**.

The message "Apply success!" is displayed. And the system saves the settings.

----End


3.13 System Service

Procedure

Step 1 Choose Configuration > Device > System.

The **System Service** page is displayed, as shown in Figure 3-13.

Figure 3-13 System Service page

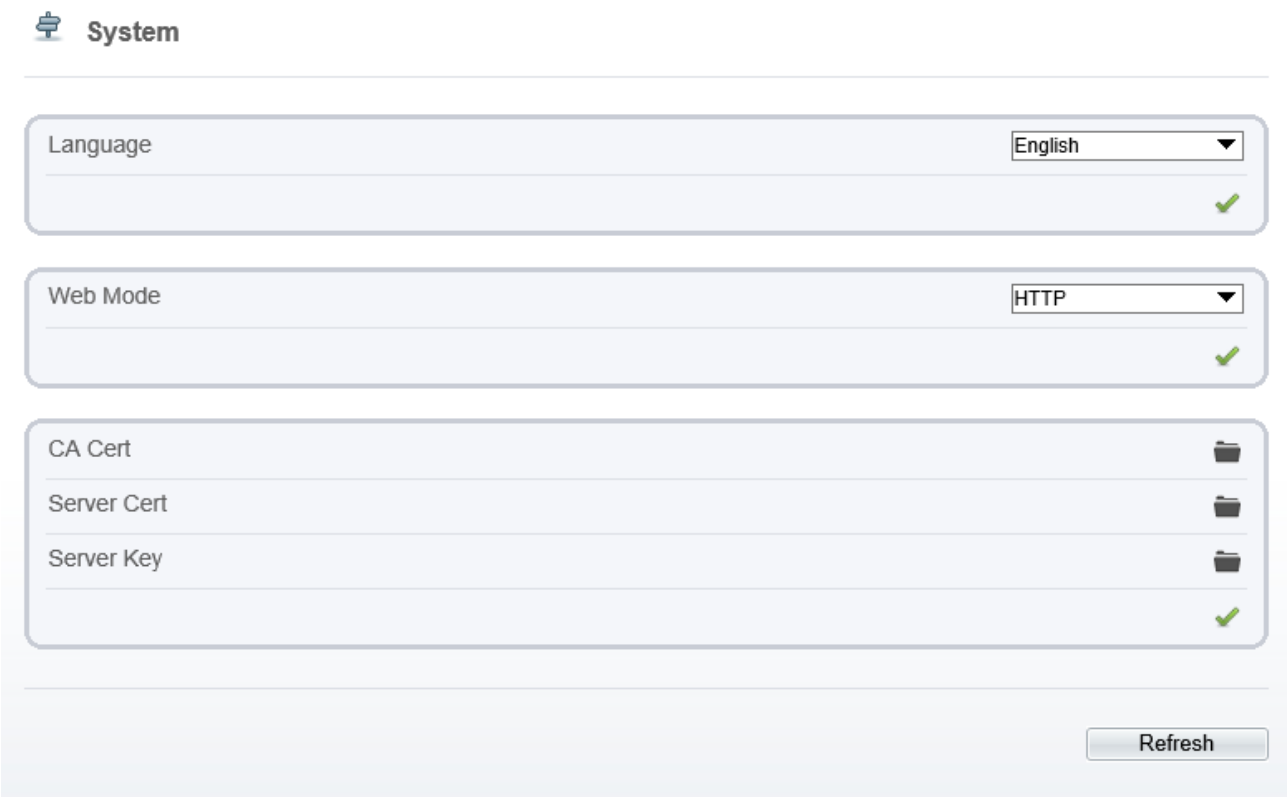

Step 2 Select an language from the **Language** drop-down list box.

Step 3 Click , the message "Apply success" is displayed.

Step 4 Click **OK**, the system saves the settings.

Step 5 Select a Web Mode from the **Web Mode** drop-down list box.

Step 6 Click , the message "This operation will lead to the device to restart, continue?" is displayed.

Step 7 Click **OK**, the device restarts and saves the settings automatically.

Step 8 Choose the CA cert, server cert, server cert, server key from the local folder,

Step 9 Click to update the certificate.

----End

3.14 Video Denoise (Only for Some Models)

Description


On the **Voice Denoise** page, you can enable the Voice Denoise to reduce the effect of external environmental noise on the built-in MIC.

Procedure

Step 1 Choose **Configuration > Device > Voice Denoise**

The **Voice Denoise** page is displayed, as shown in Figure 3-14.

Figure 3-14 Voice Denoise page

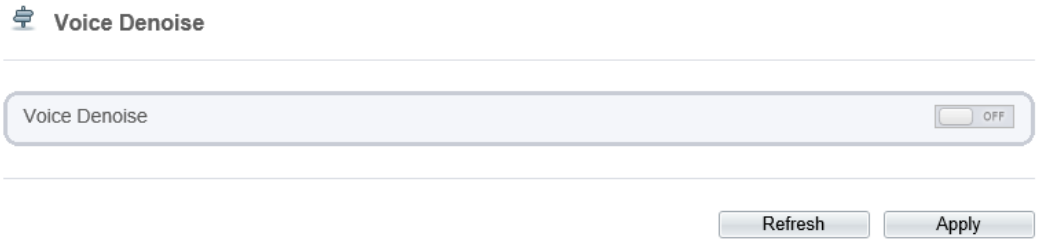

Step 2 Click the **Voice Denoise** button to enable the Voice Denoise.

Step 3 Click **Apply**.

The message "Apply success" is displayed, the system saves the setting.

----End


3.15 Software Licenses

Procedure

Step 1 Click Configuration > Device > Software Licenses.

The **Software Licenses** page is displayed, as shown in Figure 3-15.

Figure 3-15 Software licenses page

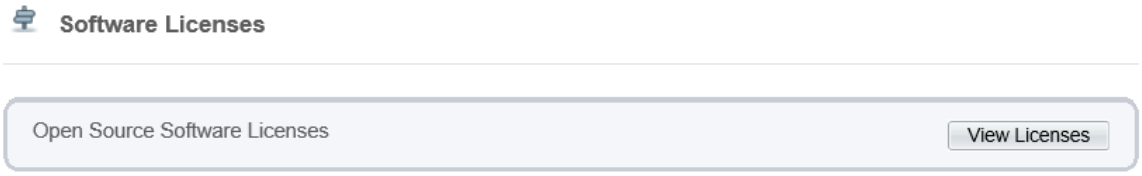

Step 2 Click the view licenses, you can view the open source software licenses.

----End

4 Configure External Devices

4.1 External PTZ Parameters(Only for Some Models)

Description

When the IP camera is connected to an external PTZ, you can set external PTZ parameters, such as **PTZ Protocol**, **PTZ Address**, **Baud Rate**, and **Data Bits**.

CAUTION


This function is available only for a camera connected to an external PTZ. The PTZ address must be set to the address of the external PTZ; otherwise, the external PTZ cannot be used.

Procedure

Step 1 Choose Configuration > External Device > PTZ.

The **PTZ** page is displayed, as shown in Figure 4-1.

Figure 4-1 PTZ page

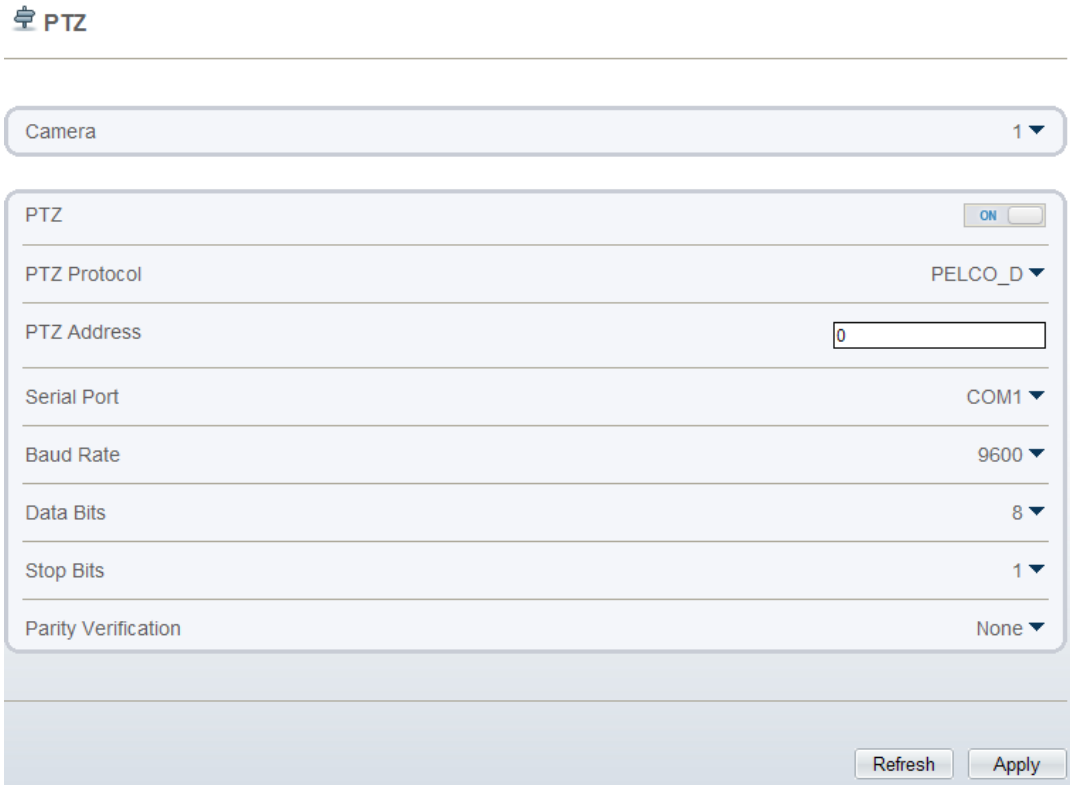

Step 2 Set the parameters according to Table 4-1.

Table 4-1 PTZ parameters

Parameter	Description	Setting
PTZ	Enable this function if the device connects to an external PTZ. NOTE This check box is dimmed for an IP dome camera.	[Setting method] Click the button on to enable PTZ configuration.
PTZ Protocol	Protocol used by the external PTZ, such as PELCO_D and PELCO_P.	[Setting method] Select a value from the drop-down list box. NOTE When configure the external PTZ parameters, these parameters must match the settings on the external PTZ.
PTZ Address	Address of the external PTZ.	
Serial Port	The default value is **COM1**.	
Baud Rate	Baud rate used by the external PTZ. The value ranges from 300 bit/s to 115200 bit/s. The default value is **4800** bit/s.	
Data Bits	The value must match the setting used by the external PTZ. It can be set to a value ranging from 4 to 8. Generally, the value is 8.	
Stop Bits	N/A	
Parity Verification	N/A	

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

5 Configure Intelligent Analysis

5.1 Perimeter


Description

The perimeter function refers to that an alarm is generated when target objects (such as person, car, and both person and car) enter the deployment area.

Procedure

Step 1 Select **Intelligent Analysis** > **Perimeter** to access the **Perimeter** interface, as shown in Figure 5-1

Figure 5-1 Perimeter Setting Interface

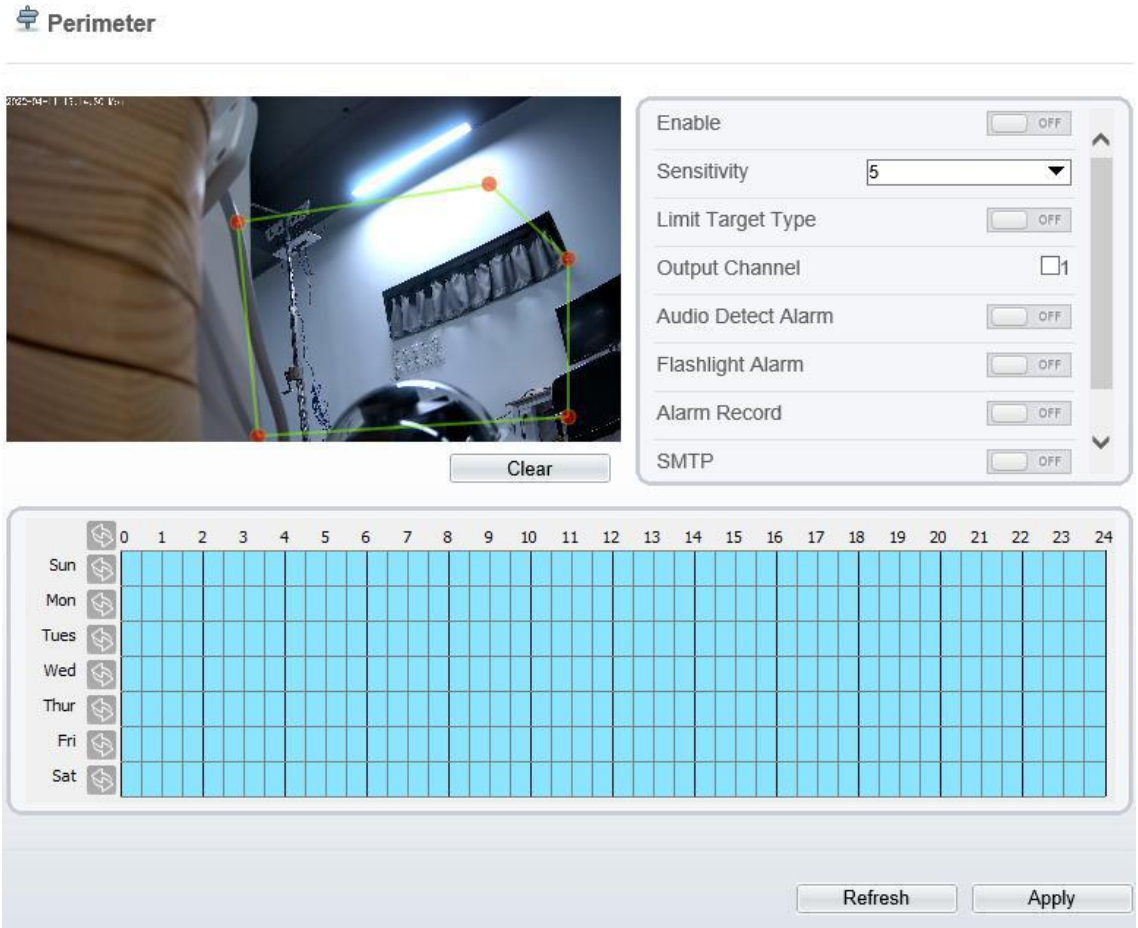

Step 2 Set all parameters for perimeter. Table 5-1 describes the specific parameters.

Table 5-1 Perimeter Parameter Description

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] OFF
Sensitivity	The sensitivity of detecting the target, when the value is high, the target can be detected easily, but the accuracy will be lower.	[How to set] Choose from the drop-down list [Default value] 5
Limit type	Enable to choose the limit type (person or car / person / car) from type drop-down list.	[How to set] Click Enable to enable. [Default value] OFF
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for Some Models.	[How to set] Click to select an ID.
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. More details please refer to chapter 10.5	[How to set] Click to enable SMTP. [Default value] OFF

Parameter	Description	Setting
FTP Upload	Enable the button to enable File Transfer Protocol. More details please refer to chapter 10.6 .	[How to set] Click to enable FTP Upload. [Default value] OFF

Step 3 Set a deployment area

Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing, as shown in Figure 5-2.

Figure 5-2 Deployment Area Setting Interface



NOTE

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn.
- The quantity of deployment areas is not limited yet and will be described in future when a limit is applied.

Step 4 Set deployment time

Method 1：Click left mouse button to select any time point within 0:00-24:00 from Monday to Sunday as shown in Figure 5-3.

Method 2：Hold down the left mouse button, drag and release mouse to select the deployment time within 0:00-24:00 from Monday to Sunday.


NOTE

When you select time by dragging the cursor, the cursor cannot be moved out of the time area. Otherwise, no time can be selected.

Method 3：Click in the deployment time page to select the whole day or whole week.

Deleting deployment time: Click again or inverse selection to delete the selected deployment time.

Figure 5-3 Deployment Time Setting Interface

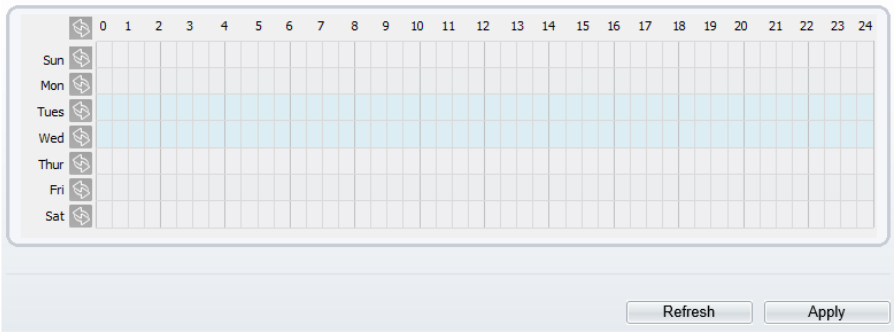

----End

5.2 Single Virtual Fence


Description

A single virtual fence is a line that is set at a concerned position within the monitored field of view and specifies the forbidden travel direction, an alarm is generated when target objects (such as person or car) cross this line.

Procedure

Step 1 Select **Intelligent Analysis** > **Single Virtual Fence** to access the **Single Virtual Fence** setting interface, as shown in Figure 5-4.

Figure 5-4 Single Virtual Fence Setting Interface

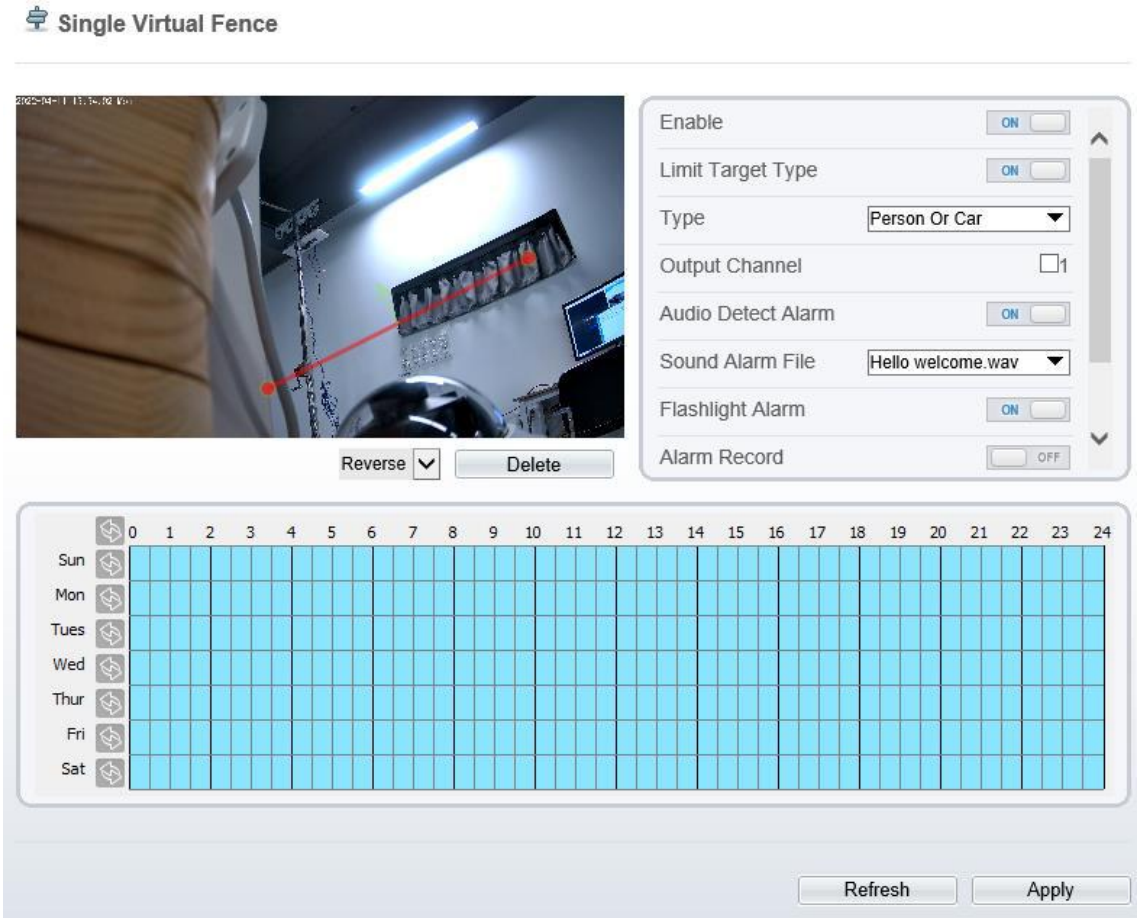

Step 2 Set all parameters for the single virtual fence. Table 5-2 describes the specific parameters.

Table 5-2 Description of Parameters for Single Virtual Fence

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable . [Default value] OFF
Sensitivity	The sensitivity of detecting the target, when the value is high, the target can be detected easily, but the accuracy will be lower.	[How to set] Choose from the drop-down list [Default value] 5
Limit type	Enable to choose the limit type (person or car / person / car) from type drop-down list.	[How to set] Click Enable to enable. [Default value] OFF
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for some models.	[How to set] Click to select an ID.


Parameter	Description	Setting
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. Details please refer to chapter 10.5	[How to set] Click to enable SMTP. [Default value] OFF
FTP Upload	Enable the button to enable File Transfer Protocol. Details please refer to chapter 10.6.	[How to set] Click to enable FTP. [Default value] OFF

Step 3 Set a deployment area

Drawing a line: Move the cursor to the drawing interface, hold down the left mouse button, and move the cursor to draw a line. When you release the left mouse button, a single virtual fence is generated.

Setting a single virtual fence: Click a line (and the trip line turns red) to select the single virtual fence and set its direction as **positive**, **reverse** or **bidirectional**, or **delete the selected** line. You can also press and hold left mouse button at the endpoint of a single virtual fence and move the mouse to modify the position and length of this single virtual fence. You can right-click to delete the single virtual fence, as shown in Figure 5-5.

Figure 5-5 Deployment Area Setting Interface

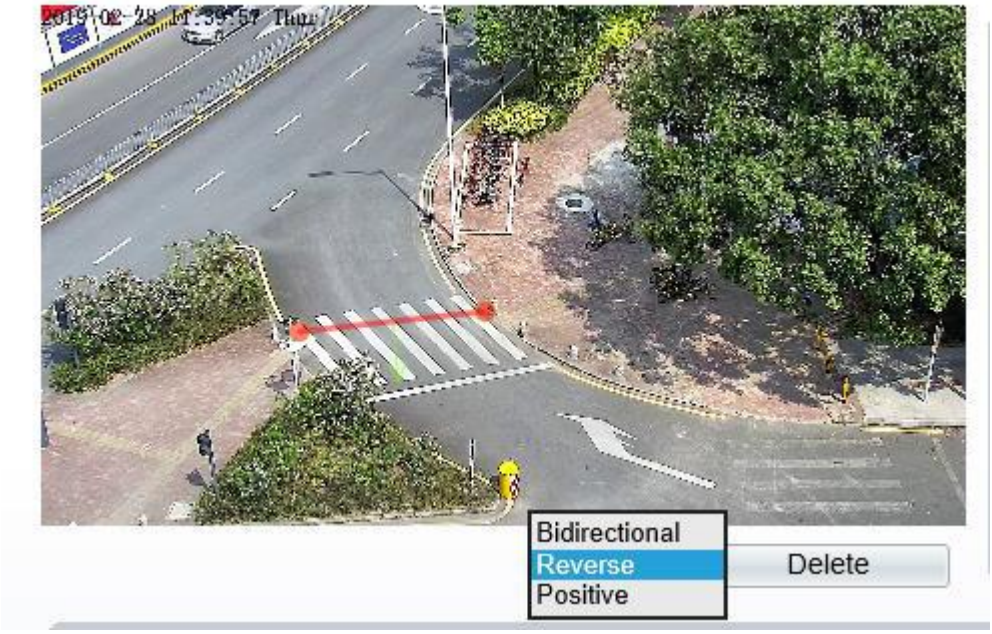

NOTE

- A single virtual fence is not within any deployment area, therefore, when an alarm is generated, the trace always exists. Only when the target object moves out of the field of view, the trace disappears.
- Try to draw the single virtual fence in the middle, because the recognition of a target takes time after target appearance on the screen and an alarm is generated only when the object is recognized to have crossed the single virtual fence.
- The single virtual fence which detects person foot as the recognition target cannot be too short, because a short single virtual fence tends to miss targets.

Step 4 Set deployment time

For more details, please refer to *5.1 Step 4*

----End

5.3 Double Virtual Fences


Description

Double virtual fences refer to two lines that are set at a concerned special position within the field of view and specify the forbidden travel direction. when target objects (such as person or car) move along the set travel direction and cross these lines in a certain order (line 1 followed by line 2) in pass max time, an alarm is generated.

Procedure

Step 1 Select **Intelligent Analysis** > **Double Virtual Fences** to access the **Double Virtual Fences** setting interface, as shown in Figure 5-6.

Figure 5-6 Double Virtual Fences Setting Interface

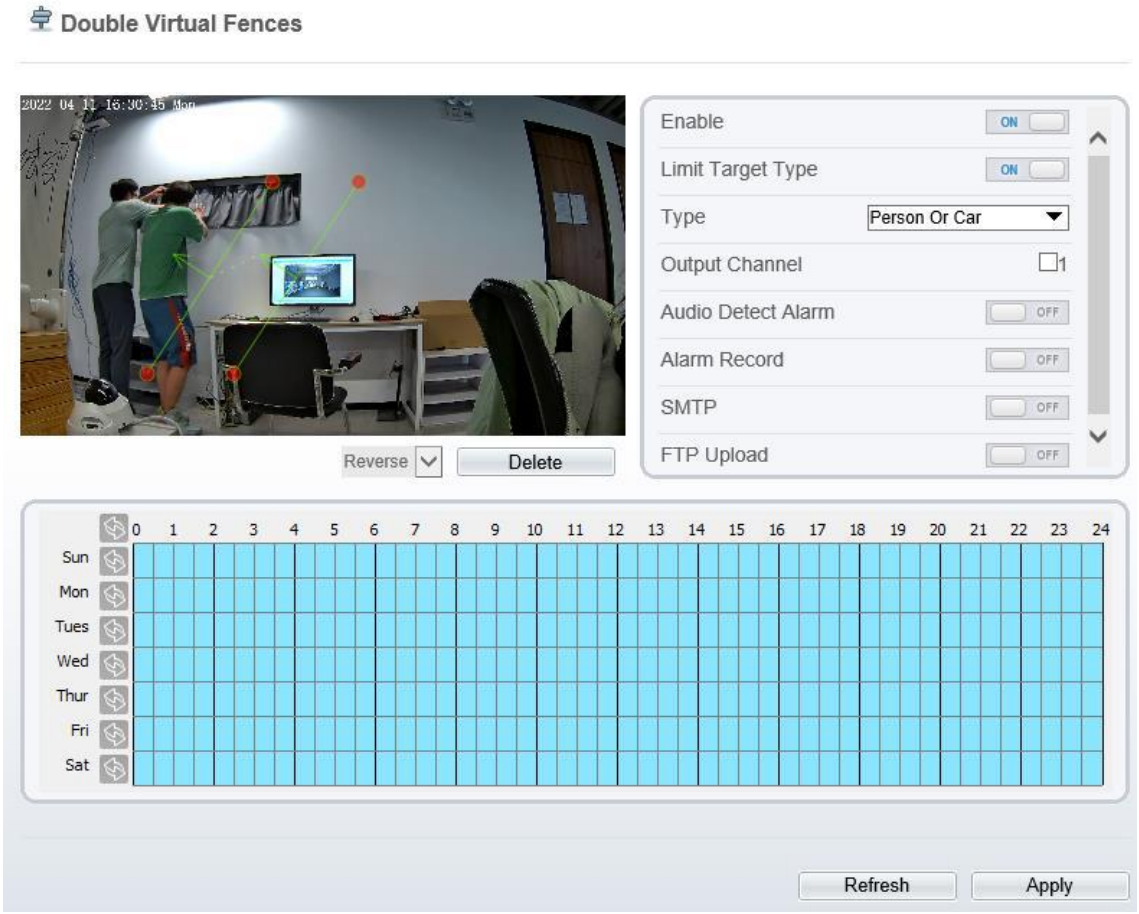

Step 2 Set all parameters for the double virtual fences. Table 5-3 describes the specific parameters.

Table 5-3 Description of Parameters for Double Virtual Fence

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click to enable. [Default value] OFF
Limit type	Enable to choose the limit type (person or car / person / car) from type drop-down list.	[How to set] Click Enable to enable. [Default value] OFF
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for some models.	[How to set] Click to select an ID.

Parameter	Description	Setting
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. For more details, please refer to chapter 10.5	[How to set] Click to enable SMTP. [Default value] OFF
FTP Upload	Enable the button to enable File Transfer Protocol. For more details, please refer to chapter 10.6 .	[How to set] Click to enable FTP. [Default value] OFF

Step 3 Set a deployment area

Drawing a line: Move the cursor to the drawing interface, hold down the left mouse button, and move the cursor to draw two lines. When you release the left mouse button, two numbered virtual fences are generated. Choose either of the double virtual fences to set the direction to Positive or Reverse.

Setting double virtual fences: Click one of the double virtual fences (and the virtual fence turns red) to select this virtual fence and set the direction to **Positive** or **Reverse**, or delete the selected line. You can also press and hold left mouse button at the endpoint of a virtual fence and move the mouse to modify the position and length of this virtual fence. You can right-click to delete the double virtual fences, as shown in Figure 5-7.

Figure 5-7 Deployment Area Setting Interface



NOTE

- The two virtual fences are in sequential order. An alarm is generated only when a target crosses virtual fence 1 and then virtual fence 2 within the set maximum passing time.
- The double virtual fences are not within any deployment area, therefore, when an alarm is generated, the trace always exists. Only when the target object moves out of the field of view, the trace disappears.
- Try to draw double virtual fences in the middle, because the recognition of a target takes time after target appearance on the screen and an alarm is generated only when the object is recognized to have crossed the double virtual fences.
- The double virtual fences which detect person foot as the recognition target cannot be too short, because short double virtual fences tend to miss targets.

Step 4 Set deployment time

More details please refer to *5.1 Step 4*

----End

5.4 Multiple Loiter


Description

Multiple loiter allows setting the shortest loitering time for multiple targets of specified type (such as person or car) within the deployment area in the field of view. When the loitering time of the multiple targets within this area meets the set shortest loitering time, an alarm is generated.

Procedure

Step 1 Select **Intelligent Analysis** > **Multi Loiter** to access the **Multi Loiter** setting interface, as shown in Figure 5-8.

Figure 5-8 Multi Loiter Setting Interface

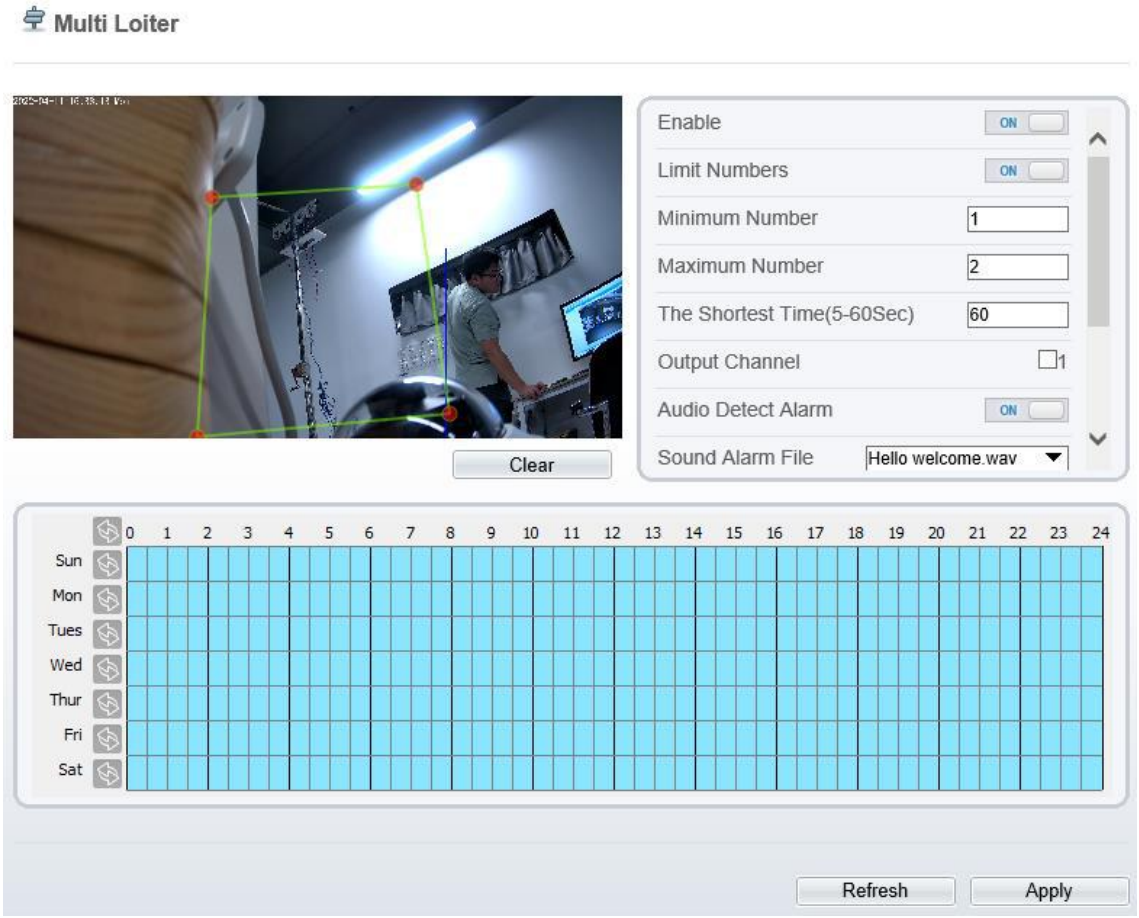

Step 2 Set all parameters for multiple loitering. Table 5-4 describes the specific parameters.

Table 5-4 Multiple Loitering Parameter Description

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] OFF
Limit Numbers	When Limit Numbers is set to OFF, an alarm is generated no matter how many people loiter. When Limit Numbers is set to ON, if the minimum number is set to 2 and the maximum number is set to 3, an alarm is generated for 2-3 people loitering. Other settings are the same as loitering.	[How to set] Click to enable Limit Numbers.
The Shortest Time (Sec)	The time that a target object spends in loitering cannot be less than the shortest loitering time. Setting range: 5-60 seconds.	[How to set] Input a value in the area box. [Default value] 10s

Parameter	Description	Setting
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for some models	[How to set] Click to select an ID.
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for some models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. For more details, please refer to chapter 10.5	[How to set] Click to enable SMTP. [Default value] OFF
FTP Upload	Enable the button to enable File Transfer Protocol. For more details please refer to chapter 10.6	[How to set] Click to enable FTP Upload. [Default value] OFF

Step 3 Set a deployment area

Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing, as shown in Figure 5-9.

Figure 5-9 Deployment Area Setting Interface



NOTE

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn .
- The quantity of deployment areas is not limited yet and will be described in future when a limit is applied.

Step 4 Set deployment time

For more details please refer to *5.1 Step 4*.

----End

5.5 Converse


Description

Converse allows setting the travel direction criteria for a target within an area on the video screen. When a target of specified type (such as people or car) within this area moves in the set travel direction, an alarm is generated.

Procedure

Step 1 Select **Intelligent Analysis** > **Converse** to access the **Converse** setting interface, as shown in Figure 5-10.

Figure 5-10 Converse Setting Interface

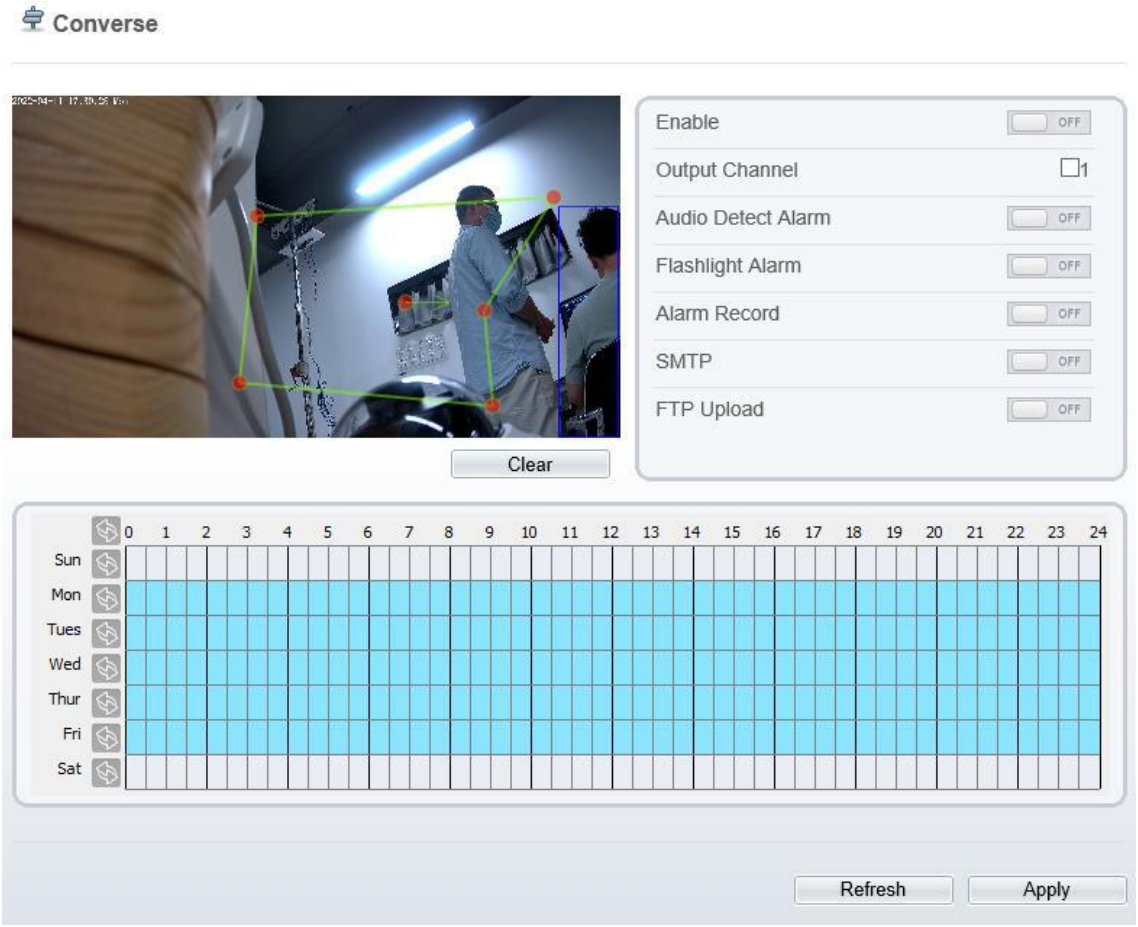

Step 2 Set all parameters for converse. Table 5-5 describes the specific parameters.

Table 5-5 Converse Parameter Description


Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] OFF
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for Some Models	[How to set] Click to select an ID.
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for Some Models.	[How to set] Click Enable to enable. [Default value] OFF

Parameter	Description	Setting
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for Some Models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. More details, please refer to chapter 10.5	[How to set] Click to enable SMTP. [Default value] OFF
FTP Upload	Enable the button to enable File Transfer Protocol. For more details, please refer to chapter 10.6	[How to set] Click to enable FTP Upload. [Default value] OFF

Step 3 Set a deployment area

Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing, move the arrow in the field can set the direction of converse. as shown in Figure 5-11.

Figure 5-11 Deployment Area Setting Interface

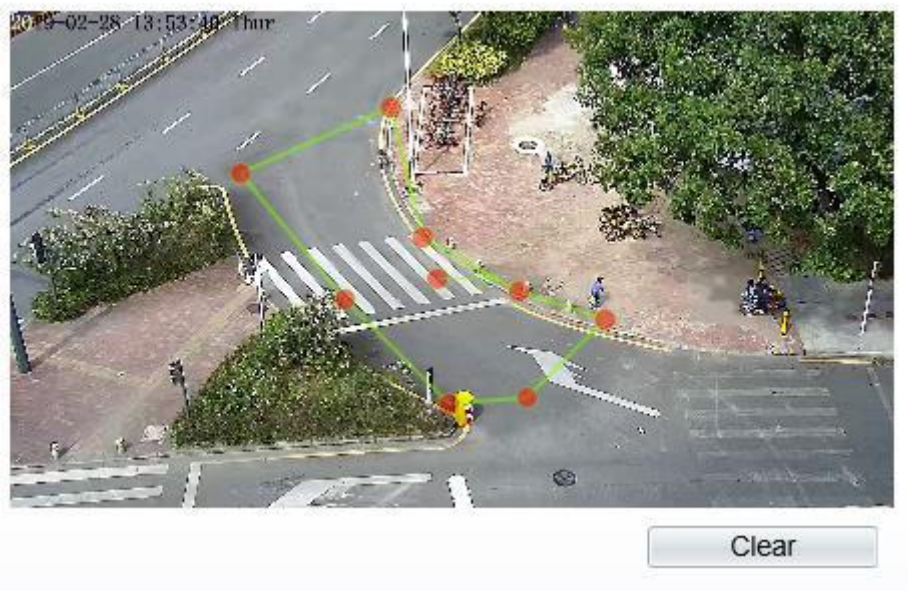

NOTE

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn .
- The quantity of deployment areas is not limited yet and will be described in future when a limit is applied.

Step 4 Set deployment time

For more details, please refer to *5.1 Step 4.*

----End


5.6 Personnel Count (Only for Some Models)


User can draw line to count the number of people at the special area.

Procedure

Step 1 Select **Intelligent Analysis** > **Personnel Count** to access the **Personnel Count** setting interface, as shown in Figure 5-12.

Figure 5-12 Personnel count

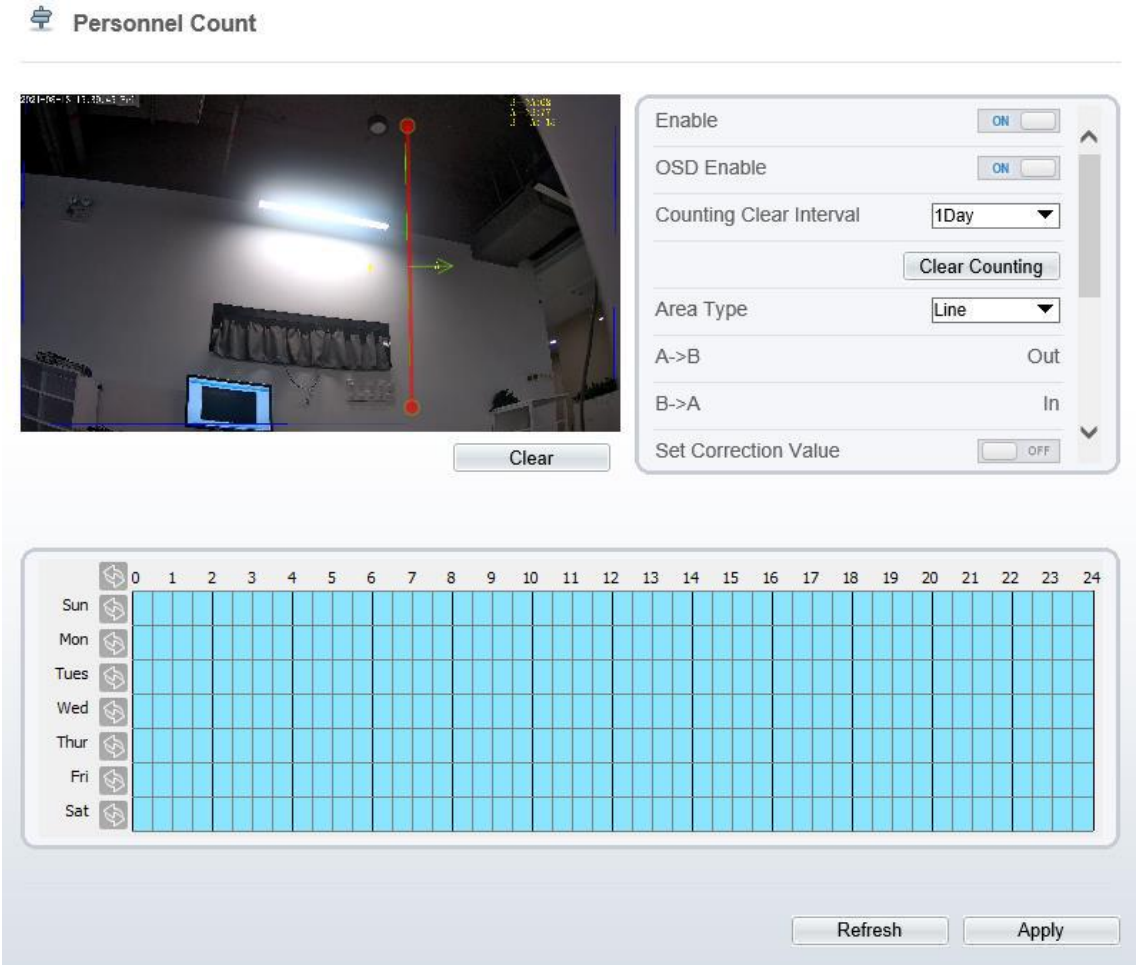

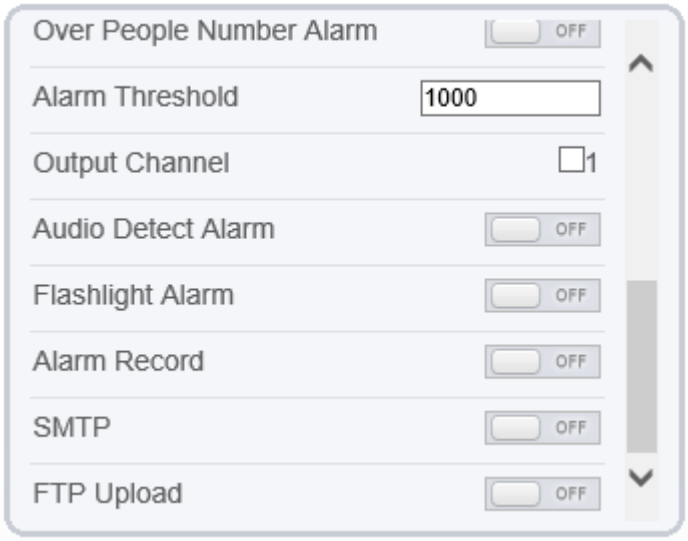

Step 2 Set all parameters for illegal parking. Table 5-6 describes the specific parameters.

Table 5-6 Description of Parameters for Personnel Count

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] OFF
OSD Enable	Enable the OSD, the count data will show on live video screen.	[How to set] Click Enable to enable. [Default value] OFF
Counting Clear Interval	The camera will clear counting data at the setting interval. Click the “Clear Counting”, clearing the data immediately.	[How to set] Choose from drop-down list. [Default value] 12 hours
Area Type	Draw a line on live video screen. The label of A and B indicate out and in.	[How to set] Choose from drop-down list. [Default value] Line
Set Correction Value	Enable, set the count correction value, it can be positive or negative. For example, if there are 30 people enter the area before counting, input 30 to correct. If 30 people go out the area, input -30.	[How to set] Enable /Input a value in the area box. [Default value] 0

Parameter	Description	Setting
Over People Number Alarm	Enable, if the counting number is passing the threshold, it will alarm.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Threshold	The threshold of enable alarm.	[How to set] Enable /Input a value in the area box. [Default value] 1000
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered. Only for Some Models.	[How to set] Click to select an ID.
Audio Detect Alarm	Enable to choose the sound alarm file from type drop-down list. When it alarms the device will play alarm sound file. Only for Some Models.	[How to set] Click Enable to enable. [Default value] OFF
Flashlight Alarm	Enable to flashlight alarm when it triggers the alarm, the flashlight will flash. Only for Some Models.	[How to set] Click Enable to enable. [Default value] OFF
Alarm Record	Enable the button to enable the alarm record.	[How to set] Click to enable Alarm Record. [Default value] OFF
SMTP	Enable the button to enable SMTP sever. The parameters of SMTP can be set at **Configuration** > **Network Service** > **SMTP** interface.	[How to set] Click to enable SMTP. [Default value] OFF
FTP Upload	Enable the button to enable File Transfer Protocol. The parameters of FTP can be set at **Configuration** > **Network Service** > **FTP** interface.	[How to set] Click to enable FTP Upload. [Default value] OFF

Step 3 Set a deployment area

Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing.

Step 4 Set deployment time

For more details please refer to *5.1 Step 4*..

----End

6 Configure the Alarm Function

The different cameras may have different alarm linkage actions, it depends on the performance of cameras, please refer to actual products.


6.1 Alarm Output (Only for Some Models)

Procedure

Step 1 Choose **Configuration > Alarm > Alarm Output**.

The **Alarm Output** page is displayed, as shown in Figure 6-1.

Figure 6-1 Alarm Output page

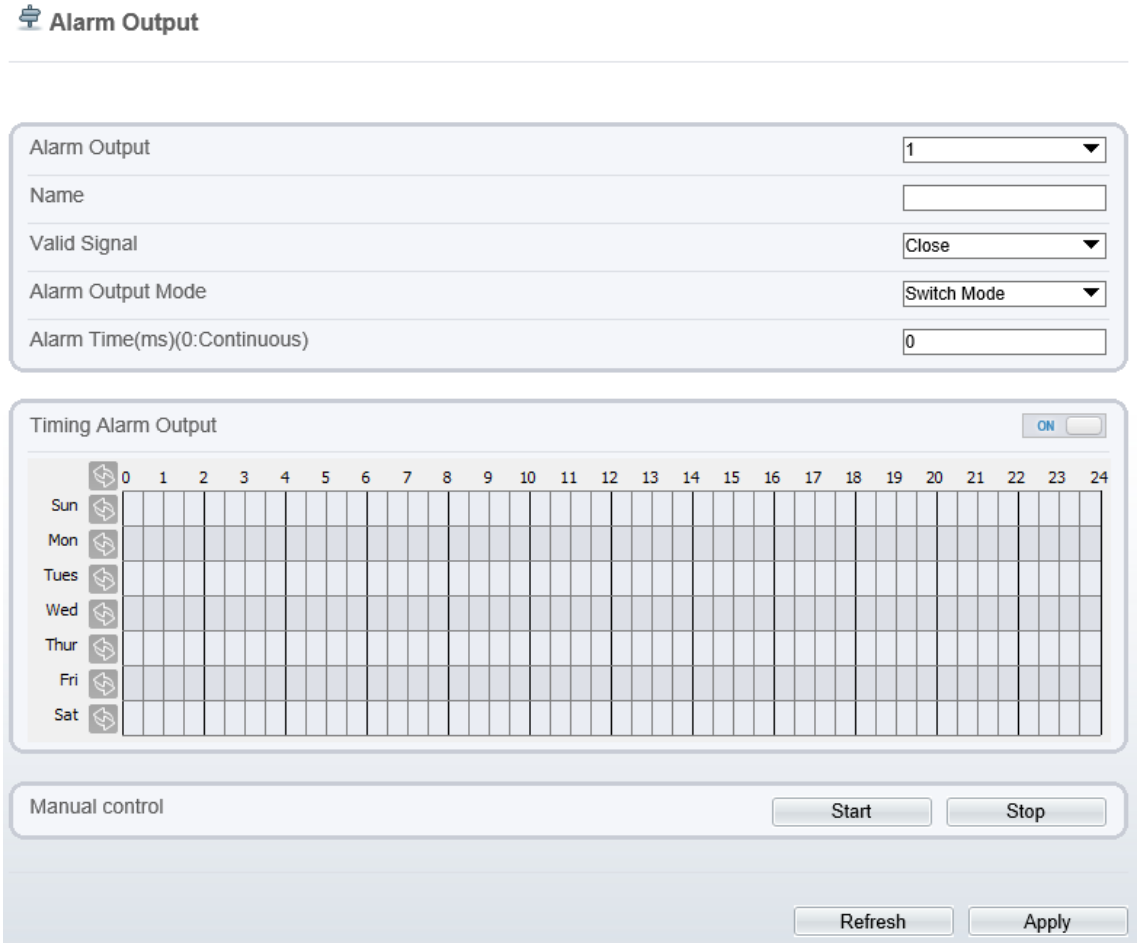

Step 2 Set the parameters according to Table 6-1.

Table 6-1 Alarm I/O parameters

Parameter	Description	Setting
Alarm Output	ID of the alarm output channel. NOTE The number of alarm output channels depends on the device model.	[Setting method] Select a value from the drop-down list box. [Default value] 1
Name	Alarm output channel name.	[Value range] 0 to 32 bytes
Valid Signal	The options are as follows: • **Close**: An alarm is generated when an external alarm signal is received. • **Open**: An alarm is generated when no external alarm signal is received.	[Setting method] Select a value from the drop-down list box. [Default value] Close
Alarm Output Mode	When the device receives I/O alarm signals, the device sends the alarm information to an external alarm device in the mode specified by this parameter. The options include the switch mode and pulse mode. NOTE • If the switch mode is used, the alarm frequency of the device must be the same as that of the external alarm device. • If the pulse mode is used, the alarm frequency of the external alarm device can be configured.	[Setting method] Select a value from the drop-down list box. [Default value] Switch Mode
Alarm Time (ms) (0: Continuous)	Alarm output duration. The value **0** indicates that the alarm remains valid.	[Setting method] Enter a value manually. [Default value] 0 [Value range] 0 to 86400 seconds
Timing Alarm Output	Enable timing alarm output, set the schedule to time alarm	[Setting method] Enable [Default value] OFF
Manual Control	Control the alarm output.	N/A

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End


6.2 Disk Alarm

Procedure

Step 1 Choose **Configuration > Alarm > Disk Alarm**.

The **Disk Alarm** page is displayed, as shown in Figure 6-2.

Figure 6-2 Disk Alarm page

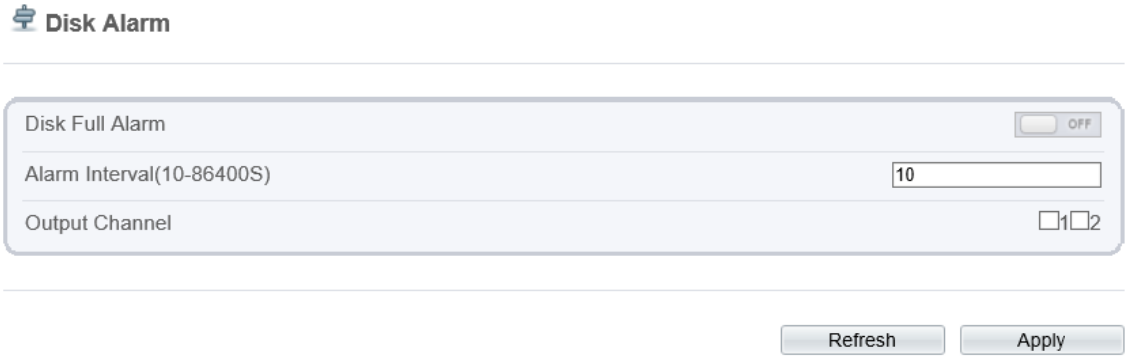

Step 2 Click the button on to enable disk alarm.

Step 3 Configure the **alarm interval** parameters.

Step 4 Select **Out channel** number (Please refer to the actual product).

Step 5 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End


6.3 Network Alarm

Procedure

Step 1 Choose Configuration > Alarm > Network Alarm.

The **Network Alarm** page is displayed, as shown in Figure 6-3.

Figure 6-3 Network Alarm page

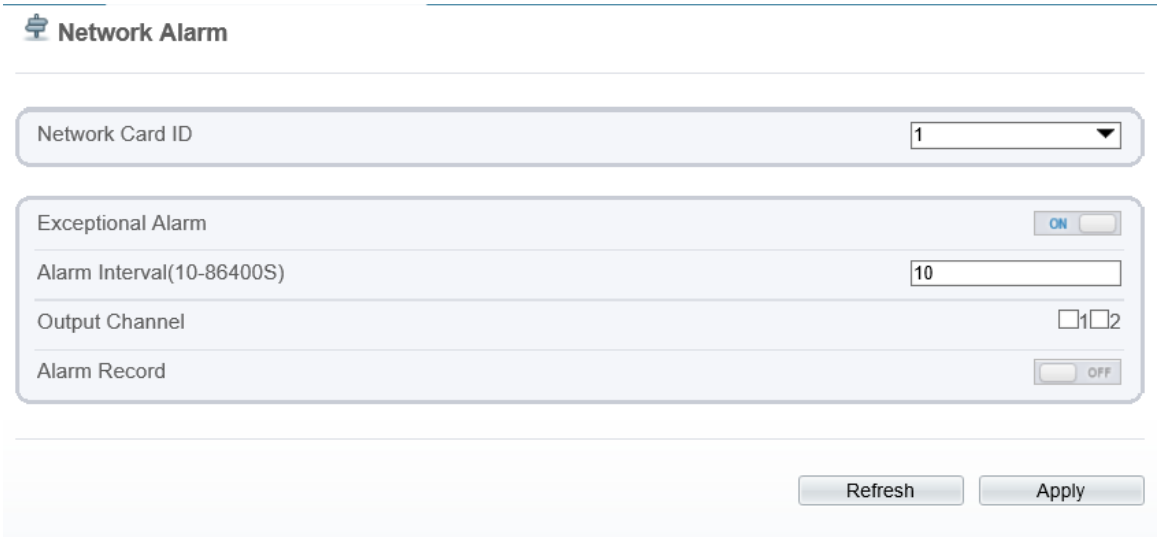

Step 2 Click the button on to enable exceptional alarm.

Step 3 Configure the network exceptional alarm interval.

Step 4 Select **Out Channel** number.

Step 5 Click **Apply**.

The message "Apply success!" is displayed, the system saves the settings.

----End

6.4 Day Night Switch Alarm

Description


At the setting time, enable the day night switch alarm, when it happens day night switched, it will send alarm signal.

Procedure

Step 1 Choose Configuration > Alarm > Day Night Switch Alarm.

The **Day Night Switch Alarm** page is displayed, as shown in Figure 6-4.

Figure 6-4 Day night switch alarm

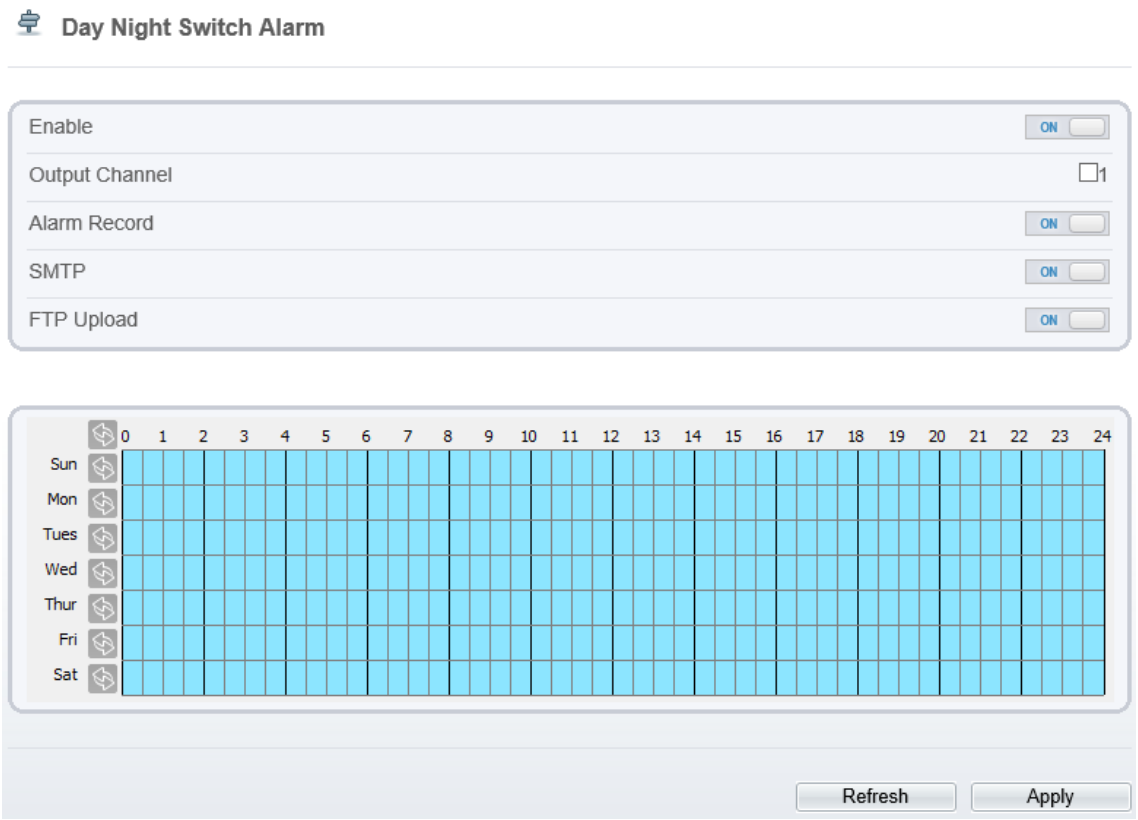

Step 2 Click the button to enable day night switch alarm.

Step 3 Configure the day night switch alarm schedule.

Method 1： Click left mouse button to select any time point within 0:00-24:00 from Monday to Sunday as shown in Figure 6-7.

Method 2： Hold down the left mouse button, drag and release mouse to select the schedule within 0:00-24:00 from Monday to Sunday.


NOTE

When you select time by dragging the cursor, the cursor cannot be moved out of the time area. Otherwise, no time can be selected.

Method 3： Click in the schedule page to select the whole day or whole week.

Deleting deployment time: Click again or inverse selection to delete the selected schedule.

Figure 6-5 Schedule Setting page

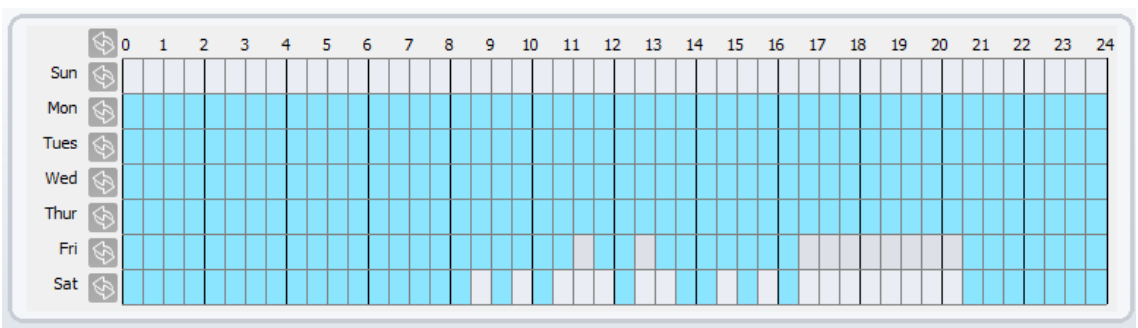

Step 4 Click the button on to enable Alarm Record.

Step 5 Click the button on to enable SMTP.

Step 6 Click the button on to enable FTP Upload.

Step 7 Click **Apply**.

The message "Apply success!" is displayed, the system saves the settings

----End

6.5 I/O Alarm Linkage (Only for Some Models)

Description

Alarm linkage refers to linkage alarm output. When receiving an alarm from the alarm input port, the camera performs linkage alarm output, and operate based on the linkage policy.

On the **I/O Alarm Linkage** page, you can perform the following operations:


- Enable the I/O alarm function.
- Configure the I/O alarm schedule.
- Configure the alarm output channel.

Procedure

Step 1 Choose Configuration > Alarm > I/O Alarm Linkage.

The **I/O Alarm Linkage** page is displayed, as shown in Figure 6-6.

Figure 6-6 I/O Alarm Linkage page

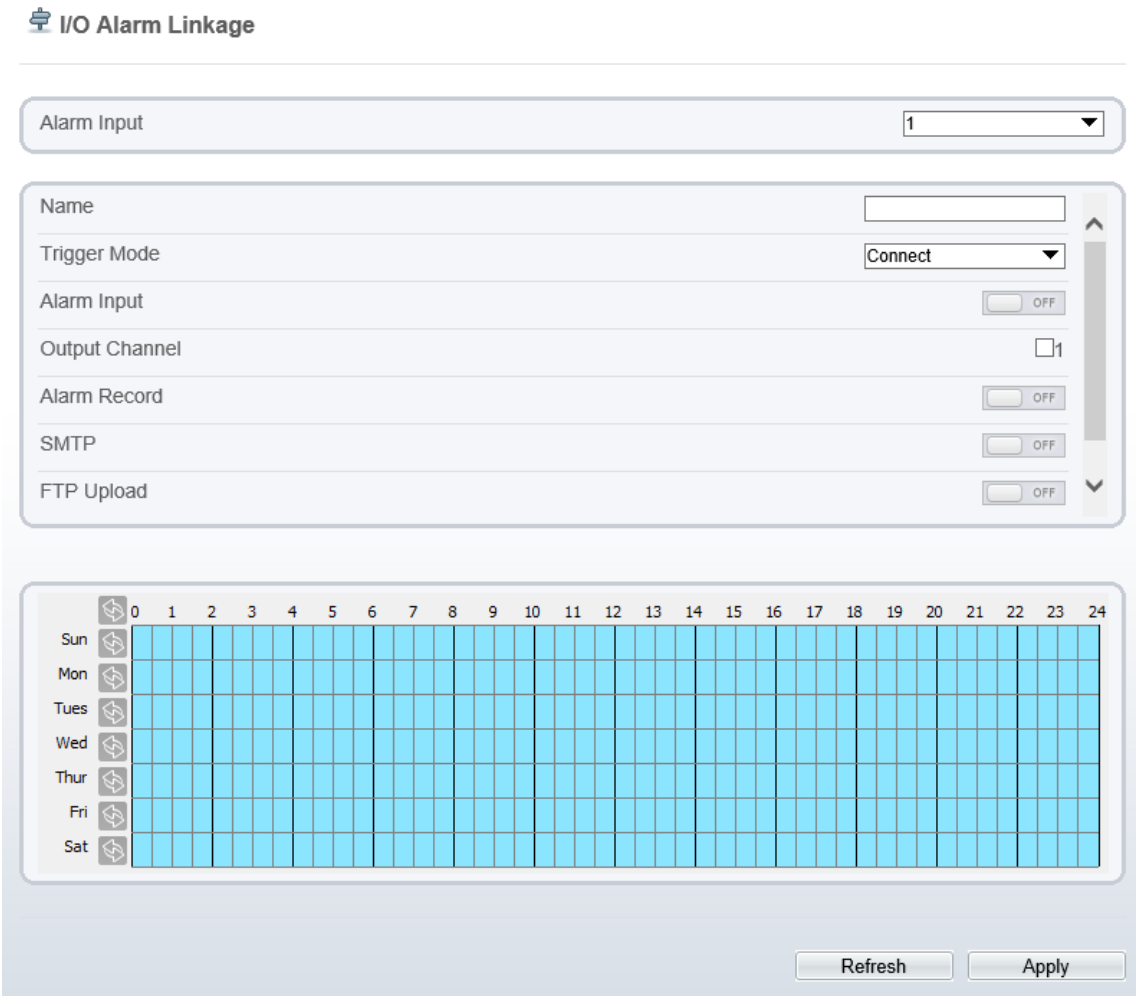

Step 2 Select the **Alarm Input** value from the drop-down list box.

Step 3 Enter alarm input channel name.

Step 4 Select the **Trigger Mode** from the drop-down list box.

Step 5 Click the button on to enable I/O Alarm.

Step 6 Configure the I/O alarm schedule.

Method 1： Click left mouse button to select any time point within 0:00-24:00 from Monday to Sunday as shown in Figure 6-7.

Method 2： Hold down the left mouse button, drag and release mouse to select the schedule within 0:00-24:00 from Monday to Sunday.


NOTE

When you select time by dragging the cursor, the cursor cannot be moved out of the time area. Otherwise, no time can be selected.

Method 3： Click in the schedule page to select the whole day or whole week.

Deleting deployment time: Click again or inverse selection to delete the selected schedule.

Figure 6-7 Schedule Setting page

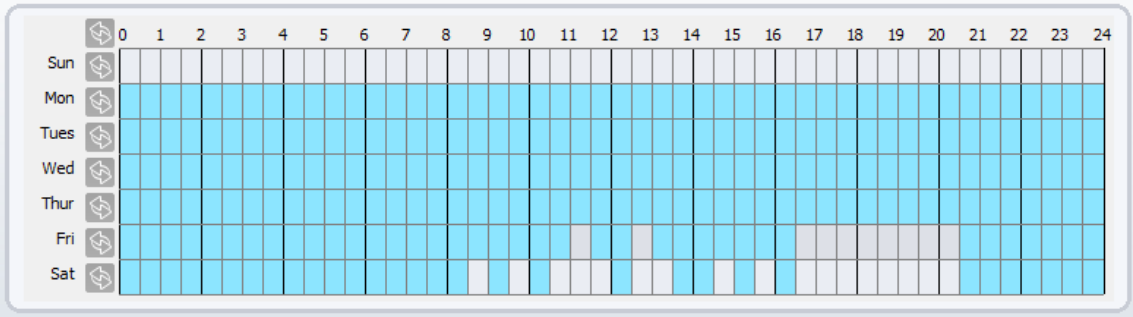

Step 7 Select the **Out Channel** from the drop-down list box.

Step 8 Select the **PTZ Type** from the drop-down list box. The PTZ type includes preset, scan, track, tour.

Step 9 Select **Value**. The value is the ID of PTZ type.

Step 10 Click the button on to enable Alarm Record.

Step 11 Click the button on to enable SMTP.

Step 12 Click the button on to enable FTP Upload.

Step 13 Click **Apply**.

The message "Apply succeed!" is displayed, and the system saves the settings.

----End

6.6 Motion Detection Alarm Linkage

Description

On the **Motion Alarm** page, you can perform the following operations:

- Enable the motion detection function.
- Set the motion detection alarming time.
- Set the motion detection area.
- Configure the motion alarm output channel.


  When the alarm output function is enabled and the camera detects that an object moves into the motion detection area within the schedule time, the camera generates an alarm and triggers linkage alarm output.
- Configure the PTZ linkage policy

Procedure

Step 1 Choose Configuration >Alarm > Motion Alarm.

The **Motion Alarm** page is displayed, as shown in Figure 6-8.

Figure 6-8 Motion Alarm page

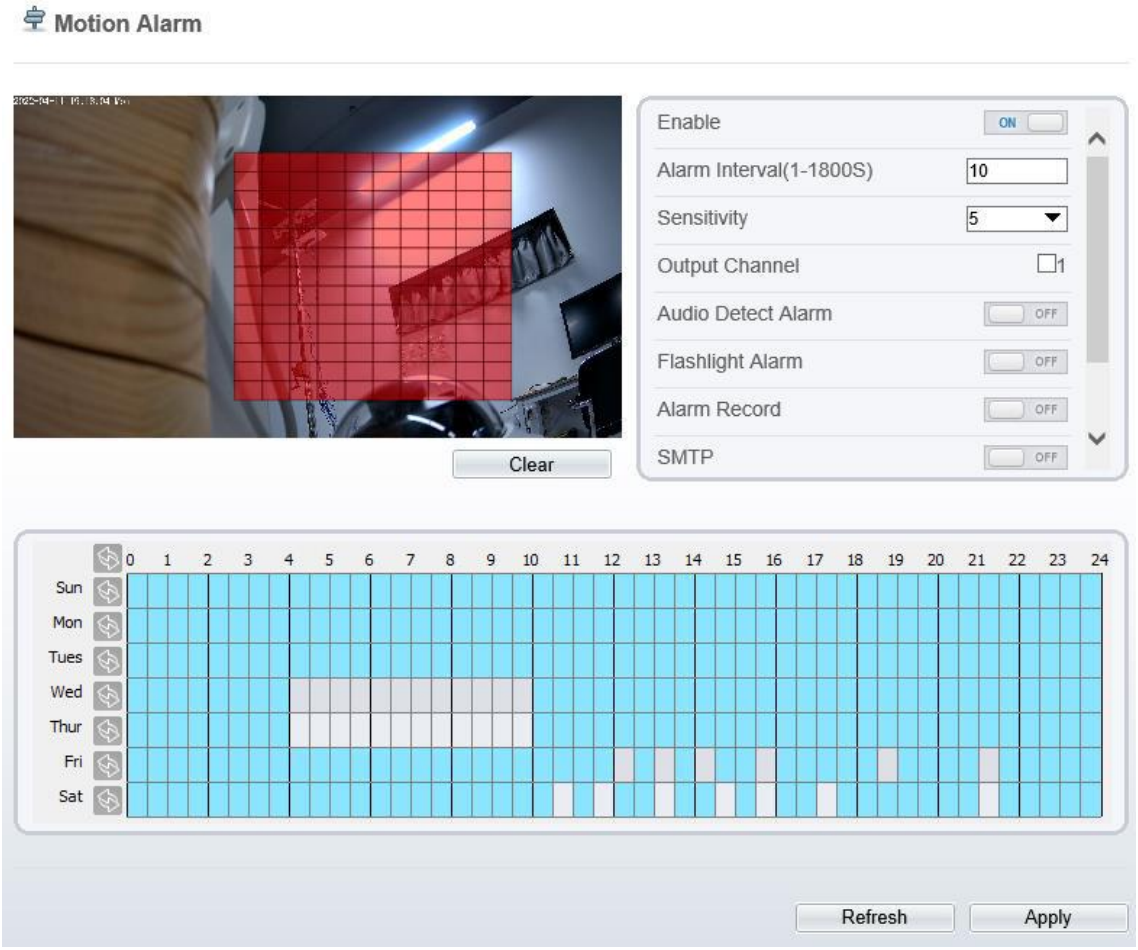

Step 2 Click the button on to enable motion alarm.

Step 3 Configure the motion interval.

Step 4 Configure the sensitivity. Tick the output channel when the camera is connected to the external alarm device.

Step 5 Enable audio detect alarm, flashlight alarm, alarm record. (sound detection alarm is only applicable for some models)


Step 6 Configure the schedule time setting.

For more details about how to set **Schedule**, see 6.5 Step 6.

Step 7 Configure the detection area.

1. Press and hold the left mouse button, and drag in the video area to draw a detection area, as shown in Figure 6-9.

Figure 6-9 Motion Area Setting page

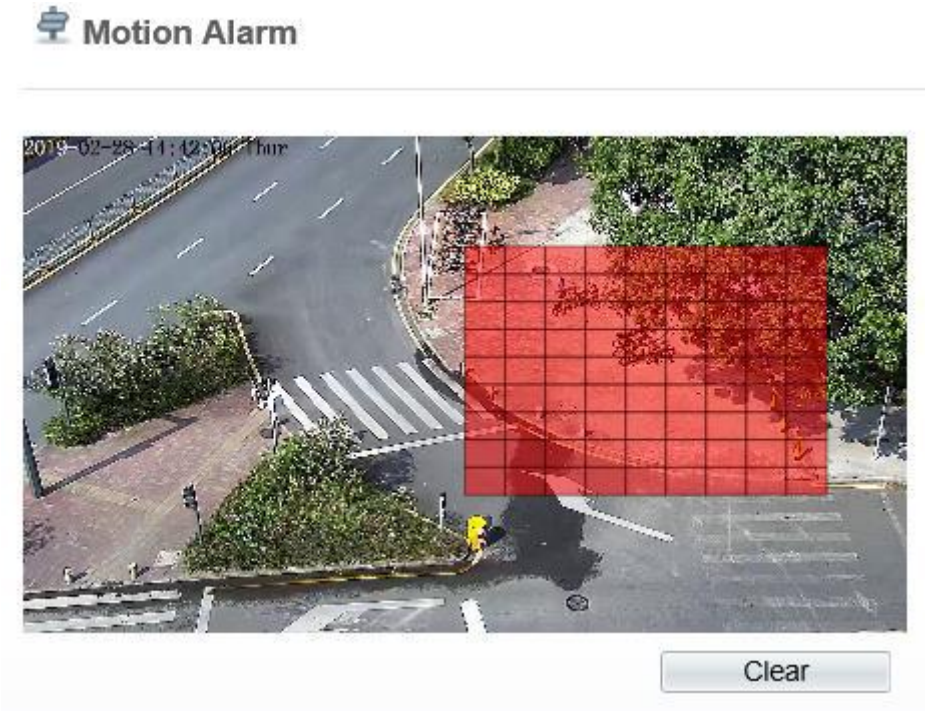

2. Press and hold the left mouse button, and drag in the video area to draw a detection area.

NOTE

- Click **Clear** to delete a detection area.
- Click **Reverse** to select the area out of specified frames as the detection area.

Step 8 Select the **Out Channel**.

Step 9 Click the button on to enable alarm record.

Step 10 Click the button on to enable audio detect alarm / flashlight alarm (supplied for some models)

Step 11 Click the button on to enable SMTP.

Step 12 Click the button on to enable FTP Upload.

Step 13 Select the **PTZ Type** from the drop-down list box. The PTZ type includes preset, scan, track, tour.

Step 14 Select **Value**. The value is the ID of PTZ type.

Step 15 Click **Apply**.

The message "Apply succeed!" is displayed, and the system saves the settings.

----End

6.7 Push Message

Description


When enable push message button, the alarm information will be pushed to app if the device is managed by app.

Procedure

Step 1 Choose Configuration >Alarm > Push Message.

The **Push Message** page is displayed, as shown in Figure 6-10.

Figure 6-10 Push Message page

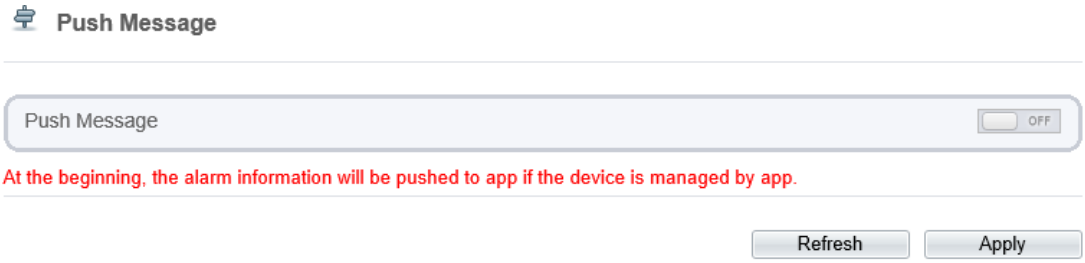

Step 2 Click **Apply**.

The message "Apply succeed!" is displayed, and the system saves the settings.

----End

6.8 Audio Abnormal Detection (Only for Some Models)

Description

On the **Audio Abnormal Detection** page, you can perform the following operations:

- Enable the Audio Abnormal Detection function.
- Set the Audio Abnormal Detection alarming time.
- Configure the Audio Abnormal Detection output channel.

  When the alarm output function is enabled and the camera detects abnormal audio (sudden rise or sudden drop) within the schedule time, the camera generates an alarm and triggers linkage alarm output.

Procedure

Step 1 Choose Configuration >Alarm > Audio Abnormal Detection.

The **Audio Abnormal Detection** page is displayed, as shown in Figure 6-11.

Figure 6-11 Audio abnormal detection



Step 2 Click the button on to enable audio abnormal detection.

Step 3 Enable Sudden Rise, and Sudden Drop.

Step 4 Select the **Out Channel**.

Step 5 Select **Value**. The value is the ID of PTZ type (Only for Some Models).

Step 6 Click the button on to enable Alarm Record.

Step 7 Click the button on to enable SMTP.

Step 8 Click the button on to enable FTP Upload.

Step 9 Configure the schedule time setting.


For details about how to set **Schedule**, see 6.5 Step 6.

----End


6.9 Sound Alarm Output (Only for Some Models)

At **Configuration > Alarm > Sound Alarm Output** interface, set the audio detect alarm, as shown in Figure 6-12.

Figure 6-12 Audio alarm interface

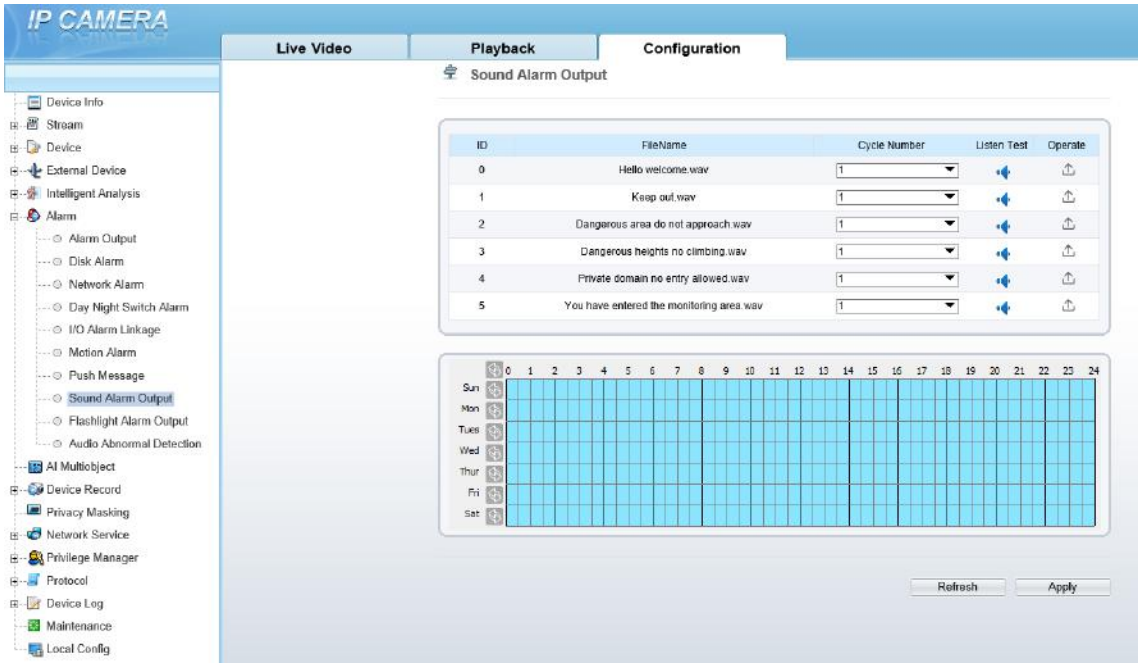

There are six default files, user can set the cycle number, click to test listen.

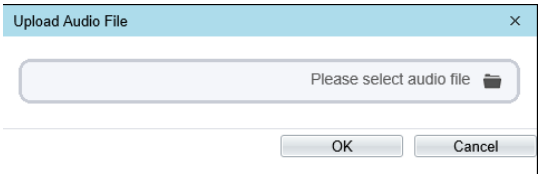

Click to upload a new audio.

The file should be less than 300 kb, and the type is wav.


Click “Apply” to save the settings.

----End

6.10 Flashlight Alarm Output (Only for Some Models)

At **Configuration > Alarm > Flashlight Alarm Output** interface, set the schedule to enable flashlight alarm, as shown in Figure 6-13.

Figure 6-13 Flashlight alarm interface

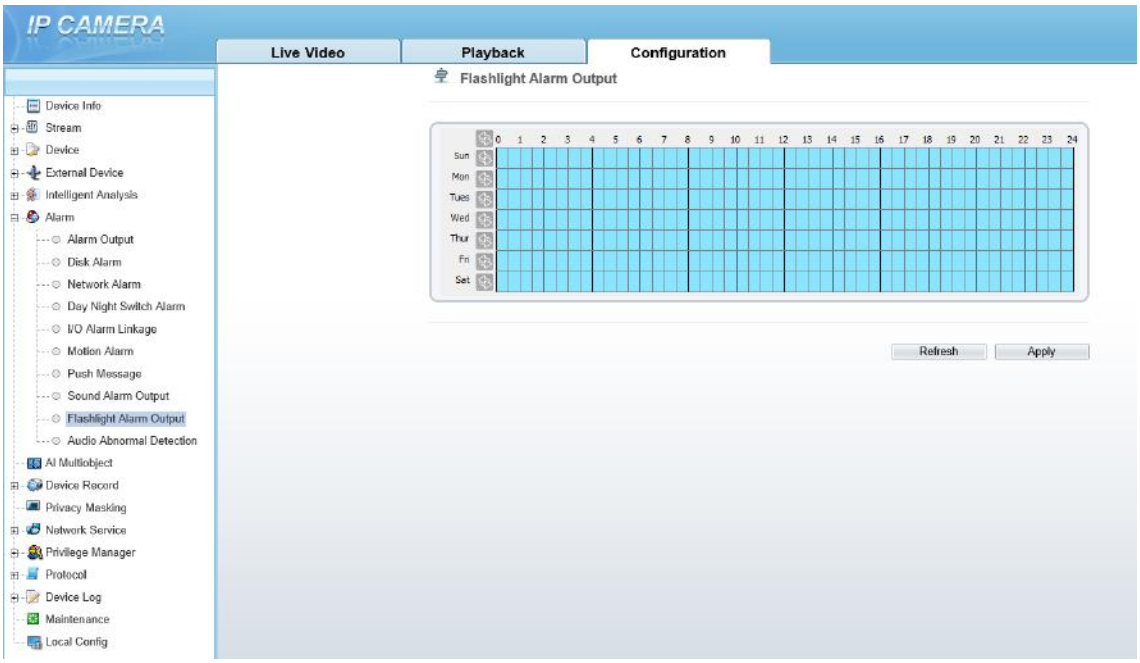

The mouse to drag choose the time, or click one by one to choose.

Click  to choose one day or whole week. Click again to quit the choose.

Click “Apply” to save the settings.


----End

7 AI Multiobject

7.1 AI Configuration

Choose **Configuration > AI Multiobject** to set parameter of detected face, and vehicle plate.

Figure 7-1 AI Multiobject interface

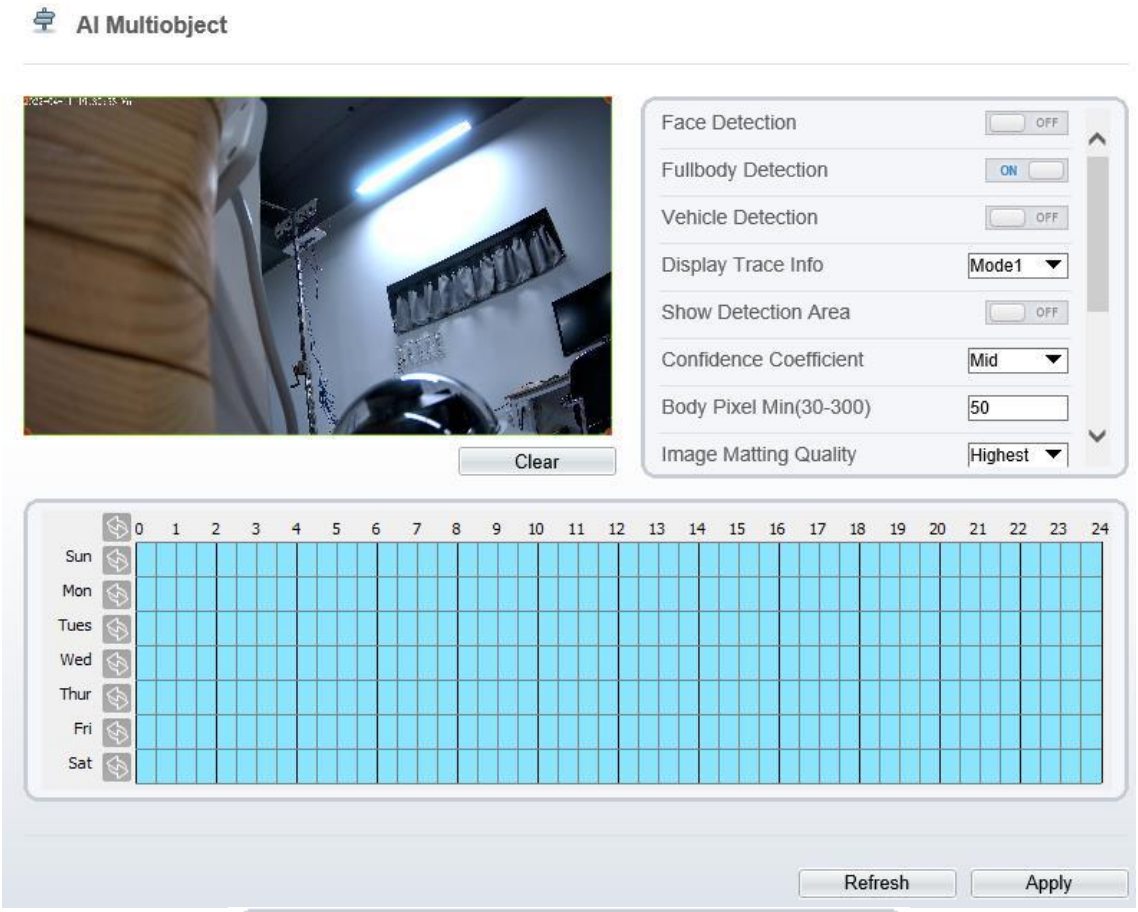

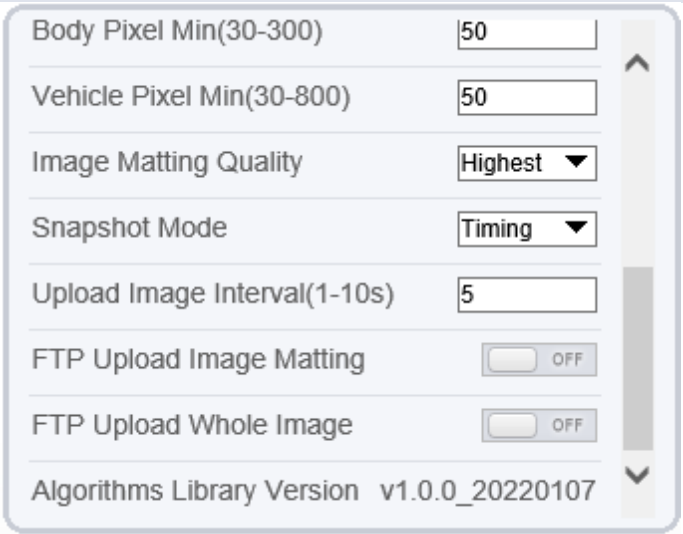


Table 7-1 lists the AI multiobject parameters.

Table 7-1 AI multiobject parameters

Parameter	Description	How to set
Face detection	The camera will snap the face when someone appears in live video.	Enable
Full body detection	The camera will snap the whole body when someone appears in live video.	Enable
Vehicle detection	The camera will snap the vehicle when the vehicle appears in live video.	Enable
Display trace info	Enable the function and a trace frame will show at live video. Mode 1:  Mode 2: 	Choose from drop list.
Confidence coefficient	The range of snap image, there are three types, such as high, mid and low. The higher the confidence, the better the snap quality and the fewer snapshots.	Choose from drop list.
Face pixel min(30-300)	30-300 pixels, the smaller the pixel be set, the more face will be captured, but it may be mistaken.	Input a value ranges 30 to 300
Body pixel min(30-300)	30-300 pixels, the smaller the pixel be set, the more body will be captured, but it may be mistaken.	Input a value range 30 to 300
Vehicle pixel min(30-300)	30-300 pixels, the smaller the pixel be set, the more face will be captured, but it may be mistaken.	Input a value ranges 30 to 300
Image matting quality	The quality of snap image, There are three mode can be chosen, such as low, mid and high.	Choose from drop list.
Snapshot mode	There are three mode can be chosen, such as timing, and optimal.	Choose from drop list.
Upload image interval(1-10 s)	At timing mode, set the interval of upload image.	Input a value ranges 1 to 10
Snapshot count	At optimal mode, set the number of snapshot image	Input a value ranges 1 to 5
FTP upload image matting	**Configuration > Network Service > FTP**, set FTP related parameters, the captured picture will be sent to the set FTP location	Enable
FTP upload whole image	Capture a picture and send a whole image.	Enable

8 Configure the Recording Function

NOTE

Some models may not support SD card, and the recording function is disable, please refer to actual product.

8.1 Record Policy


You can configure the scheduled recording function, alarm recording function, recording quality, and recording rules.

Procedure

Step 1 Choose Configuration > Device Record > Record Policy.

The **Record Policy** page is displayed, as shown in Figure 8-1.

Figure 8-1 Record policy page

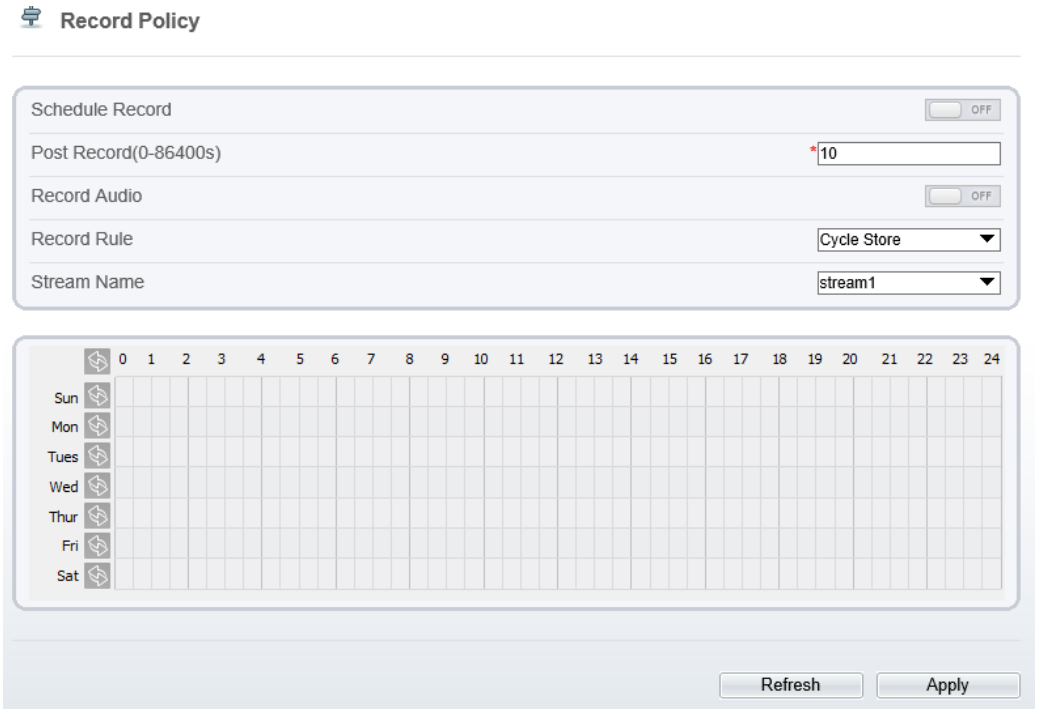

Step 2 Set the parameters according to Table 8-1.

Table 8-1 Recording policy parameters

Parameter	Description	Setting
Schedule Record	Enables schedule record that you can configure the time policy.	[Setting method] Click the button on to enable schedule record. [Default value] OFF

Parameter	Description	Setting
Post Record (0-86400s)	Recording duration (in seconds) after an alarm is generated.	[Setting method] Enter a value manually.
Record Audio	Indicates whether to record audios together with videos.	[Setting method] Click the button on to enable record audio.
Record Rule	Rule for saving recordings. The options are as follows: • **Cycle Store**: Saves recordings in cycles. • **Save Days:** Duration (in days) for saving a recording. The duration can be a maximum of 99999 days. NOTE The value **0** indicates that recordings are not overwritten.	[Setting method] Select a value from the drop-down list box.
Stream Name	Name of the stream.	[Setting method] Select a value from the drop-down list box.

Step 3 Configure a recording plan.

You can configure the system to record videos around the clock or in schedule.

For details about how to set **Schedule**, see 6.5 Step 6.

Step 4 Click Apply.

- If the message "Apply success!" is displayed, the system saves the settings.
- If other information is displayed, set the parameters correctly.

-----End

8.2 Record Directory

Description


Recordings can be stored in an SD card.

Procedure

Step 1 Choose Configuration > Device Record > Record Directory.

The **Record Directory** page is displayed, as shown in Figure 8-2.

Figure 8-2 Record Directory page

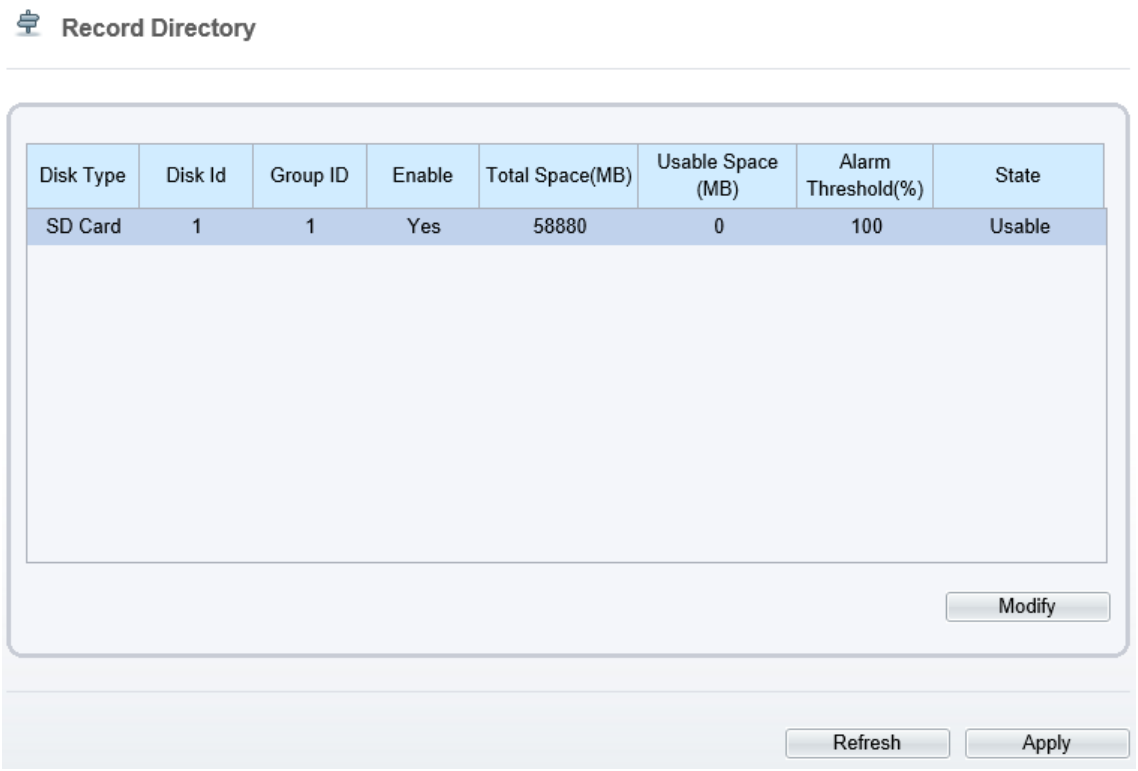


Step 2 Set the parameters according to Table 8-2.

Table 8-2 Record directory parameters

Parameter	Description	Setting
Disk Type	Recording directory type, which can be an SD card.	[Setting method] The parameter cannot be set manually.
Disk ID	Indicates the Disk ID.	
Group ID	Indicates the group HID.	
Enable	Indicates whether to enable the recording directory.	
Total Space	Total disk space.	
Usable Space	Maximum disk space read automatically.	
Alarm Threshold (%)	The camera will alarm when used Space achieves the alarm threshold.	
Status	Status of the connection between the current camera and recording directory detected automatically.	

Step 3 Click **Modify** to modify the parameters of recording path.

Figure 8-3 Record path modify

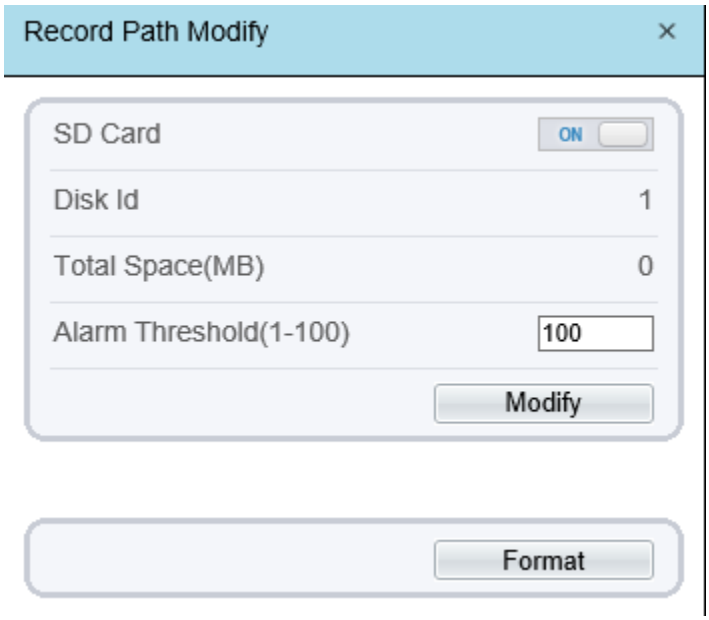

----End

8.2.1 Configure the SD Card


Procedure

Step 1 Choose Configuration > Device Record > Record Directory.

Step 2 Click **Modify**.

The **Record Path Modify** page is displayed, as shown in Figure 8-4.

Figure 8-4 SD card Record Path Modify page

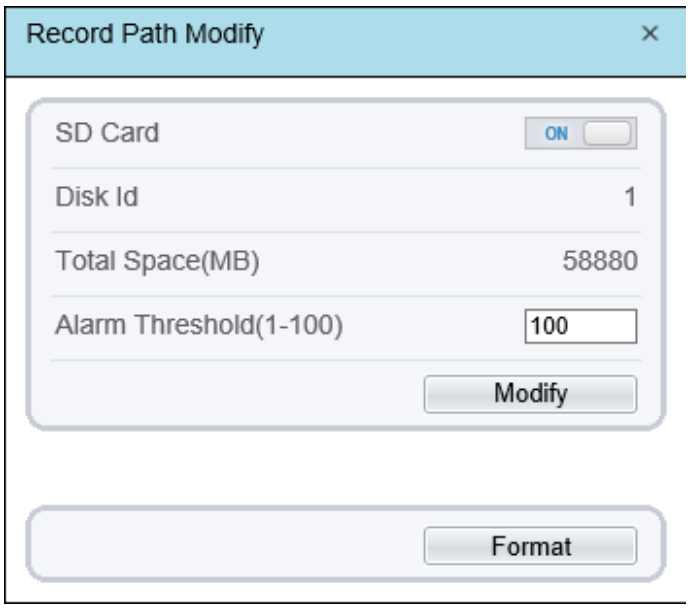

Step 3 Set the parameters according to Table 8-3.

Table 8-3 SD card recording parameters

Parameter	Description	Setting
SD Card	Enable SD card to enable record.	[Setting method] Click button to enable SD card.
Disk ID	ID of SD card.	N/A
Total Space(MB)	Total disk space read automatically.	[Setting method] The parameter cannot be set manually.
Alarm Threshold (1-100)	The camera will alarm when used Space achieves the alarm threshold.	[Setting method] Enter a value from 1-100.

Step 4 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

-----End


9 Configure the Privacy Mask Function

Procedure

Step 1 Choose Configuration > Privacy Masking.

The **Privacy Masking** page is displayed, as shown in Figure 9-1.

Figure 9-1 Privacy Masking page

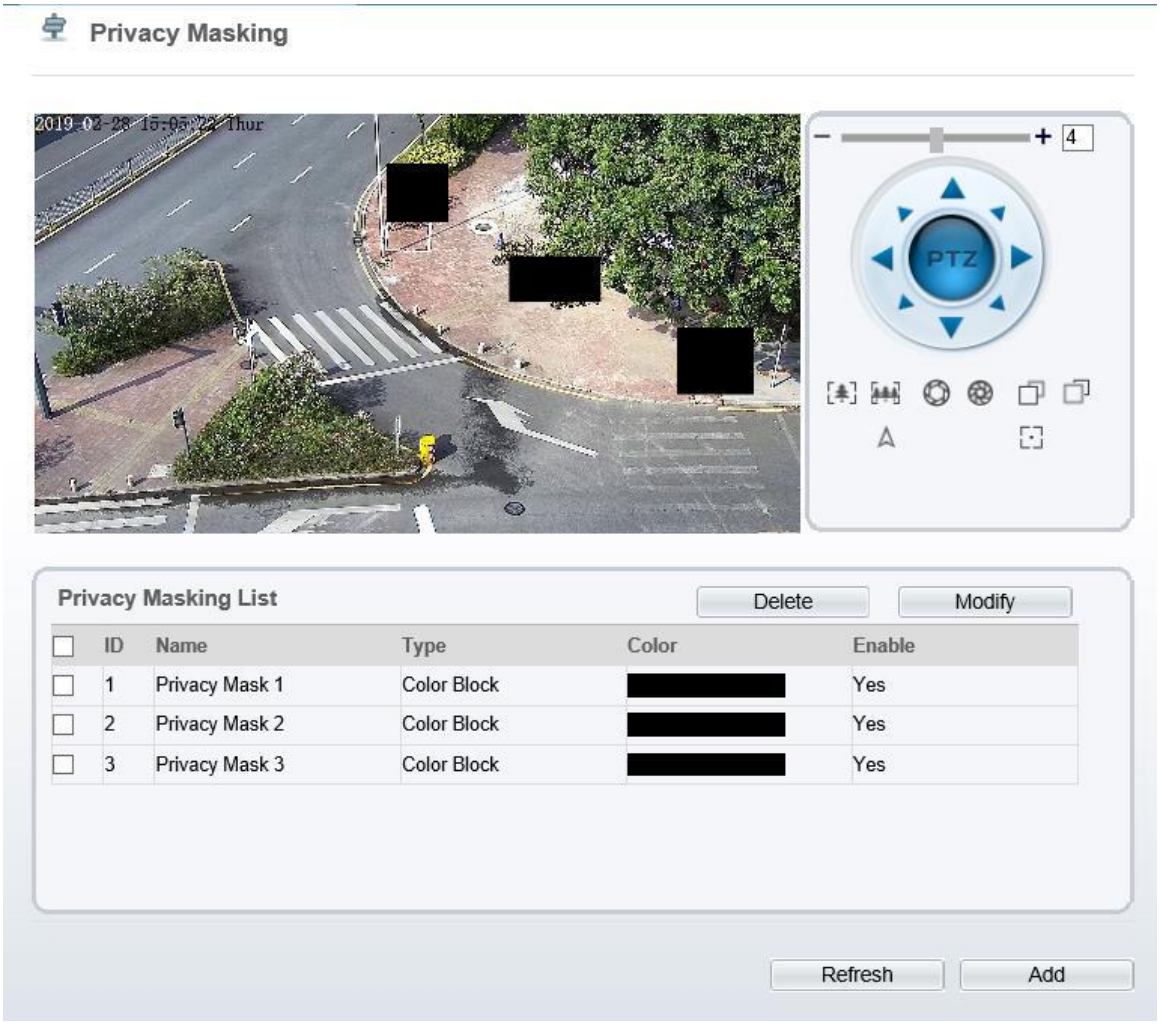

Step 2 Press and hold the left mouse button, and drag on the preview image to cover the part to be masked.

NOTE

- The maximum percentage of an image that can be masked depends on the device model. Read the tip displayed on the page.
- A maximum of four areas can be masked.
- Tick the ID of mask area and click Delete to delete the area. .

Step 3 Set the parameters according to Table 9-1.

Table 9-1 Privacy Masking parameters

Parameter	Description	Setting
ID	ID of Privacy Masking.	N/A
Name	Name of privacy Masking.	[Setting method] Click the name and enter a value manually. [Default value] Blank
Type	Type of privacy masking.	[Setting method] Select a value from the drop-down list box. [Default value] Color Block
Color	Color of privacy masking.	[Setting method] Select a value from the drop-down list box. [Default value] Black
Enable	Indicates whether to enable the privacy masking.	[Setting method] Select a value from the drop-down list box. [Default value] Yes
Delete	Delete a privacy masking.	[Setting method] 1. Select a privacy masking from the Privacy Masking List. 2. Click **Delete**, the privacy masking is deleted successfully
Modify	Modify a privacy masking.	[Setting method] 3. Select a privacy masking from the Privacy Masking List. 4. Click a parameter and modify it. 5. Click **Modify**, the privacy masking is modified successfully

Step 4 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

10 Configure the Network Service

10.1 802.1x

Preparation


802.1x authentication must be configured on the access port, which controls to access network resources for the connected user devices on the port.

Procedure

Step 1 Choose Configuration > Network Service > 802.1x.

The **802.1x** page is displayed, as shown in Figure 10-1.

Figure 10-1 802.1x page

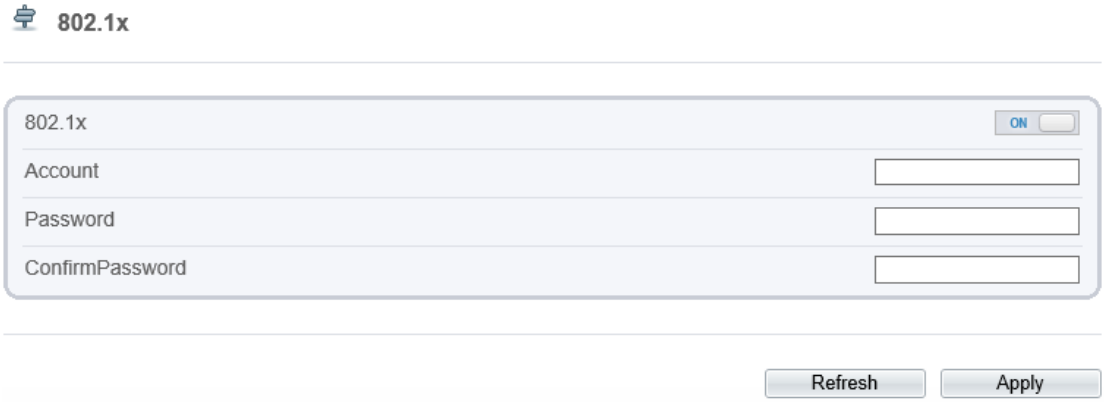

Step 2 Click the button on to enable **802.1x**.

Step 3 Enter the account name.

Step 4 Enter the password and confirm password..

Step 5 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

10.2 DDNS

Preparation


Connect the specified camera to the Internet, and obtain the user name and password for logging into the Dynamic Domain Name System (DDNS) server.

Procedure

Step 1 Choose Configuration > Network Service > DDNS.

The **DDNS** page is displayed, as shown in Figure 10-2.

Figure 10-2 DDNS page

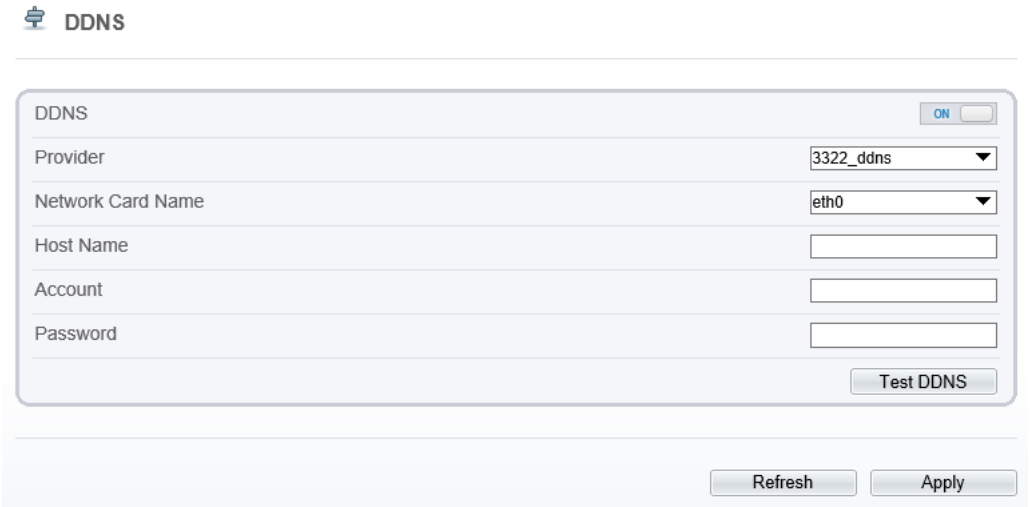

Step 2 Click the button on to enable **DDNS**.

Step 3 Set the parameters according to Table 10-1.

Table 10-1 DDNS parameters

Parameter	Description	Setting
DDNS	Indicates whether to enable the DDNS service.	[Setting method] Click the button on to enable DDNS. [Default value] OFF
Provider	DDNS service provider. Currently, only 3322 and dyndns are supported.	[Setting method] Select a value from the drop-down list box. [Default value] 3322 NOTE Set this parameter based on the site requirements.
Network Card Name	Name of network card	[Setting method] Select a value from the drop-down list box. [Default value] Eth0
Host Name	Host name is customized by a user.	[Setting method] Enter a value manually. [Default value] Blank

Parameter	Description	Setting
Accounts	User name for logging in to the DDNS server.	[Setting method] Enter a value manually. [Default value] Blank
Password	Password for logging in to the DDNS server.	[Setting method] Enter a value manually. [Default value] Blank

Step 4 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If other information is displayed, set the parameters correctly.

----End

10.3 PPPoE

Preparation

Obtain the PPPoE user name and password from the network carrier.

Description


If a PPPoE connection is used, you need to enter the user name and password on the **PPPoE** page. After you restart the device, the PPPoE settings take effect and the device obtains a public IP address.

Procedure

Step 1 Choose Configuration > Network Service > PPPoE.

The **PPPoE** page is displayed, as shown in Figure 10-3.

Figure 10-3 PPPoE page

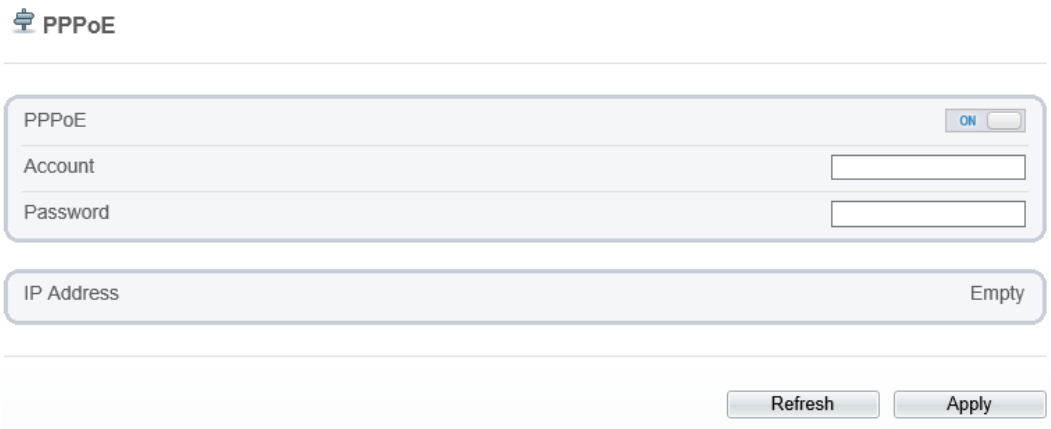

Step 2 Click the button on to enable **PPPoE**.

Step 3 Set the parameters according to Table 10-2.

Table 10-2 PPPoE parameters

Parameter	Description	Setting
PPPoE	Click to enable PPPoE dialing.	[Setting method] Click the button on. [Default value] OFF
Accounts	User name of PPPoE provided by the network carrier.	[Setting method] Enter a value manually.
Password	Password of PPPoE provided by the network carrier.	[Setting method] Enter a value manually.

Step 4 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If other information is displayed, set the parameters correctly.

----End

10.4 Port Mapping

Description


Port mapping helps establish a mapping relationship between the private network and the external network. Port mapping allows outside computers to access intranet devices so that the network works efficiently.

Procedure

Step 1 Choose **Configuration > Network Service > Port Mapping**.

The **Port Mapping** page is displayed, as shown in Figure 10-4.

Figure 10-4 Port Mapping page

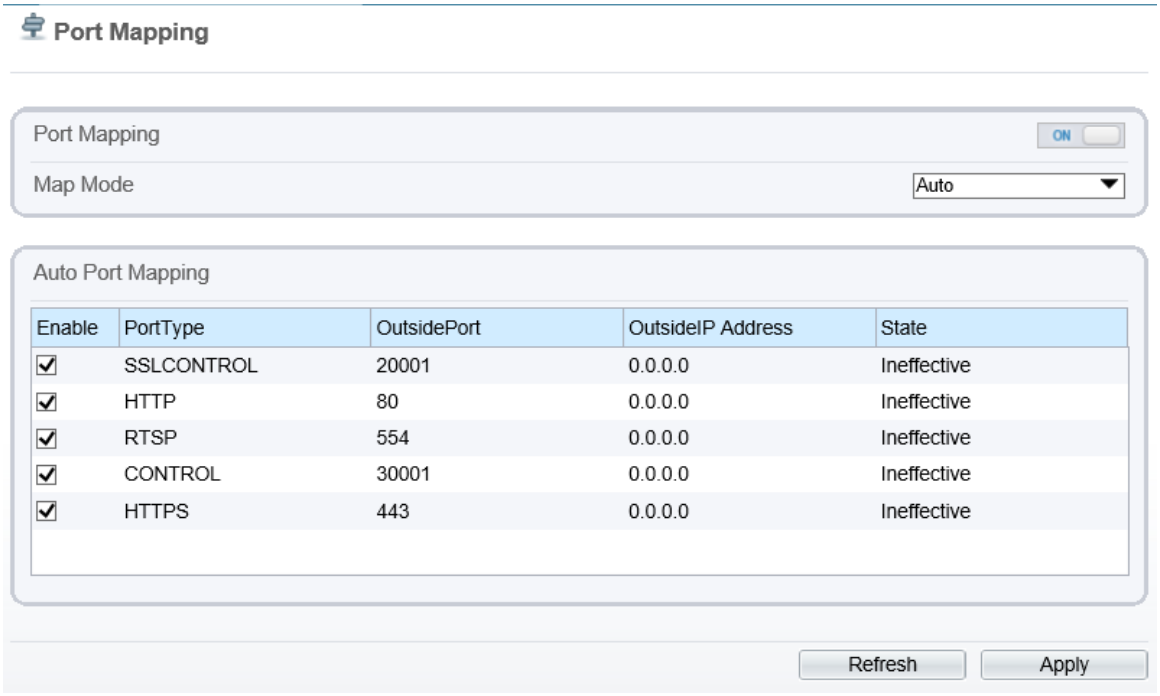

Step 2 Click the button on to enable **Port Mapping**.

Step 3 Set the parameters according to Table 10-3.

Table 10-3 Port mapping parameters

Parameter	Description	Setting
Port Mapping	Indicates whether to enable the Port Mapping service.	[Setting method] Click the button on. [Default value] OFF
Map Mode	Mode of port mapping, includes auto and manual.	[[Setting method] Select a value from the drop-down list box. [Default value] Auto
Port Type	Port Type includes: SSLCONTROL HTTP, RTSP, Control and HTTPS.	N/A
Outside Port	Port of outside network.	[Setting method] Enter a value manually in map mode.
Outside IP Address	IP address of outside network.	N/A
State	Mapping status	N/A

Step 4 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If other information is displayed, set the parameters correctly.

----End

10.5 SMTP

Description


If the Simple Mail Transfer Protocol (SMTP) function is enabled, the device automatically sends JPG images and alarm information to specified email addresses when an alarm is generated.

Procedure

Step 1 Choose Configuration > Network Service > SMTP.

The **SMTP** page is displayed, as shown in Figure 10-5.

Figure 10-5 SMTP page

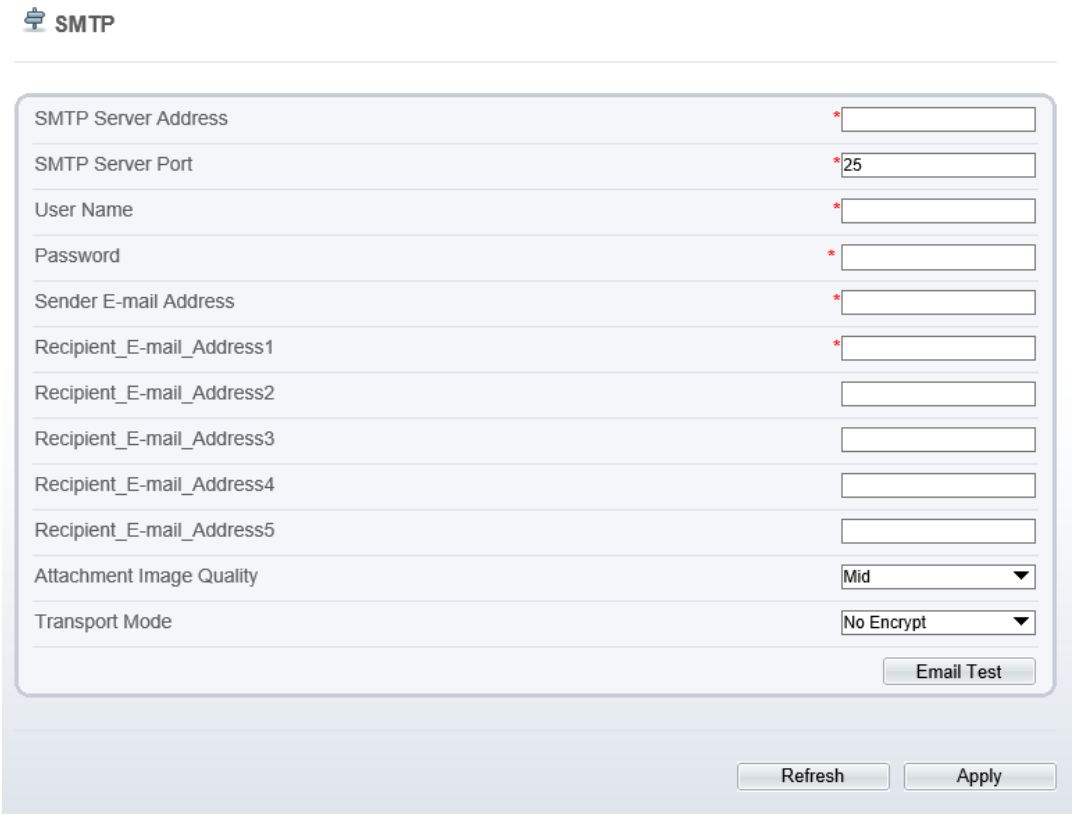

Step 2 Set the parameters according to Table 10-4.

NOTE

Parameters marked with * are mandatory.

Table 10-4 SMTP parameters

Parameter	Description	Setting
SMTP Server Address	IP address of the SMTP server.	[Setting method] Enter a value manually.

Parameter	Description	Setting
SMTP Server Port	Port number of the SMTP server.	[Setting method] Enter a value manually. [Default value] 25
User Name	User name of the mailbox for sending emails.	[Setting method] Enter a value manually.
Password	Password of the mailbox for sending emails.	[Setting method] Enter a value manually.
Sender E-mail Address	Mailbox for sending emails.	[Setting method] Enter a value manually.
Recipient_E-mail_Address 1	(Mandatory) Email address of recipient 1.	[Setting method] Enter a value manually.
Recipient_E-mail_Address 2	(Optional) Email address of recipient 2.	
Recipient_E-mail_Address3	(Optional) Email address of recipient 3.	
Recipient_E-mail_Address 4	(Optional) Email address of recipient 4.	
Recipient_E-mail_Address 5	(Optional) Email address of recipient 5.	
Attachment Image Quality	A higher-quality image means more storage space. Set this parameter based on the site requirement.	N/A
Transport Mode	Email encryption mode. Set this parameter based on the encryption modes supported by the SMTP server.	[Setting method] Select a value from the drop-down list box. [Default value] No Encrypted

Step 3 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If other information is displayed, set the parameters correctly.

----End

10.6 FTP

Description


If the File Transfer Protocol (FTP) button is enabled, the device automatically sends the snapped alarm JPG images to specified FTP server.

Procedure

Step 1 Choose Configuration > Network Service > FTP.

The **FTP** page is displayed, as shown in Figure 10-6.

Figure 10-6 FTP page

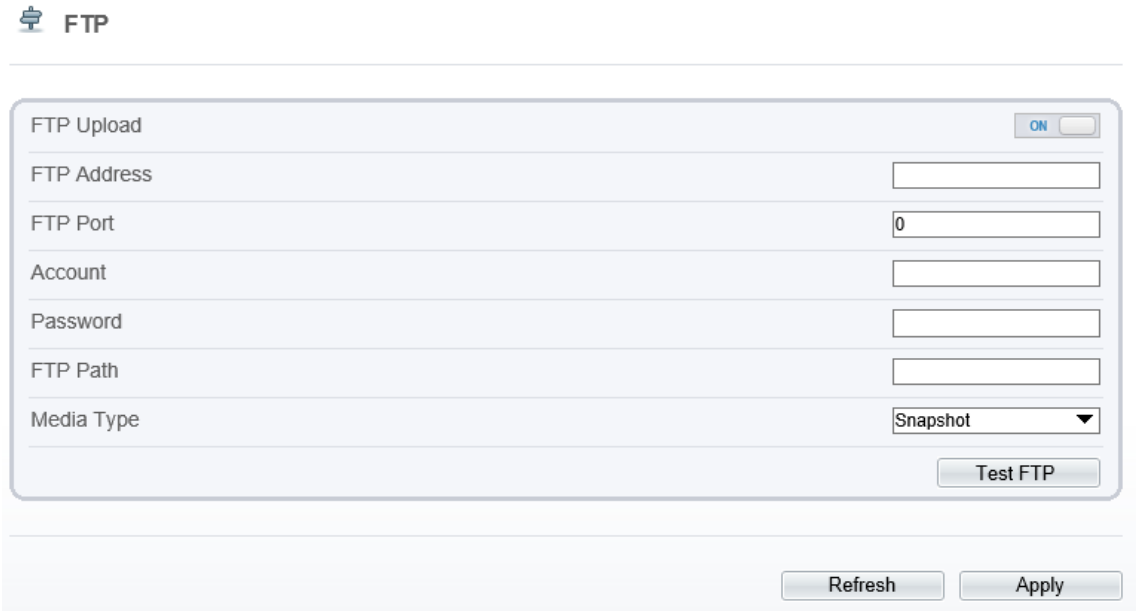

Step 2 Click the button on to enable **FTP**.

Step 3 Set the parameters according to Table 10-5.

Table 10-5 FTP parameters

Parameter	Description	Setting
FTP Upload	Indicates whether to enable the FTP service.	[Setting method] Click the button on. [Default value] OFF
FTP Address	IP address of FTP server.	[Setting method] Enter a value manually.
FTP Port	Port of FTP server.	[Setting method] N/A [Default value] 21
Account	FTP server account.	[Setting method] Enter a value manually.
Password	FTP server Password.	[Setting method] Enter a value manually.
FTP Path	FTP Path to save the JPG image.	[Setting method] Enter a value manually.

Parameter	Description	Setting
Media type	The media type of sending to FTP, snapshot or video clip.	[Setting method] Select a value from the drop-down list box. [Default value] Snapshot

Step 4 Click **Apply**.

- If the message "Apply success!" is displayed, and the system saves the settings.
- If other information is displayed, set the parameters correctly.

----End

10.7 IP Filter

Description


Set the IP address in specified network segment to allow access or prohibit access.

Procedure

Step 1 Choose Configuration > Network Service > IP Filter.

The **IP Filter** page is displayed, as shown in Figure 10-7.

Figure 10-7 IP Filter page

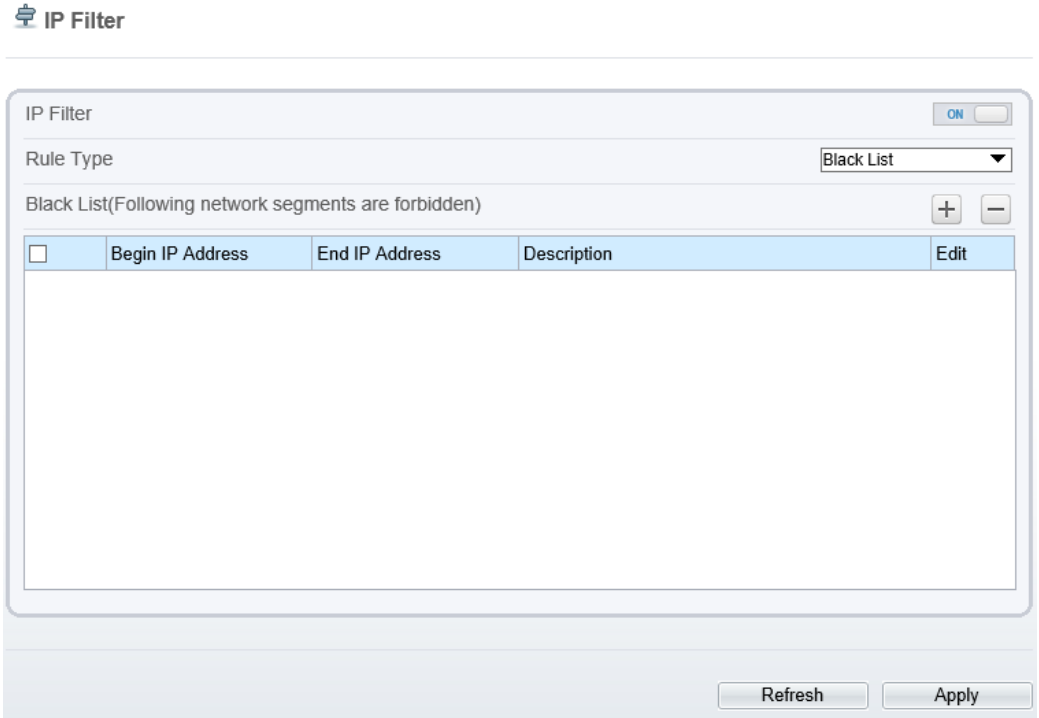


Step 2 Click the button on to enable **IP Filter**.

Step 3 Set the parameters according to Table 10-6

Table 10-6 IP Filter parameters

Parameter	Description	Setting
IP Filter	Indicates whether to enable the IP Filter.	[Setting method] Click the button on. [Default value] OFF
Rule Type	IP filter type, includes black list and white list.	[Setting method] Select a value from the drop-down list box. [Default value] Black List
Black List	Specified network segment should be excluded.	[Setting method] 6. Click + to enter the add black/white list page, as shown in Figure 10-8 7. Enter Begin IP Address. 8. Enter End IP Address. 9. Enter Descrtption. 10. Click OK, the black list added successfully.
White List	Allow specified network segment to access.	[Setting method] 1. Click + to enter the add black/white list page, as shown in Figure 10-8 2. Enter Begin IP Address. 3. Enter End IP Address. 4. Enter Descrtption. 5. Click OK, add the white list successfully.

Figure 10-8 Add IP Filter page

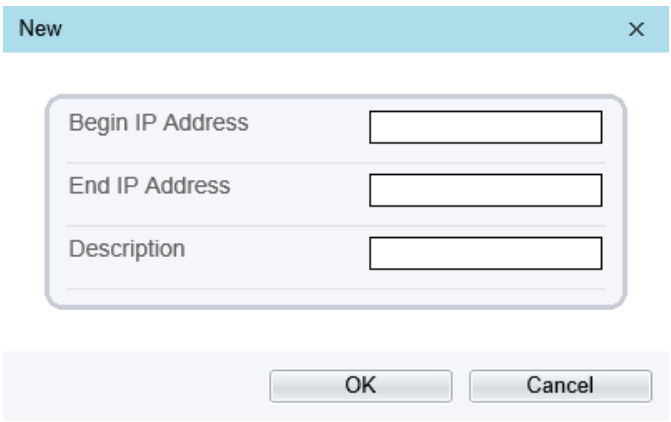

NOTE

Click to modify the parameters of setting black list or white.

Click  to delete the setting black list or white.

Step 4 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

10.8 CGI Alarm Service Center

Description


Device will push the alarm message by CGI with Start URL and End URL, and send to data to CGI Server by HTTP protocol. CGI alarm message is the head of User-Agent of HTTP. Use HTTP protocol get and send to CGI Server. When need to integrate the CGI alarm message, need to resolve the HTTP Head "User-Agent" to get the data of CGI alarm message.

Procedure

Step 1 Choose **Configuration > Network Service > CGI Alarm Service Center**.

The **CGI Alarm Service Center** page is displayed, as shown in Figure 10-9.

Figure 10-9 CGI Alarm Service Center page

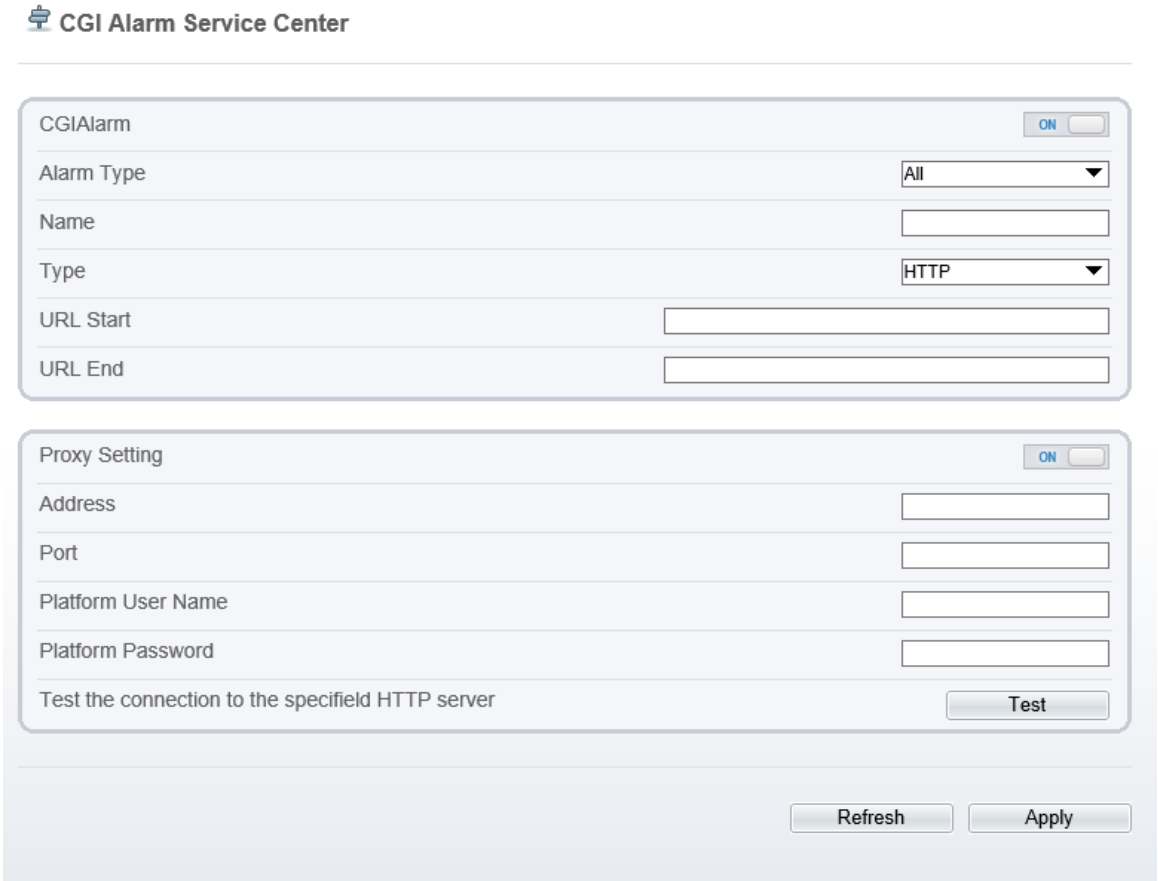

Step 2 Click the button on to enable **CGI Alarm**.

Step 3 Set the parameters according to Table 10-7.

Table 10-7 CGI Alarm Service Center parameters

Parameter	Description	Setting
CGI Alarm	Indicates whether to enable the CGI Alarm.	[Setting method] Click the button on. [Default value] OFF
Alarm Type	All alarm types can be chosen, user can choose one to alarm, or choose all.	[Setting method] Select a value from the drop-down list box. [Default value] All
Name	Name of CGI Alarm.	[Setting method] Enter a value manually.
Type	Type of CGI Alarm.	[Setting method] Select a value from the drop-down list box. [Default value] HTTP
URL Start	Push the alarm message by CGI with start URL	[Setting method] Enter a value manually. For example: http://192.168.35.74:80/MajorAlarmType&MinorAlarmType&SourceName&DeviceID&DeviceIP&AlarmTime&Description
URL End	Push the alarm message by CGI with end URL	[Setting method] Enter a value manually. For example: http://192.168.35.74:80/MajorAlarmType&MinorAlarmType&SourceName&DeviceID&DeviceIP&AlarmTime&Description
User Name	User name of device.	[Setting method] Enter a value manually.
Password	Password of device.	[Setting method] Enter a value manually.
Proxy Setting	Indicates whether to enable the Proxy. Forwarder server of CGI alarm to forward the CGI alarm.	[Setting method] Click the button on. [Default value] OFF
Address	IP address of Forwarder server.	[Setting method] Enter a value manually.
Port	Port of Forwarder server.	[Setting method] Enter a value manually.

Parameter	Description	Setting
Platform User Name	User name of forwarder server.	[Setting method] Enter a value manually.
Platform Password	Password of forwarder server.	[Setting method] Enter a value manually.
Test the connection to the specified HTTP server	Test if the device connects to the proxy successfully.	[Setting method] Click Test, if the device connects to the proxy successfully, the message “Test CGI alarm success” is displayed.

Step 4 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings. If the message is “Parameter is invalid”, you should check if the parameters are correct.

----End

10.9 SNMP

Description


Simple Network Management Protocol (SNMP) is an Internet Standard protocol, supports SNMP v1, SNMPv2c and SNMPv3 network protocol. Choose the proper SNMP protocol version and set the SNMP protocol parameter to collect and organize information about managed devices on IP networks.

Procedure

Step 1 Choose **Configuration > Network Service > SNMP**.

The **SNMP** page is displayed, as shown in Figure 10-10.

Figure 10-10 SNMP page

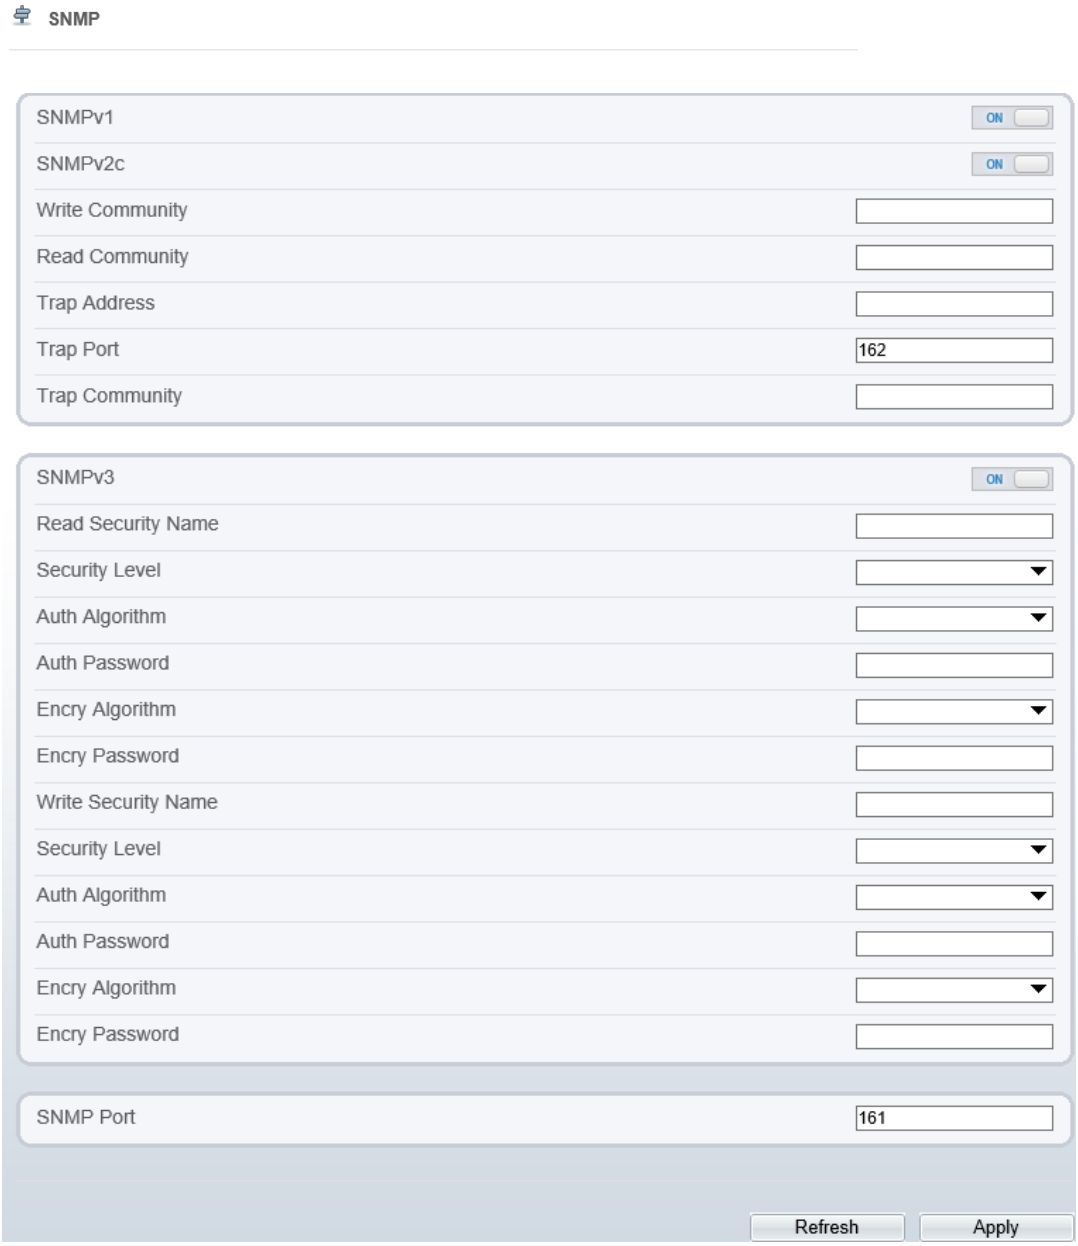

Step 2 Click the button on to enable **SNMPv1**, **SNMPv2C** and **SNMPv3**.

Set the parameters according to Table 10-8.

Table 10-8 SNMP parameters

Parameter	Description	Setting
SNMPv1 SNMPv2c	Version of SNMP. SNMPv1 and SNMPv2c use communities to establish trust between managers and agents. Agents support three community names, write community, read community and trap.	[Setting method] Click the button on. [Default value] OFF
Write Community	Name of write community. The write community only can modify data.	[Setting method] Enter a value manually.
Read Community	Name of read community. The write community only can read data.	
Trap Address	IP address of the trap.	
Trap Port	Management port of accepting message from trap.	
Trap Community	community string of trap. The trap community string allows the manager to receive asynchronous information from the agent.	
SNMPv3	Version of SNMP. SNMPv3 uses community strings, but allows for secure authentication and communication between SNMP manager and agent.	[Setting method] Click the button on. [Default value] OFF
Read Security Name	Name of read security.	[Setting method] Enter a value manually.
Write Security Name	Name of write security.	
Security Level	Security Level between SNMP manager and agent, includes three levels: No auth: No authentication and no encryption Auth: Authentication but no encryption Priv: Authentication and encryption	[Setting method] Select a value from the drop-down list box. [Default value] Blank
Auth Algorithm	Authentication Algorithm, includes MD5and SHA.	[Setting method] Select a value from the drop-down list box. [Default value] Blank
Auth Password	Authentication password.	[Setting method] Enter a value manually.

Parameter	Description	Setting
Encrypt Algorithm	Encryption Algorithm, includes DES and AES.	[Setting method] Select a value from the drop-down list box. [Default value] Blank
Encrypt Password	Encryption password.	[Setting method] Enter a value manually.
SNMP Port	Port of SNMP.	[Setting method] Enter a value manually. [Default value] 161

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

10.10 QOS

Description


If the device is connected to a router or switch with a QOS function, and the priority rule of the corresponding mark is configured on the network device, the network device will preferentially pass the data packet of the corresponding mark.

Procedure

Step 1 Choose **Configuration > Network Service > QOS**.

The **QOS** page is displayed, as shown in Figure 10-11.

Figure 10-11 QOS page

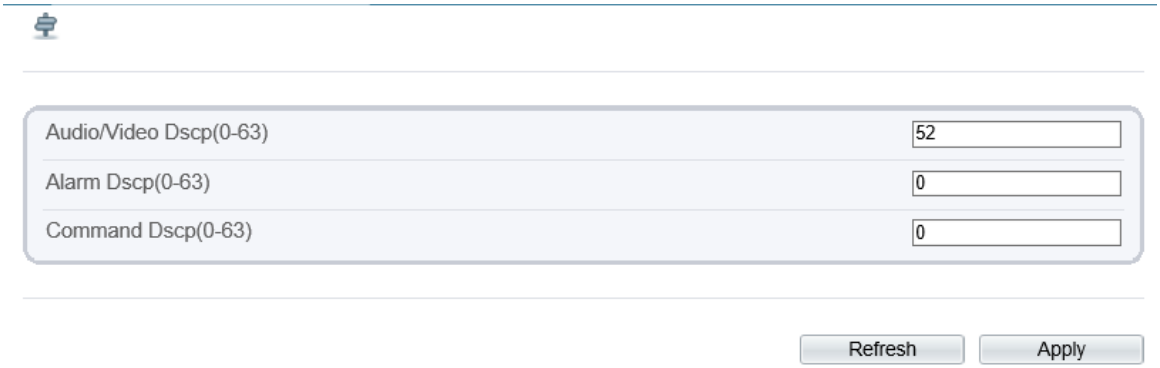

Step 2 Input the value range from 0 to 63(audio/video dscp, alarm dscp and command dscp).

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

10.11 Platform Access

Description


If the device and platform system are not at the same local network, you can connect device and platform system to the external server. You should build a server for platform in advance, platform's remote IP/Port and IP camera are mapping port to external network.

Procedure


Step 1 Choose **Configuration > Network Service > Platform Access**.

The **Platform Access** page is displayed, as shown in Figure 10-12

Figure 10-12 Platform Access page

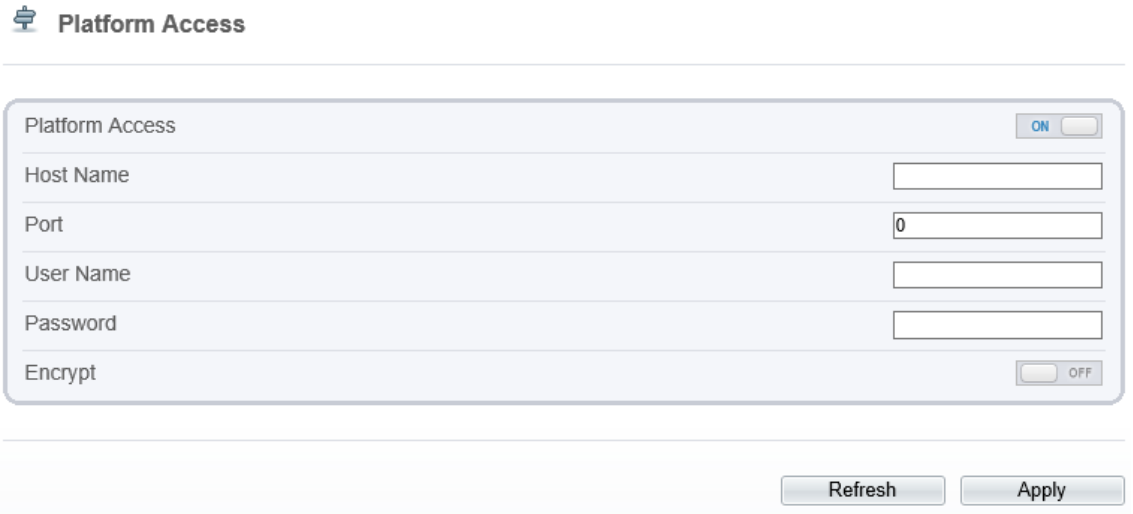


Step 2 Input the parameters. The host name and port are same as the platform, as shown in figure. It is the IP or domain of external network server. The user name and password are same as platform login.

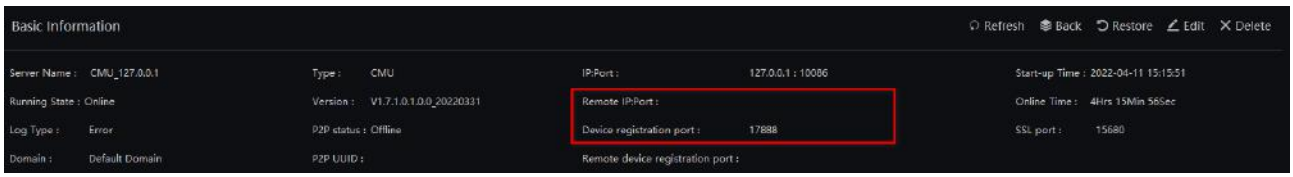


Step 3 Add the IPC to platform, you should input the following information

1: IP/ID/Domain name is device ID of IPC.

2: The connection mode should be chosen **Device active registration**.

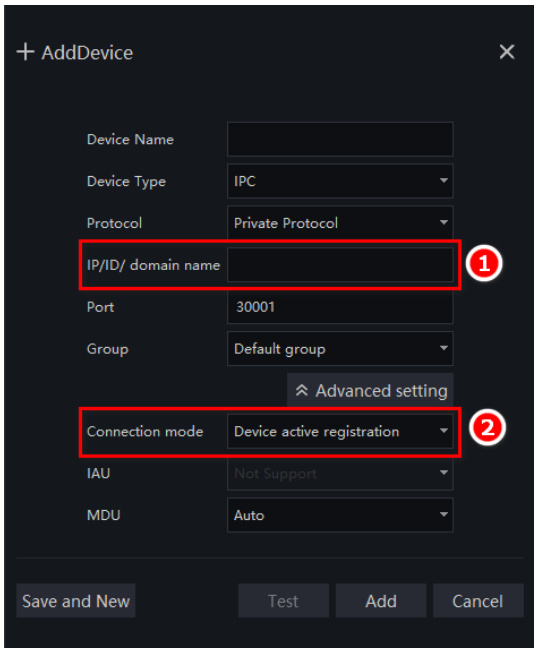

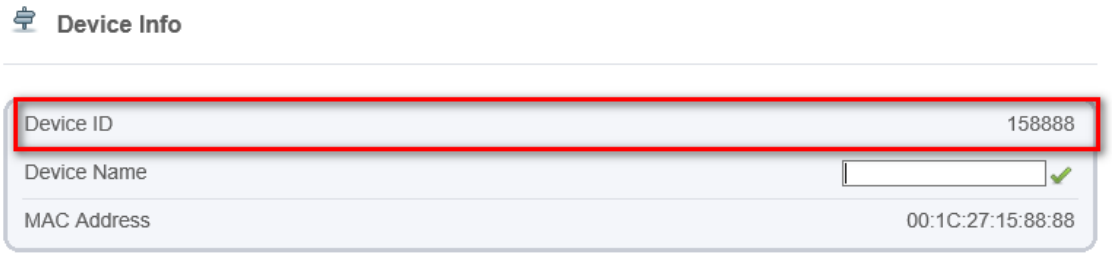

Step 4 If you want to encrypt the access, you can enable the Encrypt.

Step 5 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

----End

11 Privilege Manager

11.1 Configure a User

Description

You can add, modify, and delete a user in privilege manager page.

Procedure

Step 1 Choose Configuration > Privilege Manager > User.

The **User** page is displayed, as shown in Figure 11-1. Table 11-1 describes the parameters.

Figure 11-1 User page

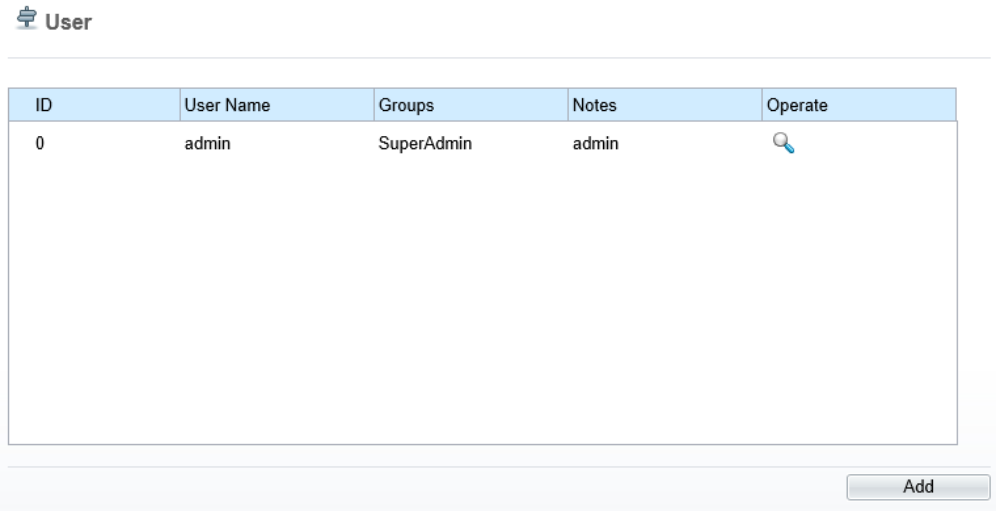


Table 11-1 User parameters

Parameter	Description	Setting
ID	User ID	N/A
User Name	User name for logging in to the camera.	[Setting method] Select a value from the drop-down list box.

Parameter	Description	Setting
Groups	Permission group where a user belongs. The default permission groups are **Super Admin**, **Administrators**, **Operator**, and **Media user**. Their permissions are described as follows: • Super Admin: Includes all privileges. • Administrators: Live Video, Video Control, PTZ control, Audio, Playback, Backup, Record Policy, Disk Configure, Privilege Manage, Parameter Configure, System Maintenance and Log, • Operator: System Maintenance, Parameter Configure, playback, Live Video and Video Control. • Media user: Live Video	[Setting method] Click **Add**, then select a value from the drop-down list box.
Notes	Notes of the User.	[Setting method] Click **Add**, then enter a value manually.
Operate	The operation of the user, includes view user, modify user and delete user. NOTE Super Admin can be viewed only.	[Setting method] Click the icon as required.

Step 2 Add, modify, or delete a user as required.


Table 11-2 are specific operations.

Table 11-2 Operation description

Function	Procedure	Description
Add	1. Click **Add**. The **Add User** page is displayed, as shown in Figure 11-2. 2. Enter a user name, password, confirm password. 3. Select a group from the drop-down list box. 4. Enter the notes (Optional). 5. Check the privilege. 6. Click **OK**. The user is added successfully.	Add an administrator or a common user as shown in Figure 11-2.

Function	Procedure	Description
Modify	1. Click . The **Modify User** page is displayed. 2. Modify the user name, password, group or privilege. 3. Click **OK**. The user is modified successfully. The **User** page is displayed.	Modify the user name, password, group or privilege.
Delete	Select the user from the User list. Click , the message "Confirm to delete?" is displayed, click **OK**, then the group is deleted successfully.	Delete a user.

Figure 11-2 Add user page

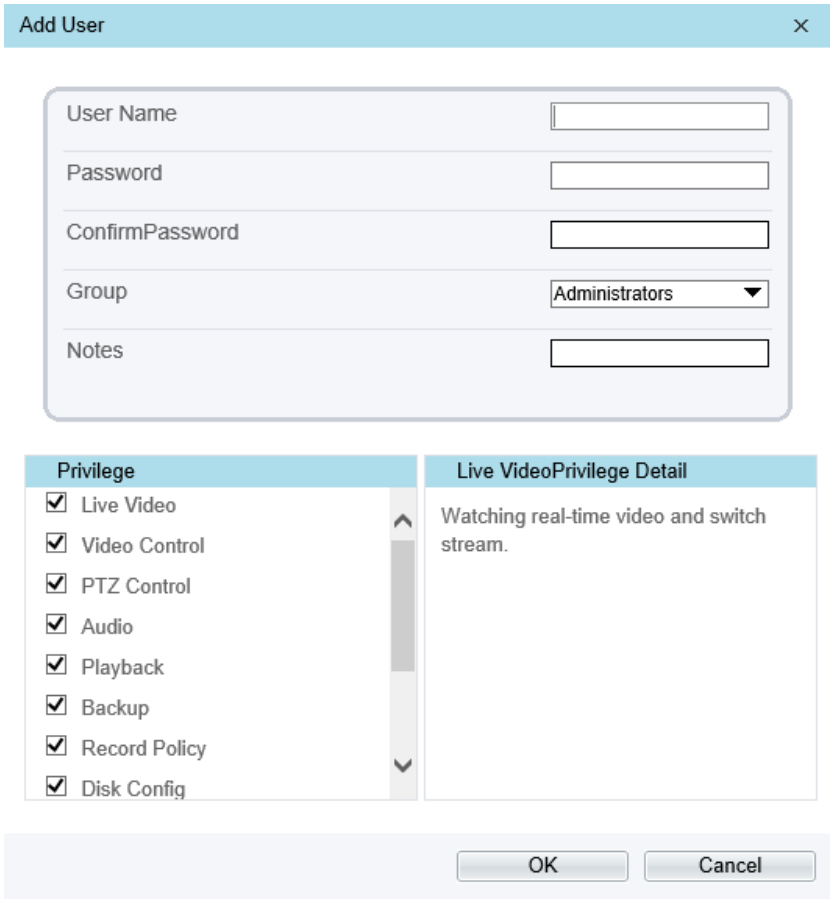

NOTE

Click the privilege to view the detailed description of function.

----End

12 Configure Protocol Parameters

12.1 Protocol Information

Description

You can view the existing protocol name and version number of the current device on the **Configuration** > **Protocol** > **Protocol Info** page, as shown in Figure 12-1. Table 12-1 describes the protocol-related parameters.

Figure 12-1 Protocol Info page



Table 12-1 Protocol-related parameters

Parameter	Description
Protocol Name	Type of the access protocol.
Protocol Version	Version number of the access protocol.
Protocol Software Version	Software version number of the access protocol.
RTSP Rule	URL rule of Real Time Streaming Protocol.
RTSP Example	URL example of Real Time Streaming Protocol.
Onvif UUID	Universally Unique Identifier.

12.2 Security Authentication

Description

When an ONVIF-compliant device connects to the platform, you must authenticate the user name and password to ensure the connection security.

Procedure

Step 1 Choose Configuration > Protocol > Security.

The **Security** page is displayed as shown in Figure 12-2. Table 12-2 describes the parameters on the **Security** page.

Figure 12-2 Security page



Table 12-2 Parameter description

Parameter	Description	Setting
User Verification	When you select the **User Verification** check box, the user name and password must be the same as those for logging in to the device web page. NOTE The default user name is **admin**, and the default password is **admin**.	[Setting method] Click the button on to enable **User Verification**.

Step 2 Click **Apply**.

A dialog box is displayed, indicating the parameter configuration success. To make the configuration take effect, click **Confirm** to restart the device.

----End

12.3 CMS Configuration

Description

You can view the existing protocol name and version number of the current device on the **Configuration** > **Protocol** >**CMS Configuration** page, as shown in Figure 12-3. Table 12-3 describes the protocol-related parameters.

Figure 12-3 CMS Configuration page

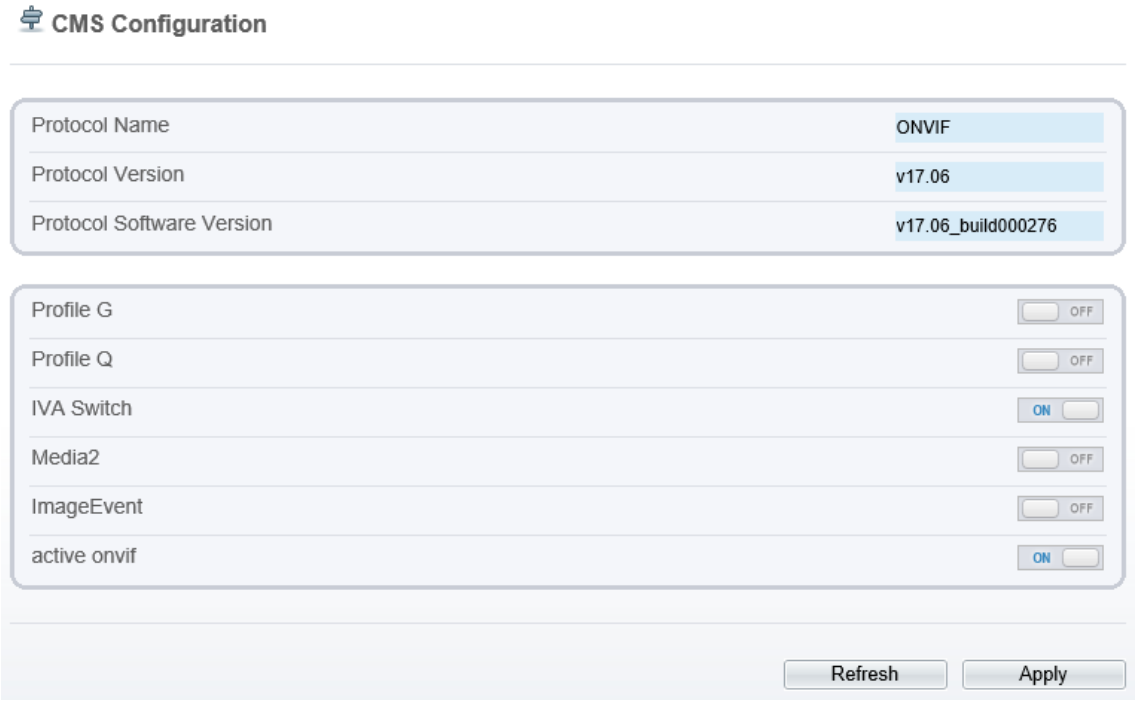


Table 12-3 Protocol-related parameters

Parameter	Description
Protocol Name	Type of the access protocol.
Protocol Version	Version number of the access protocol.
Protocol Software Version	Software version number of the access protocol.
Profile G	Enable ONVFI Profile G
IVA Switch	Enable IVA Switch
Media 2	Enable Media 2
Image Event	Enable image event
Active onvif	Enable active onvif

12.4 Multicast Parameters

Description

You can set multicast IP, video port, audio port and source port in multicast parameter page.

Procedure

Step 1 Choose **Configuration > Protocol > Multicast Param**.

The **Multicast Param** page is displayed as shown in Figure 12-4. Table 12-4 describes the parameters on the **Multicast Param** page.

Figure 12-4 Multicast Param page

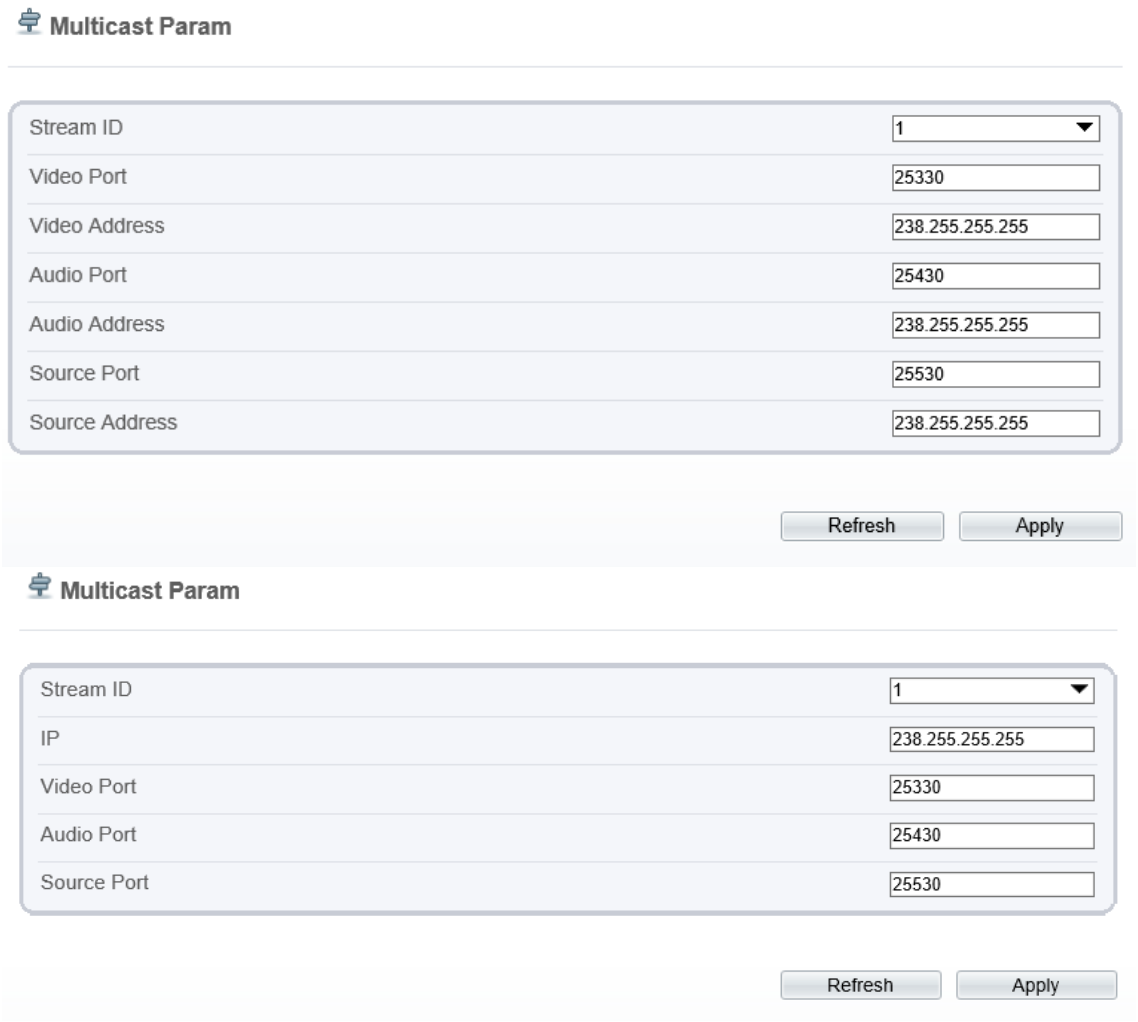


Table 12-4 Parameter description

Parameter	Description	Setting
Stream ID	ID of stream.	[Setting method] Select a value from the drop-list box. [Default value] 1
IP	IP address that receive multicast data.	[Setting method] Enter a value manually. [Default value] 238.255.255.255
Video Port	Port that receive video data.	[Setting method] Enter a value manually. [Default value] 25330

Parameter	Description	Setting
Audio Port	Port that receive audio data.	[Setting method] Enter a value manually. [Default value] 25430
Source Port	Port that receive source data.	[Setting method] Enter a value manually. [Default value] 25530

Step 2 Click **Apply**.

It shows that parameters are set successfully and take effect after restarting., the system will save the settings.

----End

13 Query Device Logs

13.1 Query Operation Logs

Description


Operation logs record user operations and scheduled task commands during the running of the device. Operation logs can be classified into the following types: permission management, system maintenance, device configuration, recording operation, video control, and real-time video.

Procedure

Step 1 Choose Configuration > Device Log > Operation Log.

The **Operation Log** page is displayed, as shown in Figure 13-1.

Figure 13-1 Operation Log page

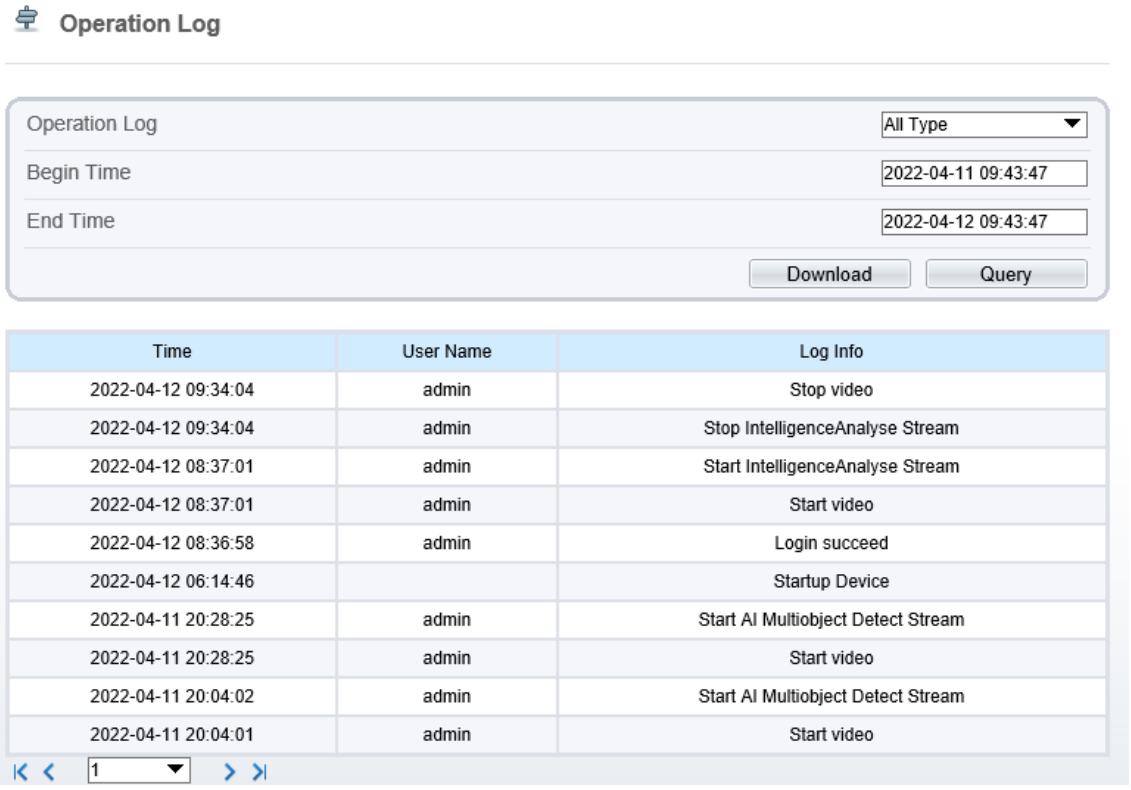

Step 2 Set the search criteria.

1. Select the type of operation logs to be queried from the **System Log** drop-down list box.
2. Click the **Begin Time** and **End Time** text boxes respectively.

   A time setting control is displayed.
3. Set the start time and end time as required.

4. Enter the corresponding user name that is registered with the device from the **User Name** drop-down list box.

Step 3 Click **Query**.

The operation logs related to the specified user are displayed.

Step 4 Download the operation logs.

1. Set the start time, end time and log type.
2. Click **Download** on the right of the page.

   The log link and the message "Please download log by ’save as ‘in the right key" are displayed.
3. Right-click the link and save the logs.

NOTE

An operation log is named as **Operation Log** by default and in the following format:

Operation time user(*User name*) *Operation information*

For example:

2012-06-20 13:40:39 user() Start Up Device

2012-06-20 13:42:46 user(admin) Configure Device Name

2012-06-20 13:43:16 user(admin) Configure Alarm In

----End

13.2 Query Alarm Logs

Description


An alarm log records information about an alarm generated on a device, including the security, disk, and recording alarms.

Procedure

Step 1 Choose Configuration > Device Log > Alarm Log.

The **Alarm Log** page is displayed, as shown in Figure 13-2.

Figure 13-2 Alarm Log page

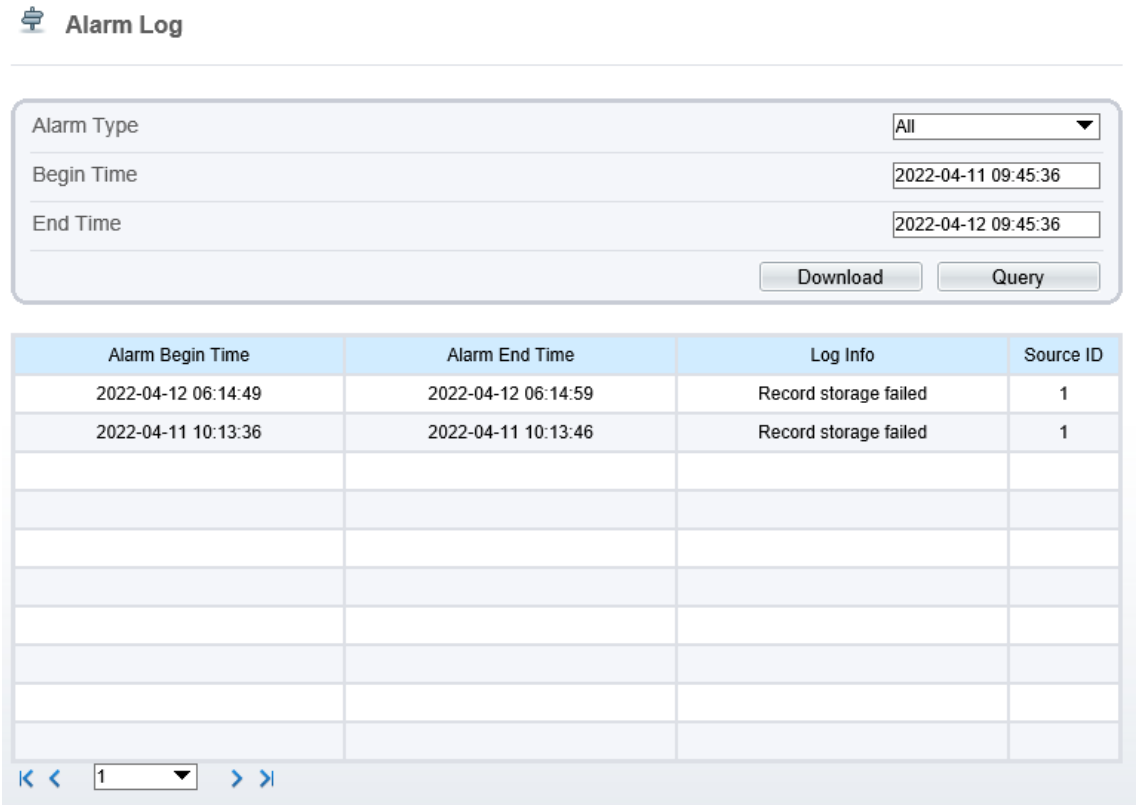

Step 2 Set the search criteria.

1. Click the **Begin Time** and **End Time** text boxes respectively.
   A time setting control is displayed.
2. Set the start time and end time as required.
3. Select the type of the alarm logs to be queried from the **Alarm Type** drop-down list box.

Step 3 Click **Query**.

The alarm logs of the specified type are displayed.

Step 4 Download the alarm logs.

1. Set the start time and end time.
2. Select a log type.
3. Click **Download** on the right of the page.
   The log link and the message "Please download log by ’save as ‘in the right key" are displayed.
4. Right-click the link and save the logs.

NOTE

An alarm log is named as **Alarm Info** by default and in the following format:

Alarm start time -> Alarm end time Alarm information Source ID

For example:

2012-03-17 16:31:17 -> 2012-03-17 16:32:29 occur motion detect alarm Source Id(1:1)

2012-03-17 16:35:31 -> 2012-03-17 16:35:41 occur motion detect alarm Source Id(1:1)

----End

13.3 Collect All Logs

Description


You can collect logs about a device, which help you analyze and solve possible problems occurring on the device. The logs include overview information, key parameters, operation logs, alarm logs, upgrade logs, and debugging logs.

Procedure

Step 1 Choose Configuration > Device Log > Collect all Log.

The **Collect all log** page is displayed, as shown in Figure 13-3.

Figure 13-3 Collect Log page

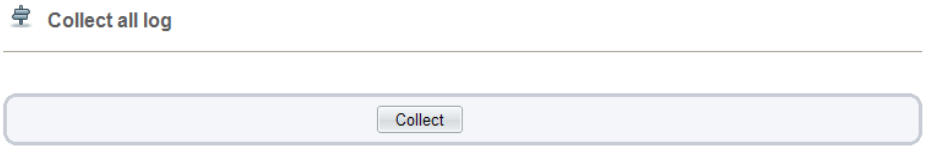

Step 2 Collect logs with one click.

1. Click **Collect**, the download page is displayed.
2. Select the path to save the logs.

----End

14 Maintain the Device

14.1 Restart a Device

Description

Restart a device including but not limited to the following situations:


- The device parameters are set incorrectly, and the device cannot work properly.
- A user needs to reset device parameters and make it to take effect.
- A device needs to be restarted remotely.

Procedure

Step 1 Choose Configuration > Maintenance.

The **Camera Maintenance** page is as shown in Figure 14-1.

Figure 14-1 Camera Restart page

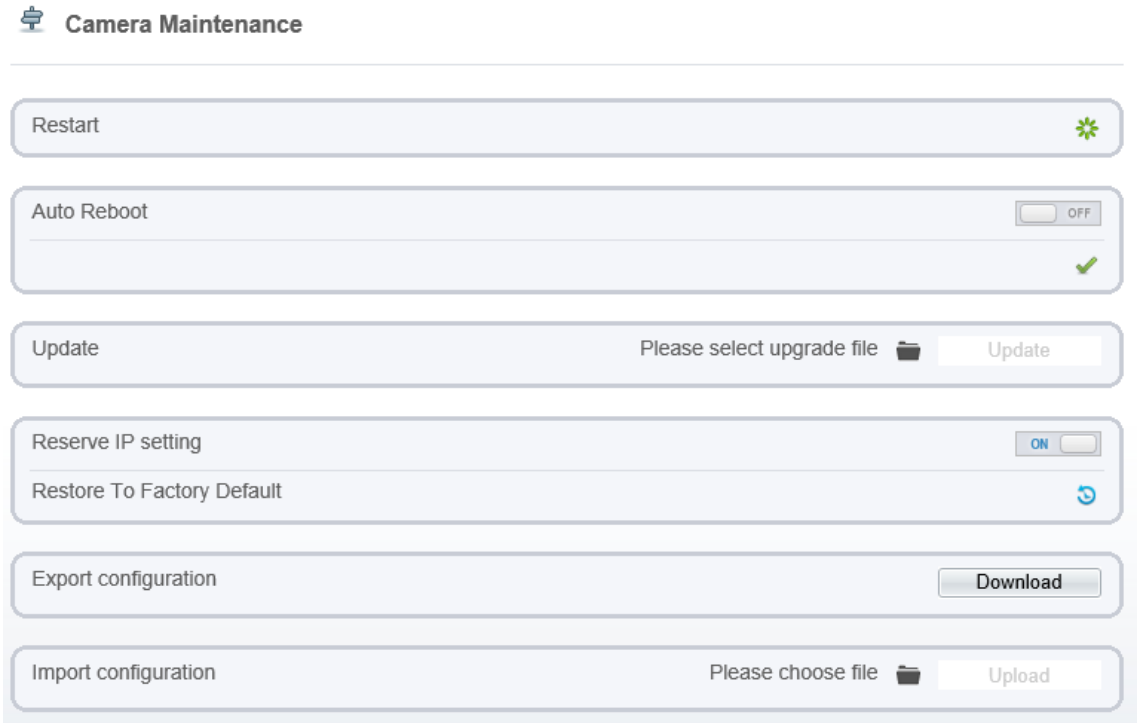

Step 2 Click .

The message "Are you sure to restart?" is displayed.

Step 3 Click **OK**.

The device is restarted successfully five minutes later.

----End

14.2 Auto Reboot


Step 1 Choose Configuration > Maintenance.

The **Camera Maintenance** page is displayed, as shown in Figure 14-1.

Step 2 Enable the auto reboot, choose the reboot interval from drop-down list.

There are three option, every day/every week/every month.

Figure 14-2 Camera auto reboot

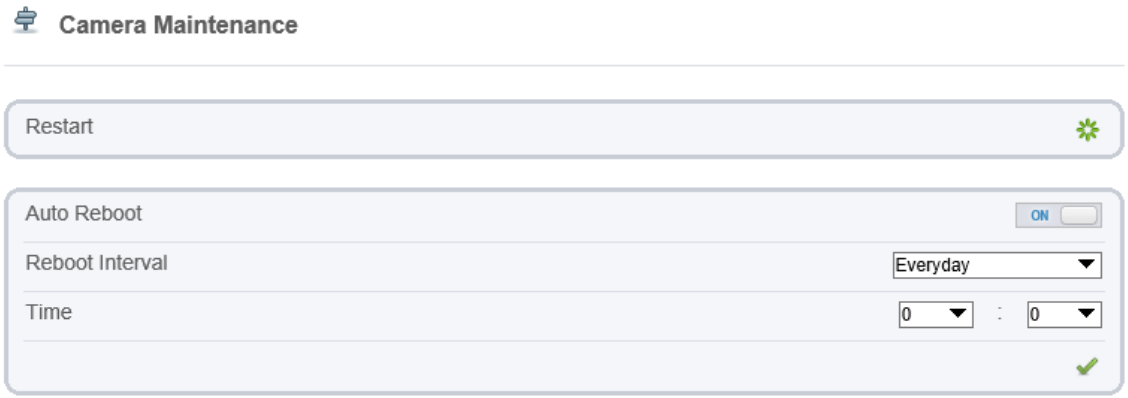

Step 3 Click **OK**.

The device is restarted successfully five minutes later.

----End

14.3 Update the Software Package

Description

You can update the software package from web.

Procedure

Step 1 Choose Configuration > Maintenance.

The **Device Maintenance** page is displayed.

Step 2 Click  to select the upgrade file.

Step 3 Click **Update**.

- If the message "Upgrade success! The device is rebooting, please login later!" is displayed, the program updated successfully and the device is rebooted.
- If other information is displayed, select the upgrade package correctly.

CAUTION

Don't lose power during the upgrade，if the power off, the camera maybe malfunction.

----End

14.4 Restore Device to Factory Settings

Description

You can restore a device to factory settings including but not limited to the following situations:

- The device parameters are set incorrectly, and the device cannot work properly.
- A user needs to reset device parameters.
- All parameters must be restored to the factory settings.

CAUTION

After you clicking , all parameters (you can choose whether to reserve the IP address) will be restored to the factory settings. Use this function carefully.

Procedure

Step 1 Choose Maintenance.

The **Device Maintenance** page is displayed.

Step 2 Click .

The message "Are you sure to restore?" is displayed.

Step 3 Click **OK**.

The device is restored to the factory settings.

----End

14.5 Export / Inport Configuration

Description

You can export configuration to local hard driver, when you configurate the same model cameras or the current camera, import the configuration file (config.bin) directly

Procedure

Step 1 Choose Maintenance.

The **Device Maintenance** page is displayed.


Step 2 Click **Download** to download the configuration file.

Save the file to local hard driver follow the prompts.



Step 3 Import configuration: choose the file on local hard driver, click **Upload** to upload file.

The tip will show after the configuration file uploading finish.

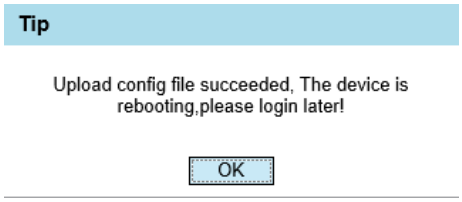

Step 4 Click OK to finish.

----End

15 Local Configuration

Description


You can set folder to save the snapshots and records to local. This function only can be used in IE browser.

Procedure

Step 1 Choose **Configuration > Local Config**.

The **Local Config** page is displayed, as shown in Figure 15-1.

Figure 15-1 Local Config page

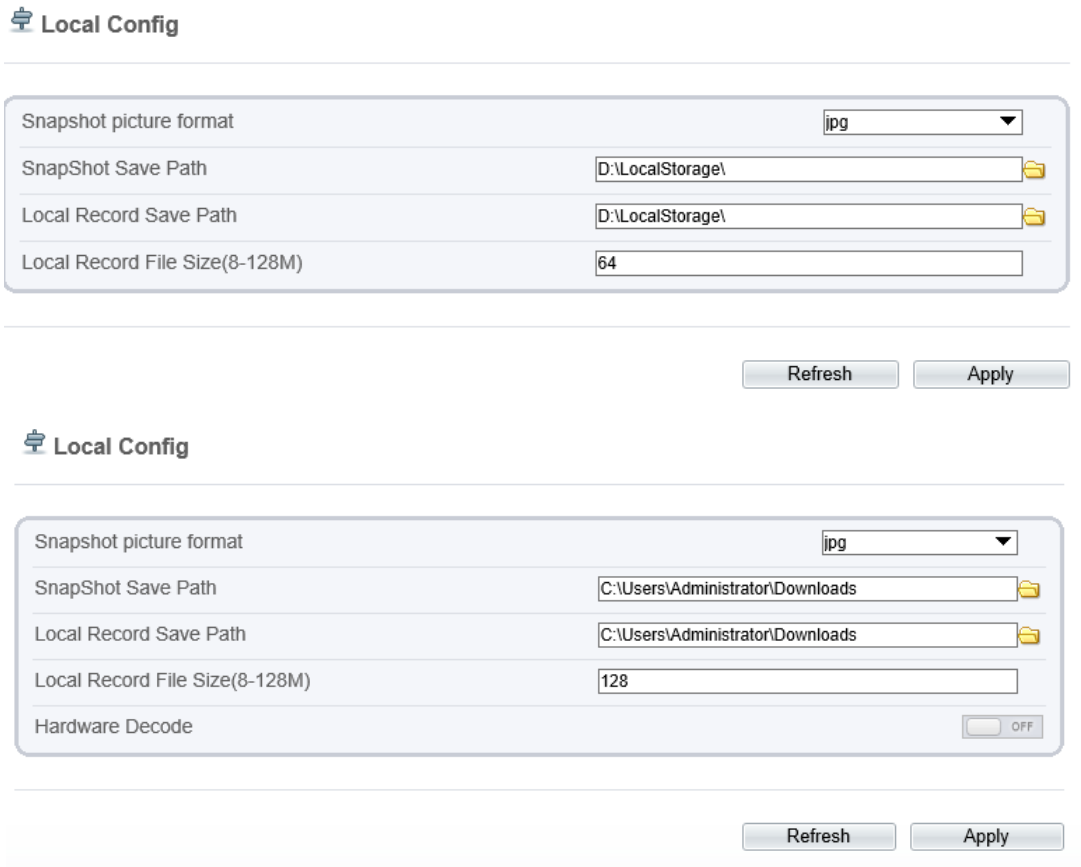

Step 2 Select picture format from the drop-down box.

Step 3 Set snapshot save path.

Step 4 Set local record save path

Step 5 Set local record file size(8-128 M), the default value is 64. Or enable the Hardware Decode.

Step 6 The message "Apply success!" is displayed, and the system saves the settings.

----End

16 Troubleshooting

Table 16-1 describes the common faults and solutions.

Table 16-1 Common faults and solutions

Common Fault	Possible Cause	Solution
When you enter the device IP address in the address box of Internet Explorer and press **Enter**, the message "There is a problem with this website's security certificate." is displayed.	The certificate is not installed.	Click **Continue to this website (not recommended)**.
The web management system cannot be accessed.	The network is disconnected.	• Connect the PC directly to the camera, and verify that the web management system can be accessed. • Run the **ping** command to verify that the camera is reachable.
	The IP address is used by another device.	Connect the PC directly to the camera and configure the IP address of the camera.
	The IP addresses of the PC and IP camera are on different networks.	Check the IP address, subnet mask, and gateway settings on the IP camera, and change the settings as required.
The PTZ or dome cannot be controlled.	The protocol, baud rate, or address is incorrect.	Change the protocol, baud rate, and address in the web management system to those used by the PTZ or dome.
	The signal cable is not properly connected.	Check the signal strength and connect the signal cable properly.
After the IP camera is upgraded, the web management system cannot be accessed.	The browser cache is not deleted.	To delete the browser cache, proceed as follows: (Internet Explorer 8 is used as an example.) 1. Open Internet Explorer. 2. Choose **Tools** > **Internet Options > Normal**. 3. Click **Delete**. The **Delete Browsing History** dialog box is displayed. 4. Select all check boxes. 5. Click **Delete**. Login to the web management system again.
The IP camera cannot be upgraded.	• The network is disconnected. • The network settings are incorrect.	• Confirm that the upgrade network is connected. • Check the network settings.

Common Fault	Possible Cause	Solution
	The upgrade package is incorrect.	Obtain the correct upgrade package and upgrade the IP camera again.

A Acronyms and Abbreviations

A	
ADSL	Asymmetric Digital Subscriber Line
C	
CBR	Constant Bit Rate
CGI	Common Gateway Interface
CMS	Central Management System
D	
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name Server
DDNS	Dynamic Domain Name Server
F	
FTP	File Transfer Protocol
G	
GAMA	Graphics Assisted Management Application
H	
HTTP	Hyper Text Transfer Protocol
HTTPS	Hypertext Transfer Protocol Secure
I	
ID	Identity
ISO	International Standard Organization
IP	Internet Protocol
IPC	Internet Protocol Camera
L	
LPS	Limited Power Source
M	
MJPEG	Motion Joint Photographic Experts Group
MAC	Media Access Control
MTU	Media Transmission Unit
N	
NAS	Network Attached Storage
NTP	Network Time Protocol
NTSC	National Television Standards Committee

O

OSD	On Screen Display

P

PAL	Phase Alteration Line
PoE	Power over Ethernet
PPPoE	Point-to-Point Protocol over Ethernet
PTZ	Pan/Tilt/Zoom

R

ROI	Region of Interest
RSTP	Rapid Spanning Tree Protocol

S

SMTP	Simple Mail Transfer Protocol
SSL	Secure Sockets Layer

V

VBR	Variable Bit Rate